

[Manuals.plus](#) /

› [MCombo](#) /

› MCombo HTS401 Power Recliner Chair User Manual

MCombo HTS401

MCombo HTS401 Power Recliner Chair User Manual

Model: HTS401

1. INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your MCombo HTS401 Power Recliner Chair. Please read this manual thoroughly before use to ensure proper function and safety. Keep this manual for future reference.



Image 1.1: MCombo HTS401 Power Recliner Chair (Blue Faux Leather)

2. SAFETY INFORMATION

Observe the following safety guidelines to prevent injury or damage to the product:

- Do not exceed the maximum weight capacity of **350 lbs.**
- Ensure the chair is stable and fully assembled before use.
- Keep children and pets away from the chair when it is in operation to avoid entanglement with moving parts.
- Avoid placing hands or feet near the reclining mechanism during adjustment.
- Only use the provided power adapter. Do not use damaged cords or plugs.
- Unplug the chair from the power outlet before cleaning or maintenance.

3. PACKAGE CONTENTS

Your MCombo HTS401 Power Recliner Chair is typically shipped in three boxes. Verify that all components are

present before beginning assembly.

- Backrest Section
- Seat Base Section (with armrests and footrest mechanism)
- Power Adapter and Cable
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly of the MCombo HTS401 Power Recliner Chair is designed to be tool-free and typically takes approximately 15 minutes.

4.1 Assembly Steps

1. Carefully unpack all components from the boxes.
2. Place the seat base section in the desired location, ensuring a wall clearance of at least 7.5 inches for full recline.
3. Align the backrest section with the mounting brackets on the seat base. Slide the backrest down firmly until it locks into place. You should hear an audible click.
4. Connect the power cables from the backrest to the seat base, ensuring all connections are secure.
5. Connect the power adapter to the chair and then plug it into a wall outlet.

Power Adjustable Headrest



Image 4.1: Recliner Assembly Diagram

For a visual guide, a 60-second assembly video is available from the manufacturer. (Note: Specific video URL not provided in data.)

5. OPERATING INSTRUCTIONS

The MCombo HTS401 Power Recliner Chair features integrated controls for ease of use.

5.1 Control Panel Overview

The control buttons are located on the right armrest of the chair.



Image 5.1: Multiple Function Button Control Panel

- **Button 1 (Headrest):** Adjusts the power headrest position.
- **Button 2 (Reclining):** Adjusts the backrest and footrest angle (116° to 155°).
- **Button 3 (Home Button):** Returns the backrest, footrest, and headrest to the original upright position in approximately 9 seconds.
- **Button 4 (LED):** Controls the under-chair LED light.
- **Ports 5 (Type-C & USB):** Provides dual charging ports for electronic devices.

5.2 Reclining and Headrest Adjustment

Use Button 2 to recline the chair to your desired position. The footrest will extend as the chair reclines. Use Button 1 to adjust the headrest independently for optimal neck and head support, especially when viewing screens.



 **Home Button**
Return Sit Position

Image 5.2: Power Adjustable Headrest in use

Extended Footrest



Image 5.3: Extended Footrest

5.3 Zero Gravity Position



The chair is designed to achieve a zero-gravity position, which can be found within the 116°-155° recline range. Adjust the backrest and footrest using Button 2 until you find a comfortable, weightless sensation.

5.4 Armrest Storage and Cup Holders

The armrests feature integrated storage compartments and dual cup holders for convenience.

Multiple Function Button Control

Easy to Adjust the Recliner Posture and Charge at Any Time

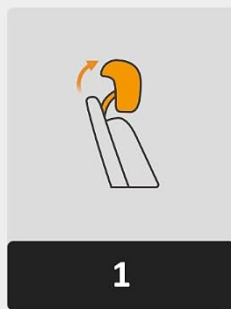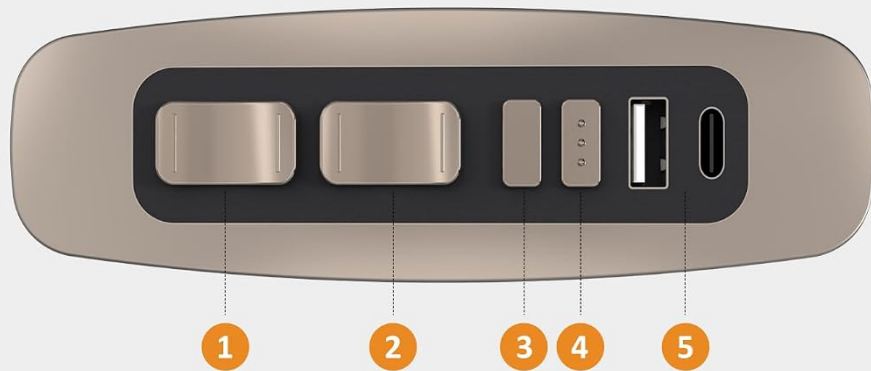

1

Headrest



 
2

Reclining




3

Home Button

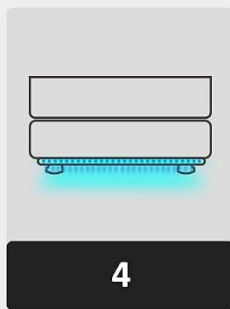

4

 LED

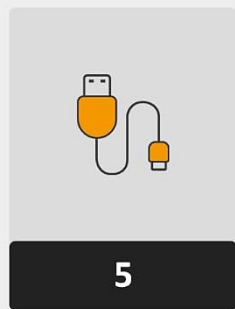

5

Type-C & USB

Image 5.4: Armrest Storage

6. MAINTENANCE

Regular maintenance helps prolong the life and appearance of your recliner.

- **Cleaning Faux Leather:** Wipe with a soft, damp cloth. For stubborn stains, use a mild soap solution and wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Electrical Components:** Ensure all cables are securely connected and free from damage. Do not attempt to repair electrical components yourself.
- **Moving Parts:** Periodically check the reclining mechanism for any loose fasteners. Tighten if necessary. Avoid obstructing the mechanism.

7. TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common solutions:

Problem	Possible Cause	Solution
Chair does not recline/power on.	Power cable disconnected or not plugged in.	Check all power connections, including the wall outlet. Ensure the power adapter is functioning.
Reclining mechanism is noisy or stiff.	Mechanism needs lubrication or has loose fasteners.	Apply silicone-based lubricant to moving joints. Check and tighten any loose bolts.
Headrest does not adjust.	Headrest cable disconnected or motor issue.	Verify the headrest cable connection. If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	MCombo
Model Name	6160-HTS401
Product Dimensions (Overall)	40.2"(W) x 39"(D) x 45.3"(H)
Recommended Height	5'-6'
Maximum Weight Capacity	350 lbs
Reclining Angle Range	116° - 155°
Wall Clearance Required	7.5 inches
Upholstery Material	Faux Leather
Charging Ports	USB & Type-C
Special Features	Power Recline, Power Adjustable Headrest, LED Light, Armrest Storage, Cup Holders



Dimension

Recommended Height: **5'-6'**

Required Wall Clearance: **7.5"**



Weight Capacity **350** LBS/Seat



3 Boxes



Image 8.1: Product Dimensions and Recline Positions

9. WARRANTY INFORMATION

The MCombo HTS401 Power Recliner Chair comes with a **2-Year Limited Warranty**. This warranty covers:

- Reclining Mechanism
- Electrical Parts
- Upholstery Material
- Cushions
- Wood and Metal Frame

Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or contact MCombo customer support.

10. CUSTOMER SUPPORT

For any questions, assistance, or warranty claims, please contact MCombo customer support through the retailer where you purchased the product or visit the official MCombo website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CRK4YFXB>

More documents and user manuals: <https://manuals.plus/>