



Manuals.plus /

› WLIVE /

› WLIVE Black Dresser TV Stand with Charging Station - 5 Drawers Instruction Manual

WLIVE 5 Drawers

WLIVE Black Dresser TV Stand with Charging Station - 5 Drawers Instruction Manual

MODEL: 5 DRAWERS (CHARCOAL BLACK)

Introduction

Thank you for choosing the WLIVE Black Dresser TV Stand with 5 Drawers and an integrated Charging Station. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and efficient use of your new furniture.

Important Safety Warnings

- Ensure stability by using anti-tipping accessories and adjusting feet for uneven surfaces.
- Do not overload drawers or shelves.
- Keep small parts away from children during assembly.
- Always follow assembly steps carefully to prevent injury or damage.

Package Contents

Please verify that all components listed in your product's included paper manual are present before beginning assembly. Refer to the assembly video for a visual guide to all parts and hardware.



Image: The WLIVE Black Dresser TV Stand with 5 drawers and open shelves, featuring a television on top, in a modern living room environment.

Assembly Instructions


Follow the steps below and refer to the assembly video for a detailed visual guide. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

Video: Official WLIVE assembly guide for the Dresser TV Stand with Power Outlet. This video demonstrates the complete step-by-step assembly process.

1. **Step 1-5: Assemble the Main Frame.** Begin by attaching the horizontal bars to the side frames using the provided screws. Ensure all connections are secure.
2. **Step 6-9: Install Shelves and Stabilizers.** Place the wooden shelves into the designated slots and secure them. Attach any additional support bars or stabilizers as shown in the video.
3. **Step 10-12: Prepare the Fabric Drawers.** Unfold the fabric drawers and insert the bottom panels to create a sturdy box. Attach the handles to the front of each drawer.
4. **Step 13-15: Install Charging Station and Final Touches.** Secure the charging station to the top shelf. Insert the assembled fabric drawers into their respective compartments. Attach the anti-tip

device to the back of the unit and secure it to a wall for safety. Adjust the leveling feet as needed.

STURDY STEEL FRAME

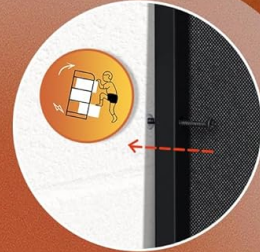

Anti-Tilt Device



Solid Drawer Slides



adjustable feet

Image: Detail showing the robust steel frame construction, the anti-tilt wall anchoring system for enhanced safety, and the adjustable feet designed to protect floors and ensure stability on uneven surfaces.



Image: A cutaway view illustrating the 3-tier structure of the fabric drawers, composed of durable non-woven fabric and an MDF board for stability and breathability.

Operating Instructions

Using the Charging Station

The integrated charging station features 3 AC outlets (125V/2A) and a 1.5m power cord. It is UL/ETL certified for electrical safety. Use the controllable switch to power on/off the outlets.

- Plug the dresser's power cord into a wall outlet.
- Connect your devices (TV, gaming systems, chargers) to the AC outlets on the top shelf.
- Use the switch to control power to the outlets.

THE DRESSER CAN HOLD

Provides Super Large Storage Space



BLANKET

5+



HANDBAG

8+



UNDERWEAR

30+



CLOTHES

15+



PILLOW

5+



TROUSERS

10+



Image: A detailed view of the built-in charging station on the dresser's top surface, showing the three AC outlets and a tablet actively charging.

Using the Fabric Drawers

The 5 removable fabric drawers are designed for smooth and effortless operation. They are ideal for organizing clothes, accessories, and other household items.

- Pull the metal handles to open and close the drawers.
- To remove a drawer, simply pull it out completely.
- To reinsert, align the drawer with the frame and push it gently until it slides into place.

Maintenance

Cleaning and Care

- Wipe the wooden surfaces and metal frame with a dry cloth.
- For fabric drawers, spot clean with a damp cloth and mild detergent if necessary. Allow to air dry completely.
- Avoid using harsh chemicals or abrasive cleaners, as these may damage the finish.

Troubleshooting

Common Issues and Solutions

- **Unit is wobbly:** Ensure all screws are tightened. Adjust the four stabilizing feet on the bottom of the unit to compensate for uneven flooring.
- **Drawers do not slide smoothly:** Check that the fabric drawers are correctly assembled with the bottom panel fully inserted. Ensure no items are obstructing the drawer's path.
- **Power outlets not working:** Verify the dresser's main power cord is securely plugged into a functional wall outlet. Check the controllable switch on the charging station to ensure it is in the 'on' position.

Specifications

Color	Charcoal Black
Brand	WLIVE
Size	5 Drawers
Style	Modern
Assembly Required	Yes
Item Dimensions	11.6"D x 39.6"W x 30.6"H
Material Type	MDF+Steel Frame+Non-woven Fabric
Product Care Instructions	Wipe with Dry Cloth

PRODUCT SIZE



Image: A visual representation of the dresser's dimensions, including height, width, and depth, along with individual drawer capacities.

Warranty and Support

WLIVE is committed to providing excellent service. If you encounter any issues or have questions regarding your product, please refer to your purchase documentation for warranty details and contact information.

Protection plans are available for purchase to extend coverage beyond the standard warranty. Please check your retailer for available 2-Year, 3-Year, or Complete Protect plans.