

[Manuals.plus](#) /

› [OutVue](#) /

› OutVue 32-inch Propane Fire Pit Table Instruction Manual

OutVue 32 inch propane fire pit table

OutVue 32-inch Propane Fire Pit Table Instruction Manual

Model: 32 inch propane fire pit table

IMPORTANT SAFETY INFORMATION

WARNING: For your safety, read and understand all instructions before assembling or operating this product. Failure to follow these instructions could result in fire, explosion, serious injury, or death.

Proposition 65 Warning: This product can expose you to chemicals including carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

CHOKING HAZARD: Small parts. Not for children.

- Always ensure the gas supply is turned off when the fire pit is not in use and before covering.
- Keep the propane tank hose and valve away from high-temperature areas.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Never leave the fire pit unattended while in operation.
- Maintain a safe distance from combustible materials.

PRODUCT OVERVIEW AND FEATURES

The OutVue 32-inch Propane Fire Pit Table is designed for outdoor use, offering both a functional fire pit and a versatile table surface. Its 2-in-1 design allows it to serve as a warm gathering point or a convenient outdoor dining/coffee table when the fire is not in use.



Figure 1: The OutVue fire pit table configured as a patio table (top) and as a propane fire pit (bottom).

Key features include a metal lid for conversion to a table, a 50,000 BTU burner for ample heat, and a quick-start electronic ignition system with variable flame control.



Figure 2: Detailed view of the fire pit's components including the pit lid, glass fire stone, control panel, and classic panel design.

PACKAGE CONTENTS

Before assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, contact customer support.

- 1 x Round Propane Fire Pit Table
- 1 x Removable Metal Lid
- Lava Rocks (sufficient quantity for burner area)
- Assembly Hardware Kit
- Instruction Manual

External Control Knob

The control knob is on the side beneath the fire tabletop, away from the open fire and heat. Make it safe and convenient to control the flame height by simply adjusting the control knob.

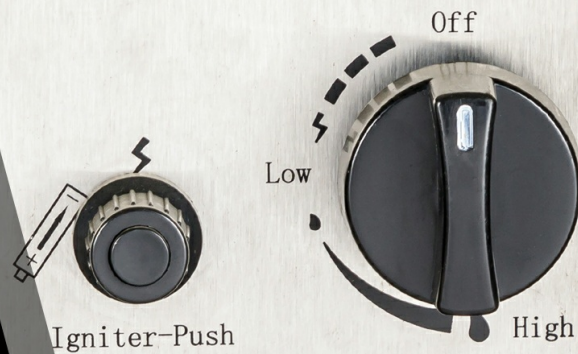


Figure 3: Components such as the metal lid, stainless steel burner, and lava rocks.

ASSEMBLY INSTRUCTIONS

Assembly is required. Follow the steps carefully. It is recommended to have two people for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Assemble Base Structure:** Attach the side panels to the main frame using the provided hardware. Ensure all screws are tightened securely but do not overtighten until all parts are aligned.
3. **Install Burner Unit:** Carefully place the stainless steel burner unit into the designated opening on the tabletop. Connect the gas hose to the burner unit as per the diagram in the separate assembly guide.
4. **Attach Tabletop:** Secure the tabletop to the assembled base structure. Ensure proper alignment before fully tightening all fasteners.
5. **Install Access Door:** Attach the access door to the side of the fire pit table, ensuring it opens and closes smoothly for propane tank access.
6. **Place Lava Rocks:** Distribute the lava rocks evenly around the burner in the fire bowl. Do not cover the igniter or burner ports.

Refer to the detailed diagrams in the included assembly manual for specific hardware and connection points.

SETUP

Proper setup is crucial for safe operation.

1. **Positioning:** Place the fire pit table on a flat, stable, non-combustible surface outdoors. Ensure adequate clearance from walls, ceilings, and other combustible materials.
2. **Propane Tank Connection:**
 - Open the access door on the side of the fire pit table.
 - Place a standard 20-pound propane tank (NOT INCLUDED) inside the compartment.
 - Connect the regulator hose from the fire pit to the propane tank valve. Hand-tighten firmly.

- Ensure the hose and valve are positioned away from any high-temperature areas of the fire pit.
- Check all gas connections for leaks using a soapy water solution before first use. Bubbles indicate a leak.

3. **Lava Rock Placement:** Arrange the provided lava rocks over the burner ring. Do not obstruct the igniter electrode or the gas ports on the burner.

OPERATING INSTRUCTIONS

Follow these steps to safely ignite and operate your fire pit table.



Figure 4: External control knob and igniter button for flame adjustment and ignition.

1. **Before Lighting:** Ensure the area around the fire pit is clear of debris and flammable materials. Confirm the propane tank is securely connected and the gas valve is open.
2. **Ignition:**
 - Locate the control knob and igniter button on the side panel.
 - Push and turn the control knob counter-clockwise to the 'LOW' position.
 - Immediately press and hold the igniter button. You should hear a clicking sound and see a spark.
 - Once the burner ignites, continue to hold the control knob for 10-15 seconds to allow the thermocouple to heat up.
 - Release the control knob. If the flame extinguishes, repeat the ignition process.
3. **Flame Adjustment:** Once lit, rotate the control knob to adjust the flame height from 'LOW' to 'HIGH' as desired.
4. **Turning Off:**
 - Turn the control knob clockwise to the 'OFF' position.
 - Close the valve on the propane tank.
 - Allow the fire pit and lava rocks to cool completely before covering or moving.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your fire pit table.

- **Cleaning:** Clean the exterior surfaces with a soft cloth and mild soap solution. Avoid abrasive cleaners or harsh chemicals. Ensure the burner area is free of debris.
- **Lava Rocks:** Periodically inspect lava rocks for deterioration. Replace if they become excessively crumbly or dusty.
- **Storage:** When not in use, especially during inclement weather or off-season, cover the fire pit table with a weather-resistant cover. Disconnect the propane tank and store it in a well-ventilated area, away from direct sunlight and heat sources.
- **Inspections:** Regularly check the gas hose and connections for any signs of wear, cracks, or leaks.

TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Burner does not ignite	No gas flow; Igniter not sparking; Air in gas line; Low propane tank.	Ensure propane tank valve is open; Check igniter for spark (requires 1 AAA battery, not included); Purge air by repeating ignition attempts; Replace or refill propane tank.
Low flame or inconsistent flame	Low gas pressure; Partially closed tank valve; Obstruction in burner ports.	Ensure propane tank valve is fully open; Check for kinks in the gas hose; Clean burner ports of any debris.
Gas odor detected	Gas leak.	Immediately turn off gas at the tank. Do not attempt to ignite. Check all connections for leaks using soapy water. If leak persists, do not use and contact qualified service personnel.

PRODUCT SPECIFICATIONS

Detailed specifications for the OutVue 32-inch Propane Fire Pit Table.

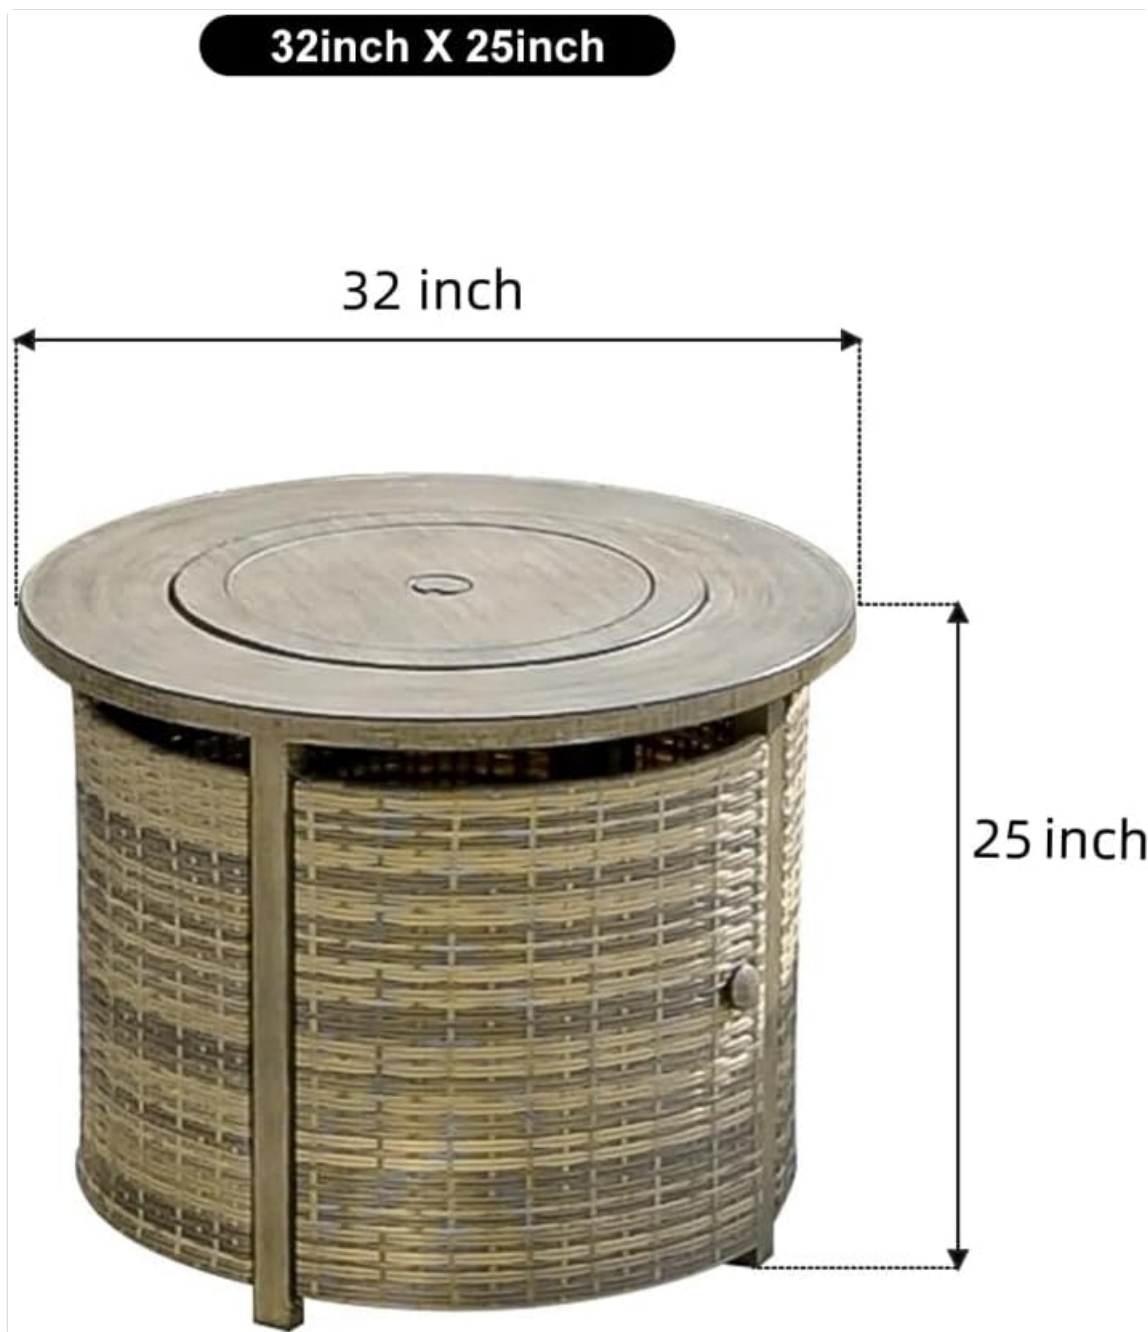


Figure 5: Dimensions of the OutVue 32-inch Propane Fire Pit Table.

Specification	Detail
Model Number	32 inch propane fire pit table
Brand	OutVue
Product Dimensions	32"D x 32"W x 25"H
Item Weight	40.7 Pounds
Material	Iron, Plastic, Stainless Steel
Finish Type	Powder Coated
Fuel Type	Liquefied Petroleum Gas (Propane)
Heat Output	50,000 BTU

Specification	Detail
Color	Light-grey
Shape	Round

WARRANTY AND SUPPORT

For any questions regarding assembly, operation, missing parts, or warranty claims, please contact OutVue customer support. Refer to your purchase documentation for specific warranty terms and contact information.

We are committed to providing replacement parts and assistance to ensure your satisfaction with the product.