

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [aiprotabket](#) /

> [aiprotabket 10-inch Android Tablet User Manual](#)

aiprotabket SC7731E

aiprotabket 10-inch Android Tablet User Manual

Model: SC7731E

INTRODUCTION

This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your aiprotabket 10-inch Android Tablet. Please read this manual thoroughly before using your device to ensure optimal performance and longevity.

1. SETUP

1.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Ensure the following items are present:

- aiprotabket 10-inch Android Tablet
- Protective Case
- USB Charging Cable
- User Manual (this document)



Figure 1.1: Tablet and included accessories.

1.2 Charging the Tablet

Before first use, fully charge the tablet. Connect the USB charging cable to the tablet's Type-C port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator will illuminate.

1.3 Power On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the screen illuminates.
- **To Power Off:** Press and hold the Power button until the power options appear on the screen. Select 'Power off'.

- **To Restart:** Press and hold the Power button until the power options appear. Select 'Restart'.

1.4 Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Sign in with your Google account or create a new one.
- Set up screen lock and other security features.

1.5 Inserting a TF Card (MicroSD Card)

The tablet supports expandable storage up to 512GB via a TF card. Locate the TF card slot on the side of the tablet. Gently insert the TF card into the slot until it clicks into place. Ensure the card is oriented correctly.

2. OPERATING

2.1 Basic Navigation

The tablet uses touch gestures for navigation:

- **Tap:** To select an item or open an app.
- **Tap and Hold:** To access contextual menus or move icons.
- **Swipe:** To scroll through pages or lists.
- **Pinch-to-Zoom:** To zoom in or out on images or web pages.

Aiprotab C20 Tab



Android 14



Bluetooth 5.0



6000 mAh



2.4/5GHz WIFI



Dual cameras



Figure 2.1: Tablet in typical usage scenario.

2.2 Wi-Fi Connectivity

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

2.3 Bluetooth Pairing

To pair with a Bluetooth device (e.g., headphones, keyboard):

1. Go to **Settings > Connected devices > Bluetooth**.
2. Turn on Bluetooth.
3. Ensure your Bluetooth device is in pairing mode.
4. Select your device from the list of available devices and follow any on-screen prompts to complete pairing.

2.4 Using the Cameras

The tablet features dual cameras (front and rear). Open the 'Camera' app to take photos or record videos. Tap the camera icon to switch between front and rear cameras.

2.5 Google Play Store

As a GMS certified device, the tablet comes pre-installed with the Google Play Store. You can download and install a wide variety of applications, games, movies, and books from here.



Figure 2.2: Google GMS Certified features.

2.6 Split-Screen Multitasking

To use two apps simultaneously, utilize the split-screen feature:

1. Open the first app.
2. Swipe up from the bottom of the screen and hold to reveal recent apps.
3. Tap the app icon at the top of the first app's window.
4. Select 'Split screen'.
5. Choose the second app from your recent apps or app drawer to fill the other half of the screen.

2.7 Audio Features

The tablet is equipped with dual speakers for clear audio output. It also includes a 3.5mm audio jack for connecting wired headphones or external speakers.

3. MAINTENANCE

3.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.

3.2 Battery Care

To maximize battery life:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.
- Unplug the charger once the tablet is fully charged.

3.3 Software Updates

Periodically check for system updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > System update**.

3.4 Storage Management

Regularly manage your tablet's storage to maintain performance. Delete unnecessary files, uninstall unused apps, and move large media files to the TF card or cloud storage.

3.5 Protective Case Usage

The included protective case helps guard your tablet against drops and bumps. Ensure the tablet is securely fitted within the case for optimal protection.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet does not power on	Low battery; System crash	Charge the tablet for at least 30 minutes; Press and hold the Power button for 10-15 seconds to force restart.
Slow performance	Too many apps running; Low storage; Outdated software	Close background apps; Free up storage space; Check for system updates.
Cannot connect to Wi-Fi	Incorrect password; Router issue; Wi-Fi disabled	Verify password; Restart router; Ensure Wi-Fi is enabled in settings.
Battery drains quickly	High screen brightness; Background apps; Weak signal	Reduce brightness; Close unused apps; Use in areas with good signal.

4.1 Factory Reset

If issues persist, a factory reset may be necessary. This will erase all data on the tablet. Back up important data before proceeding. Go to **Settings > System > Reset options > Erase all data (factory reset)**.


5. SPECIFICATIONS

Key technical specifications for the aiprotab 10-inch Android Tablet:

- **Operating System:** Android 13 (upgradable to Android 14)
- **Processor:** Quad-Core (RK3562), 2.0 GHz, ARM Cortex-A53, Mali-G52 GPU
- **RAM:** 4GB (expandable with 2GB+4GB virtual RAM)
- **Internal Storage:** 64GB ROM
- **Expandable Storage:** Up to 512GB via TF Card (MicroSD)
- **Display:** 10.1-inch IPS HD Touch Screen, 1280x800 pixels, 16:10 Aspect Ratio, 300 nit brightness
- **Cameras:** 2MP Front, 5MP Rear
- **Battery:** 6000mAh (up to 6 hours continuous use, 15 days standby)
- **Connectivity:** Wi-Fi (2.4/5GHz), Bluetooth 5.0, GPS
- **Ports:** Type-C USB, 3.5mm Audio Jack
- **Dimensions:** 7.5 x 5.3 x 0.1 inches
- **Weight:** 2.14 pounds

RK 3562 Processors

Quad-Core | 2.0 GHz | Mali-G52 | Cortex-A53

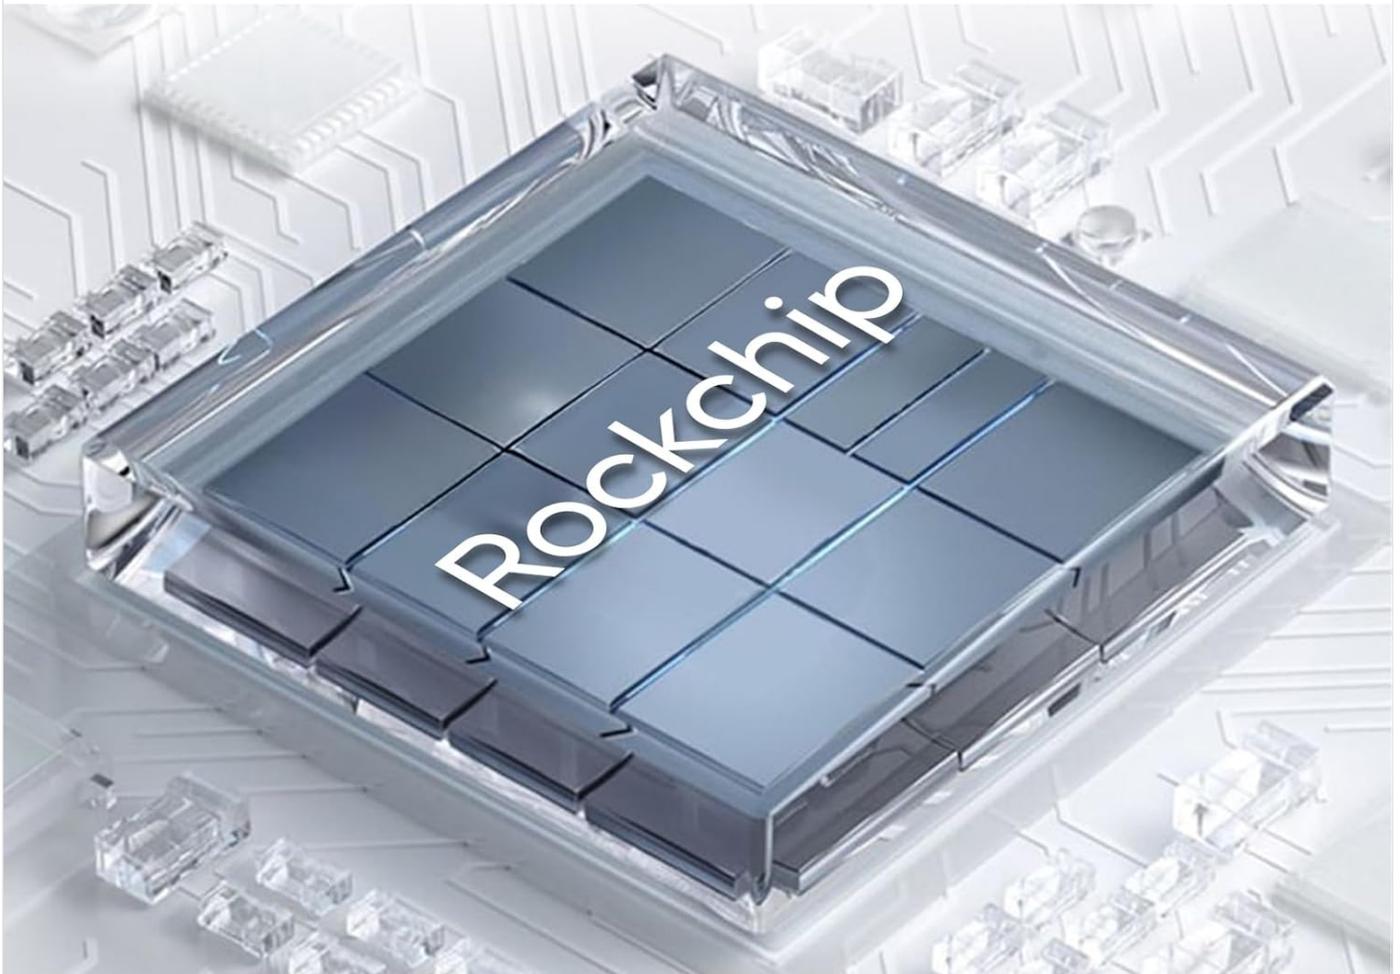

Durable Large Battery

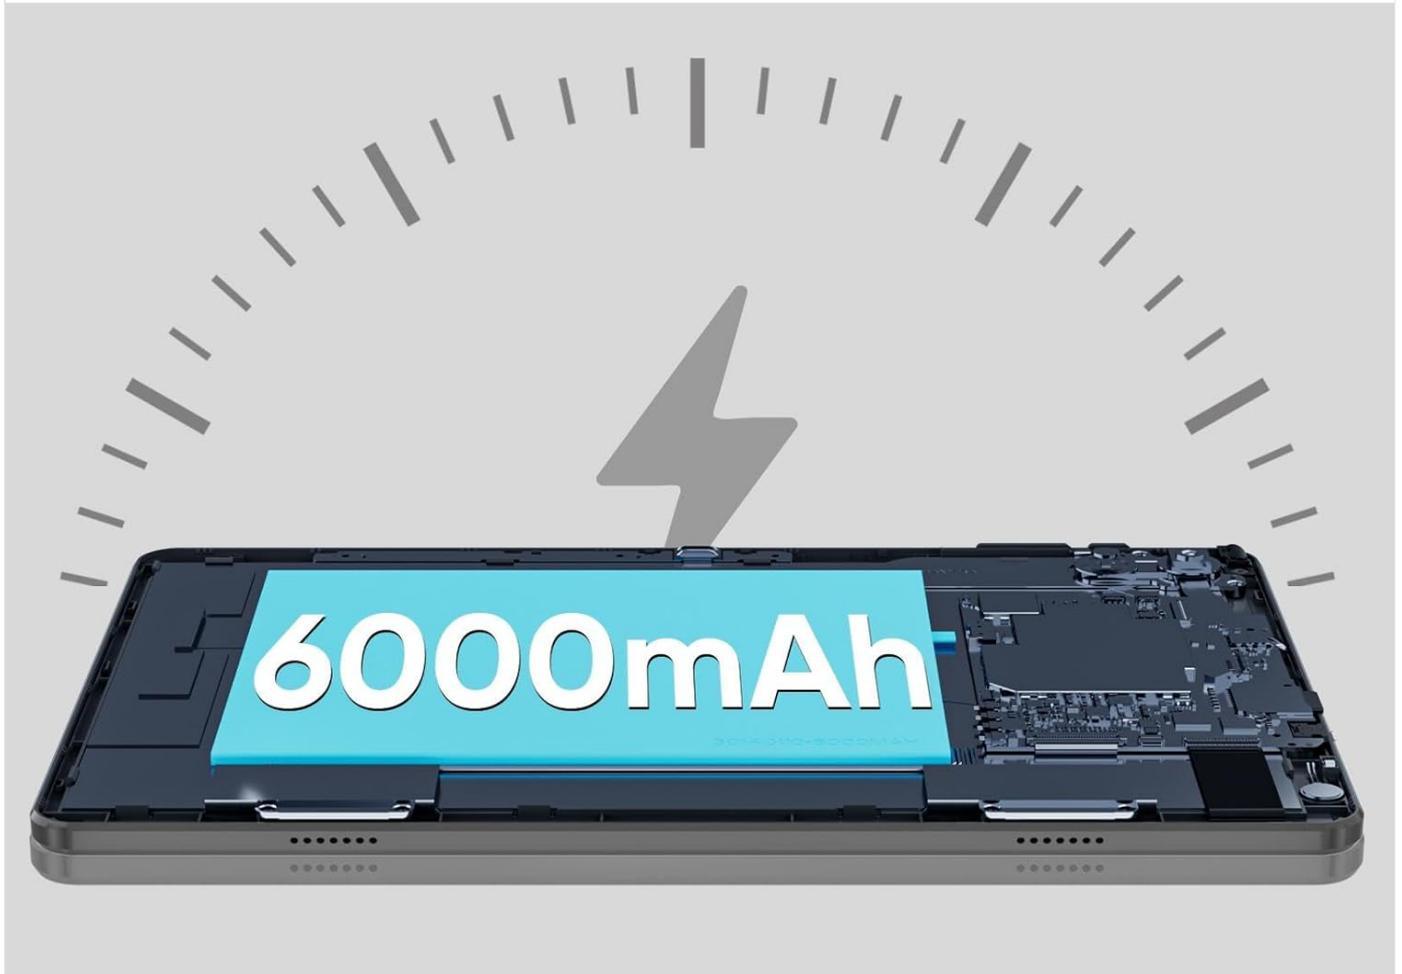


Figure 5.2: 6000mAh Battery and Type-C charging.

6. WARRANTY AND SUPPORT

Your aiprotablenet device is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact aiprotablenet customer service through the contact information provided on the official aiprotablenet website or your purchase platform.

 <p>K10 USER MANUAL</p> <p><small>Please read this manual thoroughly before using and keep it for future reference.</small></p>	<p>K10 Tablet User Manual - Android 13</p> <p>Comprehensive user manual for the K10 Android 13 tablet, covering specifications, functions, settings, app management, multimedia, troubleshooting, and regulatory compliance.</p>
	<p>Atozee Q3K Kids Tablet: User Manual and Specifications</p> <p>Comprehensive user manual for the Atozee Q3K kids tablet, detailing specifications, features, port layout, and FCC compliance information. Features Android 14 (Go edition) and a 7-inch display.</p>
 <p>Q8K User manual</p>	<p>Q8K Kids Tablet User Manual and Specifications</p> <p>Comprehensive user manual and specifications for the Q8K Kids Tablet, detailing features, hardware, and FCC compliance. Includes device overview, charging instructions, and app information.</p>
 <p>Q82K User manual</p>	<p>Q82K Kids Tablet User Manual</p> <p>User manual for the Q82K Kids Tablet, providing specifications, device layout, usage instructions, and FCC compliance information.</p>
	<p>Shelly Wall Display X2: Smart Home Control Panel User and Safety Guide</p> <p>Comprehensive user and safety guide for the Shelly Wall Display X2 smart home control panel, detailing installation, specifications, features, and troubleshooting.</p>
	<p>Shelly Wall Display X2 User and Safety Guide</p> <p>User and safety guide for the Shelly Wall Display X2, a smart home control panel with a 6.95" color display and load circuit switching functionality.</p>