



[Manuals.plus](#) /

> [U-MAX](#) /

> U-MAX 7 Piece Outdoor Patio Furniture Set Instruction Manual

U-MAX 16002BK_6

U-MAX 7 Piece Outdoor Patio Furniture Set Instruction Manual

Model: 16002BK_6

INTRODUCTION

This manual provides essential information for the assembly, operation, maintenance, and care of your U-MAX 7 Piece Outdoor Patio Furniture Set. Designed for comfort and durability, this set features PE rattan and comfortable cushions, perfect for enhancing your outdoor living space.

The modular design allows for various configurations to suit your patio, garden, backyard, pool, or other indoor and outdoor areas. The set includes 4 single armless chairs, 2 corner armchairs, 1 coffee table with tempered glass top, and 6 seat & back cushions.

SAFETY INFORMATION


For safe use, assemble and install the furniture according to the instructions provided. Do not exceed the recommended load capacity. Keep the furniture away from high-traffic areas or places where it can be easily tipped over. Ensure that all parts are securely fastened, and check for any sharp edges or small parts that may pose a risk, especially to children. Regularly inspect and maintain the furniture to ensure its continued safety.

SETUP AND ASSEMBLY

Your U-MAX 7 Piece Outdoor Patio Furniture Set will arrive in three boxes with all necessary hardware and detailed instructions. Assembly typically requires 40-60 minutes for one person. It is recommended to have two people for easier assembly.

Assembly Steps:

1. Unpack all components from the three boxes and verify against the parts list provided in the separate instruction manual.
2. Identify the different chair sections (single armless, corner armchairs) and the coffee table.
3. Begin assembling the frames using the provided hardware. Ensure all screws are tightened securely but do not overtighten until all pieces are aligned.
4. Attach the adjustable foot pads to the bottom of each furniture piece to ensure stability on uneven ground.
5. Place the tempered glass top onto the coffee table.
6. Insert the high-density foam cushions into their respective polyester covers. The covers are designed with zippers for easy removal.
7. Arrange the modular pieces into your desired configuration. Sofa fastener clips are included to keep the sections together.

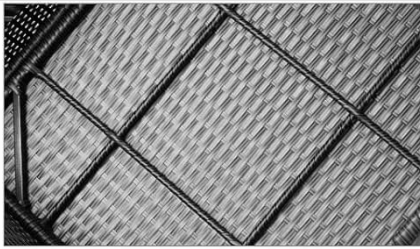

Stable Steel Frame



Durable Tempered Glass



High Quality Hand-Woven PE Wicker



Sofa Fastener Clips Preventing Moving



Adjustable Rubber Feet

Figure 1: Key structural and material features including stable steel frame, durable tempered glass, high-quality hand-woven PE wicker, sofa fastener clips, and adjustable rubber feet.

Multiple Free Combinations as Your Will



Armless Sofa X 4



Corner Sofa X 2



Coffee Table X 1



Figure 2: Examples of multiple free combinations possible with the modular design, illustrating how armless sofas, corner sofas, and the coffee table can be arranged.

OPERATING INSTRUCTIONS

The U-MAX Patio Furniture Set is designed for versatile use in various outdoor and indoor settings. Its modular nature allows for flexible arrangement to fit your space and needs.

Key Features:

- **Modular Design:** Easily reconfigure the 4 single armless chairs and 2 corner armchairs to create different seating arrangements, such as an L-shape, U-shape, or individual seating areas.
- **Comfortable Seating:** The 4-inch thick padded cushions provide optimal comfort and relaxation.
- **Coffee Table:** The included coffee table with a tempered glass top is ideal for holding drinks, snacks, or decorative items.
- **Adjustable Foot Pads:** New design adjustable foot pads help stabilize the furniture on uneven surfaces, preventing shaking.



Figure 3: The U-MAX 7-piece patio set in a typical L-shaped configuration, demonstrating its aesthetic appeal in an outdoor setting.

MAINTENANCE AND CARE

Proper maintenance will extend the life and appearance of your U-MAX Patio Furniture Set.

General Care:

- **Cleaning:** Wipe the PE rattan and steel frame with a dry cloth. For deeper cleaning, use a mild soap and water solution, then rinse thoroughly and dry completely.
- **Cushion Care:** UV-protected cushion covers are waterproof (not rain-proof) and machine washable. Remove covers for cleaning. Allow cushions to dry completely before re-inserting into covers to prevent mildew. Store cushions indoors during heavy rain or off-season to prolong their life.
- **Glass Top Care:** Clean the tempered glass top with a glass cleaner and a soft cloth. Avoid abrasive cleaners that may scratch the surface.

- **Protection:** While designed for outdoor use, covering the furniture during harsh weather conditions or prolonged periods of non-use is recommended to prevent premature wear and fading.



Easy to Clean

Removable Cushion Cover with Zipper Design



Extra Comfort

High-Density Foam Upholstery:



Water Repellent

Polyester Cover

Figure 4: Details on cushion features: easy-to-clean removable covers, high-density foam for comfort, and water-repellent polyester material.

TROUBLESHOOTING

If you encounter any issues with your U-MAX Patio Furniture Set, please refer to the following common solutions:

- **Wobbly Furniture:** Check that all assembly screws are securely tightened. Adjust the foot pads on each leg to level the furniture on uneven surfaces.
- **Cushion Flatness:** Allow newly unpacked cushions time to fully expand after being vacuum-sealed. Fluff them regularly to maintain their shape and comfort.
- **Missing Parts/Hardware:** If any parts are missing or damaged upon arrival, please contact customer support immediately with your purchase details.
- **Difficulty Assembling:** Review the detailed instructions provided with the product. Ensure all pieces are correctly oriented before tightening screws. If issues persist, consider seeking assistance from another person.

For problems not listed here, or if the suggested solutions do not resolve the issue, please contact U-MAX customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	U-MAX
Model Number	16002BK_6
Product Dimensions (L x W x H)	110 x 55 x 29.2 inches
Item Weight	148 pounds
Material	Four-line Rattan (PE Rattan)
Color	Black Rattan & Beige Cushion
Seating Height	17.3 inches
Cushion Thickness	4 inches
Product Care Instructions	Wipe with Dry Cloth

WARRANTY AND SUPPORT

U-MAX is committed to providing high-quality products. For information regarding product warranty, returns, or technical support, please refer to the warranty card included with your product or visit the official U-MAX website. You may also contact the seller directly through your purchase platform for assistance.

Protection Plans: Extended protection plans may be available for purchase. Please check your retailer for details on 2-Year or 3-Year Protection Plans.