

Manuals.plus /

› sparefixd /

› Sparefixd Glass Turntable for Gaggenau Microwave - Instruction Manual

sparefixd 00354974

Sparefixd Glass Turntable for Gaggenau Microwave - Instruction Manual

Model: 00354974

1. PRODUCT OVERVIEW

This sparefixd glass turntable is a replacement part designed for specific Gaggenau microwave models. It ensures proper rotation of food during cooking, promoting even heating. The turntable is made of durable glass, equivalent to part number 00354974.



Image 1.1: The sparefixd glass turntable, a clear circular glass plate with raised nubs on the underside for engaging with the microwave's rotating mechanism.

2. COMPATIBILITY

This glass turntable is compatible with the following Gaggenau microwave models. Please verify your microwave's model number, typically found on the side, back, or door frame, printed or stamped on a sticker or plate.

- BM211100/01, BM211100/02, BM211100/03
- BM241110/01, BM241111/01, BM241111/02, BM241130/01, BM241131/01, BM241131/02

- EM201110/01, EM201110/02, EM201130/01, EM201130/02, EM201130/03
- EM203130/01, EM211100/01, EM211100/02

3. SETUP AND INSTALLATION

Installing the sparefixd glass turntable is a straightforward process. Ensure your microwave oven is unplugged before proceeding.

1. **Unplug the Microwave:** For safety, always disconnect the microwave from the power outlet before handling internal components.
2. **Remove Old Turntable (if applicable):** If replacing an existing turntable, carefully lift out the old glass plate and the turntable support ring/roller guide.
3. **Clean the Microwave Cavity:** Wipe down the bottom of the microwave cavity to remove any food debris or spills. Ensure the central coupler (the part that rotates the turntable) is clean and free of obstructions.
4. **Place the Turntable Support:** Position the turntable support ring (usually with three wheels) correctly on the bottom of the microwave cavity. Ensure it sits flat and is not warped.
5. **Install the Glass Turntable:** Carefully place the new sparefixd glass turntable onto the turntable support. Ensure the central indentations on the underside of the glass plate align with the coupler in the microwave cavity. The turntable should sit securely and flat.
6. **Test Rotation:** Gently rotate the turntable by hand to ensure it moves freely and is properly seated.
7. **Plug In and Test:** Plug the microwave back into the power outlet. Place a cup of water on the turntable and run the microwave for 30 seconds to confirm the turntable rotates correctly.

4. OPERATING INSTRUCTIONS

Once installed, the glass turntable operates automatically with your microwave oven. Its primary function is to rotate food items during cooking, ensuring even heat distribution and more consistent results.

- Always place food containers directly on the glass turntable.
- Do not operate the microwave without the turntable properly installed, as this can lead to uneven cooking and potential damage to the microwave.
- Ensure the turntable is clean and free of obstructions before each use to allow for smooth rotation.

5. MAINTENANCE AND CARE

Proper care of your glass turntable will extend its lifespan and ensure optimal microwave performance.

- **Cleaning:** The glass turntable can be easily removed for cleaning. Wash it with warm, soapy water or place it in the dishwasher. Rinse thoroughly and dry before returning it to the microwave.
- **Handling:** Handle the glass turntable with care to avoid chipping or breaking. Avoid dropping it or subjecting it to sudden temperature changes (e.g., placing a hot turntable directly into cold water).
- **Inspection:** Periodically inspect the turntable for any cracks, chips, or signs of wear. A damaged turntable should be replaced to prevent potential hazards or uneven cooking.

6. TROUBLESHOOTING

If you encounter issues with your turntable, consider the following common solutions:

- **Turntable Not Rotating:**

- Ensure the turntable is correctly seated on the central coupler and the support ring.
- Check for any food debris or obstructions beneath the turntable or around the coupler.
- Verify that the turntable support ring is clean and its wheels are not stuck.
- If the issue persists, the microwave's motor or coupler might require professional inspection.

- **Unusual Noise During Rotation:**

- Clean the turntable, support ring, and the bottom of the microwave cavity thoroughly.
- Ensure the turntable is not chipped or cracked, which could cause imbalance.
- Check if the support ring wheels are damaged or worn.

7. SPECIFICATIONS

Attribute	Detail
Brand	sparefixd
Model Number	00354974
Part Type	Glass Turntable
Equivalent to Part Number	00354974
Material	Glass

8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your sparefixd glass turntable, please refer to the original purchase documentation or contact the retailer from whom the product was purchased. Specific warranty terms may vary.