

[Manuals.plus](#) /

> [TUNISE](#) /

> TUNISE Mini Clip-on Fan M24 User Manual

TUNISE M24

TUNISE Mini Clip-on Fan M24 User Manual

Model: M24 | Brand: TUNISE

1. INTRODUCTION

Thank you for choosing the TUNISE Mini Clip-on Fan M24. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new fan. Please read these instructions carefully before use and retain them for future reference.



Image 1.1: TUNISE Mini Clip-on Fan M24

2. PRODUCT OVERVIEW

Key Features:

- **Digital Display:** Easily monitor fan speed settings and remaining battery life.
- **360° Rotation:** Provides full airflow in any desired direction.
- **3 Adjustable Speeds:** Customize airflow from soft to strong wind.
- **2000mAh Rechargeable Battery:** Offers 3-7 hours of usage on a single charge.
- **Quiet Operation:** Designed for a low-noise environment.
- **Versatile Clip Design:** Can be used as a stroller fan, desk fan, or clipped onto various surfaces.
- **Durable & Portable:** Compact design with effective protection.

Components:

- Fan Unit with Digital Display
- Integrated Clip/Base
- USB Charging Cable
- User Manual (this document)



Image 2.1: Various uses of the fan (clip, desk, hanging)

3. SETUP

Initial Charging:

1. Before first use, fully charge the fan. Connect the provided USB charging cable to the fan's charging port and to a USB power source (e.g., computer, wall adapter).

2. The digital display will show the charging status. A full charge typically takes approximately 3 hours.



Image 3.1: Charging the fan

Placement:

- **Clip-on:** Use the integrated clip to attach the fan securely to surfaces like strollers, desks, shelves, or bed frames. Ensure the clip has a firm grip.
- **Desk Fan:** Place the fan on a flat, stable surface. The clip base provides stability for desktop use.
- **Hanging:** The fan can also be hung using the integrated hook on the clip base, suitable for tents or other overhead structures.

PORTABLE CLIP ON FAN

with Digital Display



Image 3.2: Fan clipped to a stroller, demonstrating 360° rotation

4. OPERATING INSTRUCTIONS

Power On/Off and Speed Adjustment:

1. **Power On:** Press the power button once to turn on the fan. It will start at speed level 1.
2. **Adjust Speed:** Press the power button repeatedly to cycle through the 3 available speed levels (1, 2, 3).
3. **Power Off:** After speed level 3, pressing the button again will turn the fan off.

3 SPEED ADJUSTMENT

One click control adjustment



Image 4.1: 3 Speed Adjustment

Digital Display:

The integrated digital display shows the current fan speed (1, 2, or 3) and the remaining battery percentage. This allows for easy monitoring of the fan's status.

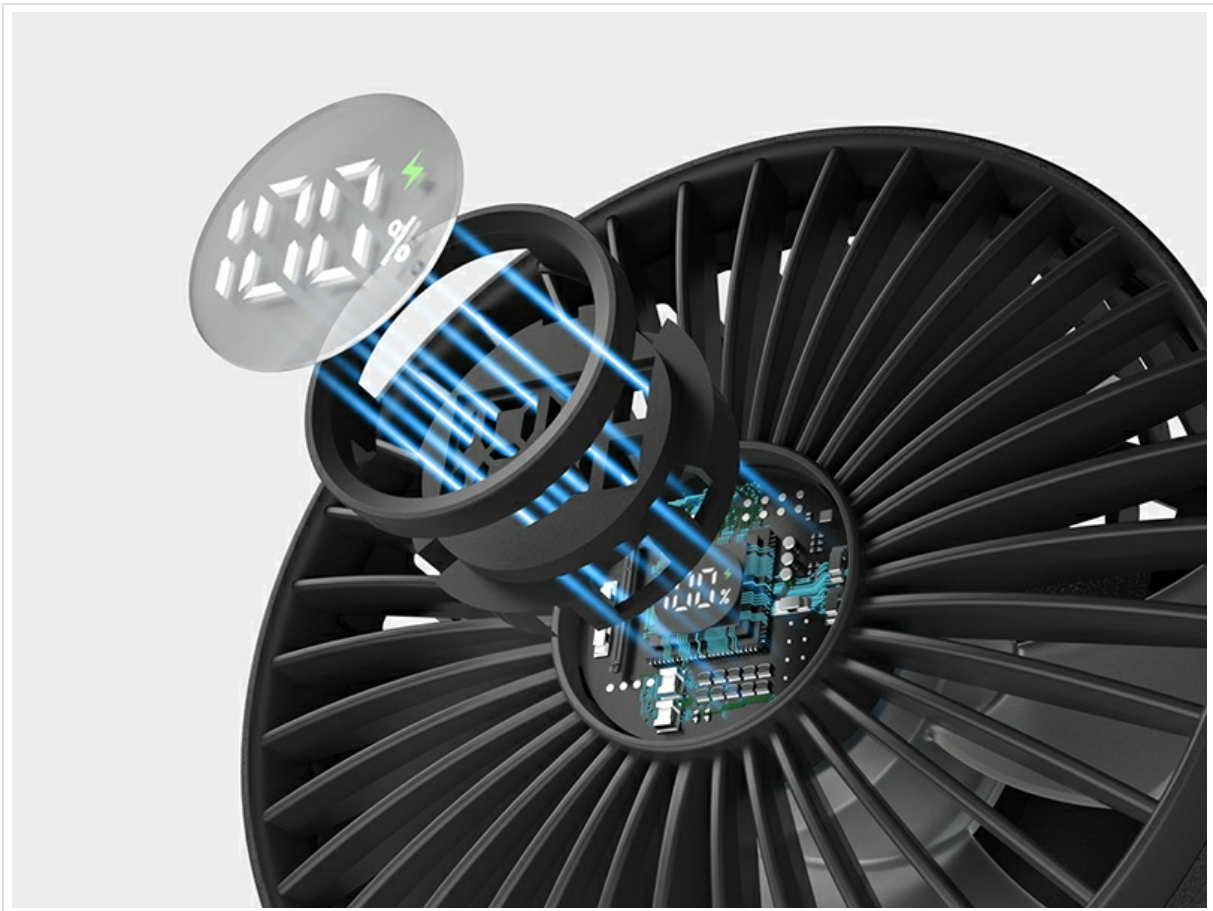


Image 4.2: Digital Display showing battery percentage

Adjusting Fan Angle:

The fan head can be manually rotated 360 degrees horizontally and vertically to direct airflow precisely where needed.

5. CHARGING INSTRUCTIONS

The TUNISE Mini Clip-on Fan M24 is equipped with a 2000mAh rechargeable lithium polymer battery.

- Connect the fan to a standard USB power source using the provided charging cable.
- The digital display will indicate charging status and battery percentage.
- A full charge takes approximately 3 hours.
- Once fully charged, the fan provides 3-7 hours of operation, depending on the selected speed setting.

RECHARGEABLE BATTERY

fully charged within 3 hours



Image 5.1: Battery capacity and charging details

6. MAINTENANCE

Cleaning:

- Ensure the fan is turned off and unplugged before cleaning.
- Wipe the exterior of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- For dust accumulation on the fan blades, use a soft brush or compressed air to gently clean through the grilles. Do not attempt to disassemble the fan for cleaning.

Storage:

When not in use for extended periods, store the fan in a cool, dry place away from direct sunlight and extreme

temperatures. Ensure the battery is partially charged (around 50%) before storage to prolong its lifespan.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on	Battery is depleted	Charge the fan using the provided USB cable.
Weak airflow	Fan is on a low speed setting	Press the power button to increase the speed level.
Fan makes unusual noise	Obstruction in fan blades or internal issue	Turn off the fan and check for any obstructions. If the noise persists, contact customer support.
Short battery life	Fan used on highest speed setting or battery not fully charged	Ensure the fan is fully charged. Lower the speed setting for longer battery life.

8. SPECIFICATIONS

Brand: TUNISE

Model Name: M24

Color: Black

Product Dimensions: 4.17"D x 5"W x 2.32"H

Item Weight: 9.1 ounces (0.26 Kilograms)

Power Source: Battery Powered (1 Lithium Polymer battery included)

Battery Capacity: 2000mAh

Charging Time: Approximately 3 hours

Usage Time: 3-7 hours (depending on speed)

Number of Power Levels: 3

Wattage: 1.05 watts

Voltage: 1.2 Volts

Control Method: Touch

Special Feature: Lightweight, Portable, Digital Display

Indoor/Outdoor Usage: Indoor

9. SAFETY INFORMATION

- Do not immerse the fan in water or other liquids.
- Keep the fan away from open flames or high temperatures.
- Do not allow children to operate the fan unsupervised.
- Avoid placing fingers or other objects into the fan grilles while it is operating.
- Use only the provided charging cable or a certified equivalent.
- Do not attempt to disassemble, repair, or modify the fan. Contact qualified personnel for service.
- Dispose of the battery according to local regulations.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact TUNISE customer

service directly. Keep your purchase receipt as proof of purchase.