

tokemisc S7-BT-16GB-Black

Tokemisc MP3 Player User Manual

MODEL: S7-BT-16GB-BLACK

1. Introduction

This manual provides comprehensive instructions for the Tokemisc MP3 Player with Bluetooth 5.3. Please read this manual carefully before using the device to ensure proper operation and to maximize its features. This portable music device is designed for ease of use and offers a variety of functions including music playback, FM radio, e-book reading, and more.



Figure 1: Tokemisc MP3 Player with Bluetooth 5.3

2. What's in the Box

Upon opening the package, verify that all the following items are included:

- 1 x Bluetooth MP3 Player
- 1 x Type-C Charging Cable
- 1 x Wired Earphone
- 1 x User Manual (this document)

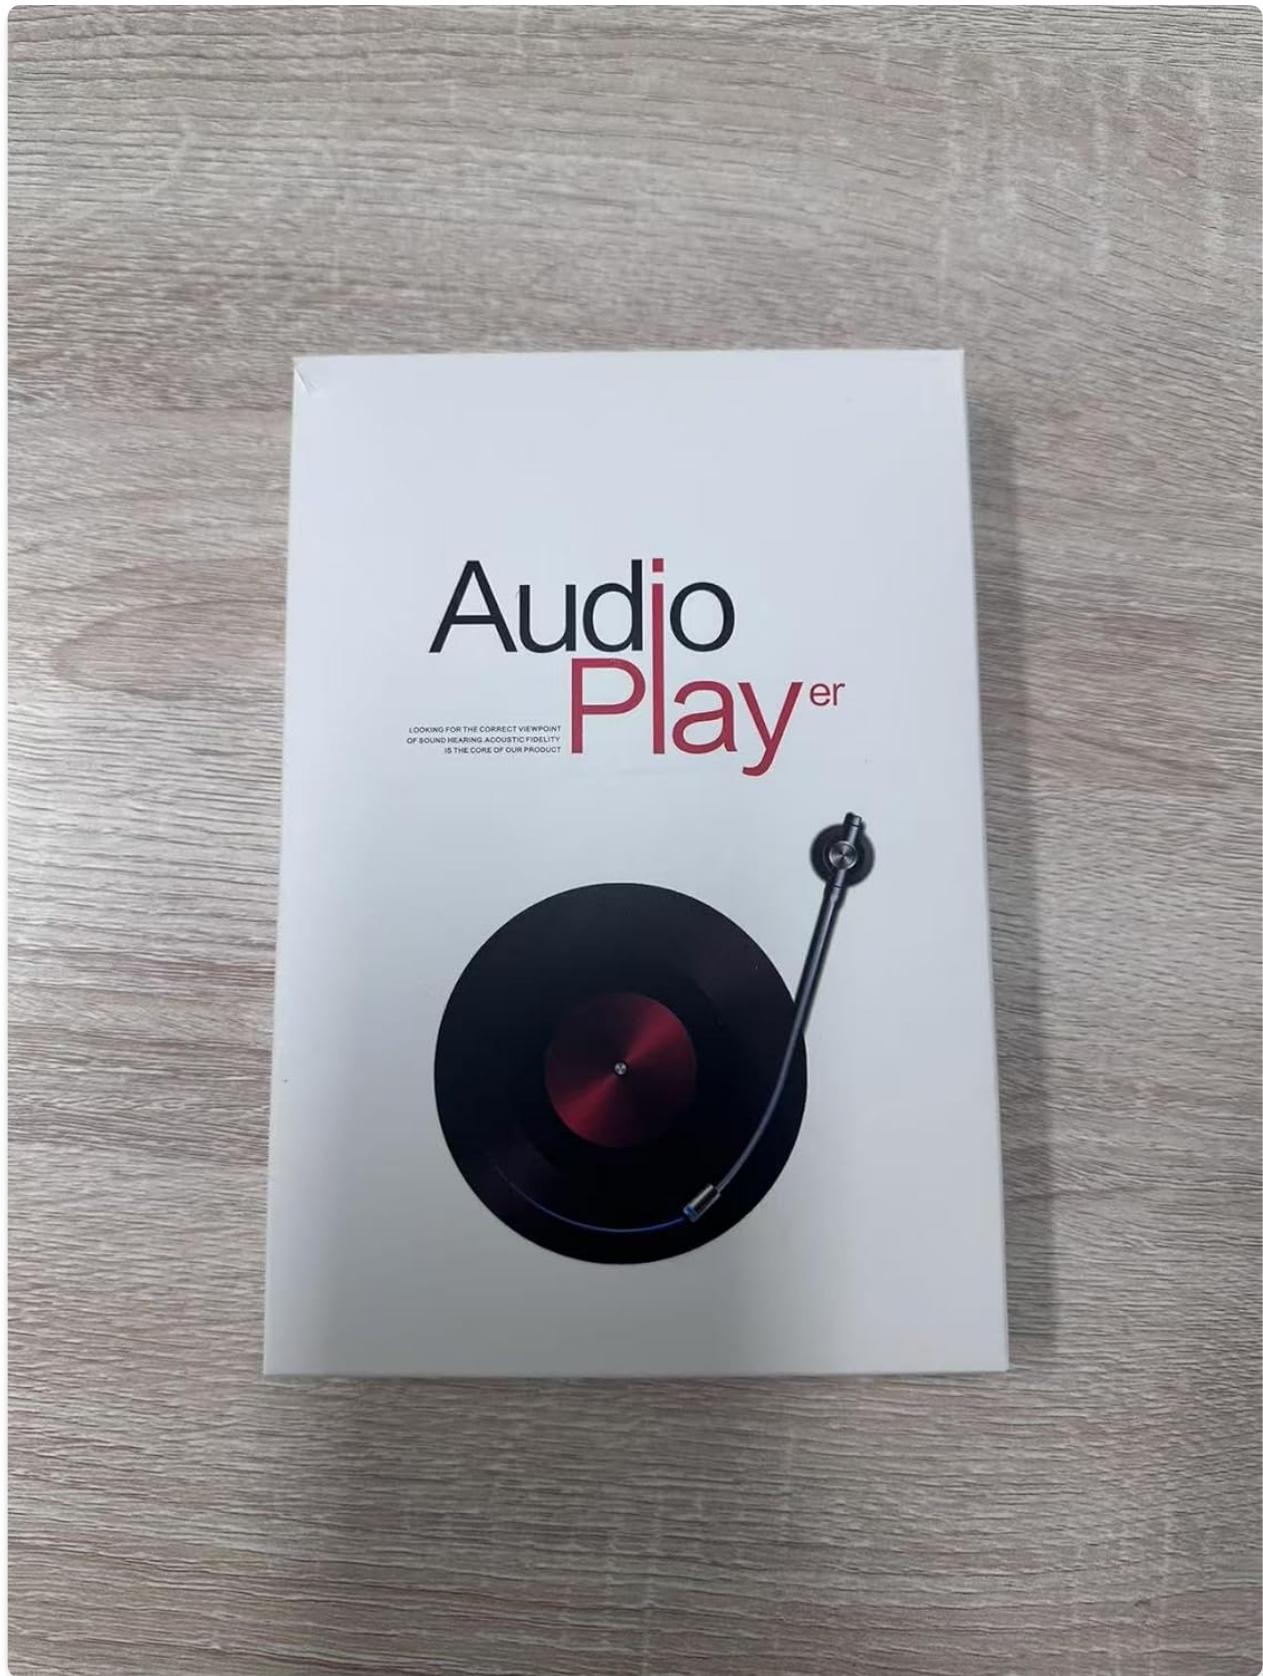


Figure 2: Product Packaging



Figure 3: Side View of Packaging

Your browser does not support the video tag.

Video 1: Unboxing and Overview of the Tokemisc MP3 Player.

3. Setup

3.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided Type-C charging cable to the device's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

3.2 Powering On/Off

To power on, press and hold the power button located on the side of the device until the screen lights up. To power off, press and hold the power button until the power-off prompt appears, then confirm.

3.3 Micro SD Card Installation (Optional)

The device has 16GB of internal storage. To expand storage up to 256GB, insert a Micro SD card (not included) into the designated slot on the side of the player. Ensure the card is inserted correctly until it clicks into place.

256GB Large Storage

It means you can take up to 64000 songs into your pocket.

• • •

256GB

16GB Internal storage

256GB TF card expand (Not included)

Tips:

1. "Music" function display up to 4000 songs even the storage is enough.
2. "Folder" function display no limit if the storage is enough.

Figure 4: Storage Capacity and SD Card Slot

4. Operating Instructions

4.1 Touchscreen & Gesture Operation

The MP3 player features a full-touch screen with upgraded gesture operation. Navigate through menus and options by tapping and swiping. Swipe from left to right on the left side of the screen to return to the previous screen. Swipe from bottom to top on the bottom of the screen to exit to the main screen.



Figure 5: Touchscreen Gesture Controls

4.2 Music Playback

Tap the 'Music' icon on the main screen to access your music library. You can browse by artist, album, genre, or all songs. The player supports MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, and ACELP formats. Use the built-in speaker or connect wired earphones for audio output.

Built-in Speaker

You can get rid of wired headphones,
enjoy music more comfortable and more convenient



Figure 6: Built-in Speaker Functionality

4.3 Bluetooth Connection

The MP3 player features Bluetooth 5.3 for stable and compatible connections with Bluetooth headphones or speakers. To connect, tap the 'Bluetooth' icon, turn on Bluetooth, and search for available devices. Select your device from the list to pair. **Note: Bluetooth cannot be paired with mobile phones or PCs.**

Bluetooth 5.3 Connection

It is compatible with Bluetooth headphone and Bluetooth speaker easier and faster connecting.



For
Bluetooth Headphone



For
Bluetooth earbuds



For
Bluetooth Speaker

Figure 7: Bluetooth 5.3 Connection

4.4 FM Radio

To use the FM Radio, plug in the wired earphones as they act as the antenna. Tap the 'FM Radio' icon, then use the on-screen controls to scan for stations or manually tune to a frequency. You can save your favorite stations.

FM Radio & Recording

You can not only listen to the Radio, but also record your favorite radio and save it.



Figure 8: FM Radio and Recording

4.5 E-Book & Photo Viewing

Access your e-books by tapping the 'E-Book' icon. The device supports text files. For photos, tap the 'Photo' icon to view images stored on the device or SD card.

4.6 Voice Recording

Tap the 'Recorder' icon to access the voice recording function. You can record audio directly using the built-in microphone.

4.7 Other Functions

💡 Tips:

Please plug in wired headset firstly if listening FM radio by connecting Bluetooth headphone or speaker.(Wired headphone is used to be antenna)

The device includes additional tools such as a calendar, alarm clock, and stopwatch. Access these by tapping the 'Tools' icon.



Figure 9: Multi-functional Capabilities

Your browser does not support the video tag.

Video 2: Quick demonstration of Tokemisc MP3 Player features.

5. Maintenance

5.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the surface. Keep the screen clean to ensure optimal touch responsiveness.

5.2 Storage

Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures. Avoid dropping the device or exposing it to water.

6. Troubleshooting

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device fully.
Cannot connect to Bluetooth headphones.	Headphones not in pairing mode; device already paired with another device.	Ensure headphones are in pairing mode. Disconnect from other devices. Restart MP3 player and try again.
No FM radio signal.	Earphones not plugged in or not acting as antenna.	Ensure wired earphones are securely plugged in. Try repositioning the device for better reception.
Cannot transfer files from computer.	Incorrect USB cable or connection mode.	Use the provided Type-C cable. Ensure the device is connected in data transfer mode (if prompted).

7. Specifications

Feature	Detail
Product Dimensions	2.76 x 1.97 x 0.35 inches
Item Weight	2.47 ounces
Internal Storage	16 GB
Expandable Storage	Max 256 GB (Micro SD Card, not included)
Connectivity Technology	Bluetooth 5.3, USB
Screen Size	2.4 Inches
Special Features	Built-In Speaker, Equalizer, FM Radio, Full Touchscreen, Voice Recording, E-Book, Photo, Alarm Clock, Stopwatch, Calendar
Compatible Devices	Bluetooth Headphones, Wired Earphones, Speakers, Windows PC

Feature	Detail
Media Type	MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP
Batteries	1 Lithium Polymer battery (included)

8. Warranty and Support

For warranty information and technical support, please refer to the official Tokemisc website or contact customer service through your point of purchase. Keep your purchase receipt as proof of purchase for warranty claims.

An official User Manual (PDF) is also available for download:[Download User Manual \(PDF\)](#)