

- Manuals.plus /
- › JAUYXIAN /
- › JAUYXIAN Mini Karaoke Machine D25P-T User Manual

JAUYXIAN D25P-T

JAUYXIAN Mini Karaoke Machine
MODEL: D25P-T USER MANUAL

1. Introduction

The JAUYXIAN Mini Karaoke Machine D25P-T is a portable Bluetooth speaker system designed for entertainment. It features a compact design, two wireless microphones, and various sound and light effects to enhance your singing experience. This manual provides essential information for setting up, operating, and maintaining your karaoke machine.



Image: The JAUYXIAN Mini Karaoke Machine, featuring the main speaker unit and two wireless microphones.

2. What's Included

Please check the package contents to ensure all items are present:

- 1 x Mini Karaoke Machine (Speaker Unit)
- 2 x Wireless Microphones
- 1 x USB Type-C Charging Cable (for speaker and microphones)

3. Product Features

- **Crystal-Clear Sound:** Equipped with a 2024 new chip and advanced audio drivers for rich and deep sound quality.
- **Portable Design:** Compact and lightweight with a convenient handle for easy transport.
- **Magic Sound Effects:** Transform your voice into male, female, baby, or monster tones for added fun.
- **Luminous Rhythmic Aura:** Features a colorful LED light show with multiple modes to enhance the atmosphere.
- **Dual Wireless Microphones:** Two dynamic microphones allow for duets and shared fun.
- **Independent Volume Control:** Adjust microphone and music volume separately.

- **Vocal Removal:** Option to remove or restore music vocals.
- **Multiple Connectivity:** Supports Bluetooth 5.3, Aux-in, TF card, and USB connections.
- **Rechargeable Batteries:** Built-in Lithium Ion batteries for extended use.



Image: Diagram illustrating the various connectivity options and features of the karaoke machine.

4. Setup

4.1 Charging the Device

Before first use, fully charge the karaoke machine speaker and both microphones. Use the provided USB Type-C charging cable. The charging port for the speaker is located on the back panel, and for the microphones, it's at the bottom.

- A red indicator light on the device typically means it is charging.
- The light will turn off or change color (e.g., blue) when fully charged.

4.2 Power On/Off

- **Speaker:** Long press the power button (often labeled 'M' or with a power icon) on the top panel of the speaker unit to turn it on or off. A voice prompt will confirm the status.
- **Microphones:** Long press the power button on each microphone to turn it on or off. A blue indicator light will illuminate when the microphone is on.

4.3 Bluetooth Pairing

To connect your karaoke machine to a smartphone, tablet, or other Bluetooth-enabled device:

1. Ensure the karaoke machine speaker is powered on and in Bluetooth mode (indicated by a voice prompt or flashing blue light).
2. On your device, go to Bluetooth settings and search for available devices.
3. Select the karaoke machine (e.g., 'JAUYXIAN Karaoke') from the list.
4. Once connected, a voice prompt will confirm successful pairing.

5. Operating Instructions

5.1 Speaker Controls

- **Volume Up/Down:** Use the '+' and '-' buttons on the speaker to adjust the music volume.

- **Play/Pause/Power:** Short press the 'M' button to play or pause music. Long press to power on/off.
- **Light Modes:** Double-click the 'M' button to change the colorful LED light modes.
- **Mode Switch:** Short press the mode button (often labeled with 'M' or a mode icon) to switch between Bluetooth, Aux, TF card, and USB modes.

5.2 Microphone Controls

- **Power On/Off:** Long press the power button on the microphone.
- **Microphone Volume:** Use the '+' and '-' buttons on the microphone to adjust its volume.
- **Magic Sound Effects:** Short press the 'M' button on the microphone to cycle through different voice changing effects (male, female, baby, monster).
- **Previous/Next Song:** Long press the '+' button for the next song, and long press the '-' button for the previous song (when connected via Bluetooth).



Image: Detailed view of microphone controls for power, volume, and voice effects.

Video: A demonstration of the D25-T mini karaoke machine, showcasing its features and operation.

6. Maintenance

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the karaoke machine in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Charge regularly, even if not in use for extended periods.

7. Troubleshooting

- **No Sound:** Ensure the speaker and microphones are powered on and charged. Check volume levels on both the speaker and your connected device. Verify Bluetooth connection.
- **Microphone Not Working:** Ensure the microphone is charged and powered on. Re-pair the microphone with the speaker if necessary.
- **Bluetooth Disconnection:** Ensure your device is within the operating range (typically 10 meters) and there are no obstructions. Try re-pairing the device.
- **Distorted Sound:** Reduce the volume on both the speaker and your connected device. Ensure the microphones are not too close to the speaker.

8. Specifications

Specification	Detail
Model Number	D25P-T
Item Weight	1.3 pounds
Product Dimensions	5 x 5 x 5 inches
Batteries	1 Lithium Ion battery required (included)
Color	Pink
Compatible Devices	PC, Smartphone, Tablet, iPad, iPhone
Connector Type	USB Type C
Speaker Count	1
Microphones	2 Wireless Mics
Power Source	Battery Powered
Special Features	Light Up Speaker, Lightweight, Portable, Rechargeable

9. Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact JAUYXIAN customer service directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CRRG5LXQ>

More documents and user manuals: <https://manuals.plus/>