

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER Powerseries+ Corded 3-in-1 Stick Vacuum User Manual (Model BDVS2-AZ)

BLACK+DECKER BDVS2-AZ

BLACK+DECKER Powerseries+ Corded 3-in-1 Stick Vacuum User Manual

Model: BDVS2-AZ

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your BLACK+DECKER Powerseries+ Corded 3-in-1 Stick Vacuum, Model BDVS2-AZ. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. This appliance is for household use only.

- Do not leave the appliance unattended when plugged in.
- Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

PRODUCT OVERVIEW

The BLACK+DECKER Powerseries+ Corded 3-in-1 Stick Vacuum is designed for versatile cleaning across multiple surfaces. It can be used as an upright stick vacuum or converted into a handheld vacuum for targeted cleaning.



Figure 1: The BLACK+DECKER Powerseries+ vacuum shown in its full stick vacuum form and as a detached handheld unit, alongside its brush and crevice tool attachments. This illustrates the product's versatility for various cleaning tasks.

Key Features:

- **3-in-1 Versatility:** Easily converts from a stick vacuum to a handheld vacuum.

- **Powerful Suction:** 14,000 Pa suction for effective cleaning.
- **LED Floor Head:** Illuminates cleaning path to reveal hidden debris.
- **HEPA Filtration:** Captures allergens and fine particles for improved air quality.
- **Lightweight Design:** Easy to maneuver and store.

SETUP AND ASSEMBLY

Follow these steps to assemble your BLACK+DECKER Powerseries+ Stick Vacuum.

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components listed in the packing list are present.
2. **Attach the Handle:** Insert the handle into the main body of the vacuum until it clicks securely into place.
3. **Connect the Floor Head:** Attach the main floor head to the bottom of the vacuum body. Ensure it is firmly connected.
4. **Cord Management:** Wrap the power cord around the integrated cord hooks on the vacuum for tidy storage when not in use.





Figure 2: Front view of the fully assembled BLACK+DECKER Powerseries+ stick vacuum, ready for use. The power cord is neatly wrapped around the side hooks.





Figure 3: Side view of the assembled BLACK+DECKER Powerseries+ stick vacuum, highlighting its slim profile and the cord management system.

CONVENIENT ACCESSORY STORAGE



**BRUSH
TOOL**

**CREVICE
TOOL**

Figure 4: Back view of the assembled BLACK+DECKER Powerseries+ stick vacuum, showing the rear of the motor unit and the handle connection point.

OPERATING INSTRUCTIONS

Using as a Stick Vacuum:

1. **Plug In:** Insert the power cord into a suitable electrical outlet.

2. **Power On:** Press the power button located on the handle to turn on the vacuum. The LED floor head lights will illuminate.
3. **Vacuuming:** Guide the vacuum across the desired surface. The powerful suction and brush roll will collect debris.
4. **Multi-Surface Cleaning:** The vacuum is suitable for hard floors and low-pile carpets.



Figure 5: The BLACK+DECKER Powerseries+ stick vacuum actively cleaning a carpeted surface, demonstrating its suction power on visible debris. The LED lights on the floor head are visible.

BRIGHT LED FLOOR HEADLIGHTS



Figure 6: The BLACK+DECKER Powerseries+ vacuum head with bright LED headlights illuminating dust and debris under a piece of furniture, showcasing its ability to clean in dimly lit areas.

Converting to Handheld Vacuum:

1. **Detach Main Unit:** Press the release button to detach the main vacuum unit from the extension wand and floor head.
2. **Attach Accessories:** Select the appropriate accessory (crevice tool or brush tool) and attach it directly to the handheld unit's nozzle.
3. **Targeted Cleaning:** Use the handheld unit for cleaning upholstery, stairs, car interiors, or other hard-to-reach areas.



Figure 7: The BLACK+DECKER Powerseries+ vacuum configured as a handheld unit, with the crevice tool attached, demonstrating its use for cleaning tight spaces like between couch cushions.

Accessory Storage:

The vacuum includes convenient accessory storage for the brush tool and crevice tool, ensuring they are always within reach.



Figure 8: The BLACK+DECKER Powerseries+ vacuum with its brush tool and crevice tool shown alongside, illustrating how they can be stored conveniently on the unit or a wall mount.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying the Dust Cup:

1. **Power Off and Unplug:** Ensure the vacuum is turned off and unplugged from the power outlet.
2. **Release Dust Cup:** Press the dust cup release button and remove the dust cup from the main unit.
3. **Empty Contents:** Hold the dust cup over a trash receptacle and open the bottom flap to empty debris.
4. **Reattach:** Close the flap and reattach the dust cup to the vacuum until it clicks securely.

Cleaning the HEPA Filter:

The HEPA filter should be cleaned regularly to maintain suction power and air filtration efficiency.

1. **Remove Filter:** With the dust cup removed, carefully pull out the HEPA filter assembly.
2. **Clean Filter:** Tap the filter gently over a trash can to remove loose dust. For a more thorough cleaning, rinse the filter under cool running water.
3. **Dry Completely:** Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum. Do not use the vacuum with a wet filter.
4. **Reassemble:** Once dry, place the filter back into the dust cup and reattach the dust cup to the vacuum.

Cleaning the Brush Roll:

Periodically check the brush roll for tangled hair or debris that may reduce cleaning effectiveness.

1. **Power Off and Unplug:** Always ensure the vacuum is off and unplugged.
2. **Access Brush Roll:** Turn the floor head over. Depending on the model, you may need to use a coin or screwdriver to unlock the brush roll cover.
3. **Remove Debris:** Carefully cut and remove any hair or string tangled around the brush roll.
4. **Reassemble:** Replace the brush roll cover and secure it.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Not plugged in; power outlet not working; power button not pressed.	Ensure plug is fully inserted. Test outlet with another appliance. Press power button firmly.
Low suction.	Dust cup full; filter clogged; blockage in nozzle/hose; brush roll tangled.	Empty dust cup. Clean HEPA filter. Check for and remove blockages. Clean brush roll.
Vacuum not picking up debris.	Brush roll not spinning; floor head clogged; low suction.	Check brush roll for obstructions. Clear any blockages in the floor head. Refer to "Low suction" solutions.
Unusual noise.	Blockage in air path; foreign object in brush roll.	Turn off and unplug. Inspect all air paths and brush roll for obstructions and remove them.

SPECIFICATIONS

- **Model:** BDVS2-AZ
- **Brand:** BLACK+DECKER
- **Type:** Corded 3-in-1 Stick Vacuum

- **Suction Power:** 14,000 Pa
- **Filtration:** HEPA Filter
- **Dust Cup Capacity:** 700 Milliliters
- **Wattage:** 450 Watts
- **Hose Length:** 21 Feet (Power Cord)
- **Product Dimensions:** 9.2"L x 8"W x 45"H
- **Item Weight:** 7.25 pounds
- **Special Features:** Bagless, Hypoallergenic, Lightweight, LED Floor Head
- **Recommended Use:** Indoor, Hard Floor, Low Carpet, Pet Hair

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official BLACK+DECKER website. Keep your purchase receipt as proof of purchase.

Manufacturer: Silverpoint Tech

UPC: 850059643044

