



[Manuals.plus](#) /

> [plusOne](#) /

> plusOne Private Pleasure Bullet Vibrator User Manual

plusOne 6768PNK

plusOne Private Pleasure Bullet Vibrator User Manual

Model: 6768PNK

INTRODUCTION

Thank you for choosing the plusOne Private Pleasure Bullet Vibrator. This device is designed for personal wellness, offering powerful and discreet sensations. Crafted from body-safe silicone, it features multiple vibration settings, a quiet motor, and a hygienic design for comfortable and private use. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

SAFETY INFORMATION

- **Body-Safe Materials:** This product is made from 100% body-safe silicone, free of phthalates, BPA, and latex.
- **For External Use Only:** This device is intended for external use.
- **Waterproof:** The device is fully waterproof and safe for use in the shower or bath. Ensure the charging port is dry before charging.
- **Charging Safety:** Use only the provided charging cable. Do not use the device while charging. Keep away from water during charging.
- **Storage:** Store in a cool, dry place, away from direct sunlight and extreme temperatures. Use the privacy cover for hygienic and discreet storage.
- **Discontinue Use:** If you experience any discomfort or irritation, discontinue use immediately and consult a healthcare professional.

PRODUCT OVERVIEW



The plusOne Private Pleasure Bullet Vibrator, presented with its retail packaging, highlighting its compact size and discreet design.



Key features of the vibrator, including its sleek cover for discretion, tapered design for targeted stimulation, body-safe silicone material, power button, and hygienic properties.

Components:

- Bullet Vibrator Unit
- Sleek Privacy Cover
- USB Charging Cable
- Storage Pouch



The complete package contents, including the vibrator, privacy cover, instruction manual, USB charging cable, and a convenient storage pouch.

SETUP

Initial Charging:

1. Before first use, fully charge your plusOne Private Pleasure Bullet Vibrator.
2. Locate the charging port at the base of the vibrator.
3. Insert the provided USB charging cable into the port.
4. Connect the other end of the USB cable to a USB power source (e.g., computer, wall adapter).
5. The indicator light will illuminate during charging and turn off when fully charged. A full charge typically takes approximately 2 hours and provides up to 2 hours of use.

quick charging cable included



The vibrator connected to its USB charging cable, demonstrating how to charge the device.

OPERATING INSTRUCTIONS

Power On/Off:

- To turn on, press and hold the power button (located on the vibrator's body) for 3 seconds. The device will start vibrating.
- To turn off, press and hold the power button for 3 seconds again.

Changing Vibration Settings:

- While the device is on, short press the power button to cycle through the 10 unique vibration modes.
- Experiment with different settings to find your preferred sensation.

private pleasure bullet



10
vibration
modes



The vibrator offers 10 distinct vibration modes for varied sensations.



The discreet cover ensures the device remains off during travel, and the image highlights its quiet operation and varied vibration patterns.

Discreet Storage:

- The device comes with a sleek privacy cover that locks into place. This cover helps prevent accidental activation and keeps the device hygienic.
- Place the cover over the vibrator when not in use for discreet and clean storage.





Demonstration of attaching the privacy cover for secure and discreet storage.

Official Product Video:

This official video from plusOne provides a visual overview of the Private Pleasure Vibe's features, including its sleek design, quiet operation, multiple settings, and easy charging. It demonstrates the product's discreet cover and highlights its body-safe silicone material.

MAINTENANCE

Cleaning:

- Clean the vibrator thoroughly after each use.
- Wash the silicone surface with warm water and a mild soap, or use a toy cleaner specifically designed for silicone products.
- Rinse thoroughly and pat dry with a lint-free cloth.
- Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.



The vibrator is fully waterproof, making it easy to clean under running water or in the shower.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-------------------------------|---|---|
| Device does not turn on. | Low battery or not charged. | Charge the device fully using the provided USB cable. Ensure the power button is held for 3 seconds to turn on. |
| Vibrations are weak. | Low battery. | Recharge the device. |
| Device not holding a charge. | Faulty cable or charging port. | Try a different USB power source. If the issue persists, contact customer support. |
| Device turns on accidentally. | Privacy cover not used or not properly secured. | Always use the sleek privacy cover when storing or traveling with the device to prevent accidental activation. |

SPECIFICATIONS

- **Model:** 6768PNK
- **Material:** Body-Safe Silicone
- **Color:** Pink
- **Vibration Modes:** 10
- **Power Source:** Rechargeable USB
- **Battery Life:** Up to 2 hours of use per charge
- **Waterproof:** Yes
- **Dimensions:** Approximately 3.5 inches in length.
- **Manufacturer:** Clio Designs Incorporated
- **Country of Origin:** China

3.5 inches



The compact size of the vibrator, measuring approximately 3.5 inches.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the packaging or visit the official plusOne website. Keep your proof of purchase for any warranty claims.

Online Support: [Visit the plusOne Store on Amazon](#)

© 2024 plusOne. All rights reserved.