

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Ufree](#) /

› Ufree Hair Clippers and Trimmers Set Instruction Manual

Ufree U-2116

Ufree Hair Clippers and Trimmers Set Instruction Manual

Model: U-2116 | Brand: Ufree

1. INTRODUCTION AND OVERVIEW

The Ufree Hair Clippers and Trimmers Set (Model U-2116) is a professional-grade grooming kit designed for versatile hair cutting and beard trimming. This cordless set features powerful motors, sharp and safe blades, and a long-lasting rechargeable battery, making it ideal for both home and professional use. Achieve precise cuts, fades, and detailed styling with ease and comfort.



Figure 1: Ufree Hair Clippers and Trimmers Set with included accessories.

2. WHAT'S IN THE BOX

Your Ufree Hair Clippers and Trimmers Set includes the following components:

- 1x Professional Hair Clipper (Black Gold)
- 1x Precision Hair Trimmer (Black Gold)

- 4x Hair Clipper Guard Attachments (1/8" 3mm, 1/4" 6mm, 3/8" 10mm, 1/2" 13mm)
- 3x Trimmer Guide Combs (1.5mm, 3mm, 4.5mm)
- 2x USB Charging Cables
- 1x Lubricating Oil
- 1x Cleaning Brush
- 1x Storage Pouch
- 1x Instruction Manual

3. SETUP

1. **Initial Charge:** Before first use, fully charge both the hair clipper and the precision trimmer. The hair clipper requires approximately 3 hours for a full charge, providing up to 180 minutes of use. The precision trimmer requires approximately 2 hours for a full charge, providing up to 150 minutes of use. The LCD display on the clipper and indicator light on the trimmer will show charging status.



Figure 2: Fast charge technology for both clipper and trimmer.

2. **Blade Oiling:** Apply a few drops of the included lubricating oil to the blades of both the clipper and trimmer before the first use and periodically thereafter. This ensures smooth operation and extends blade life.

3. **Attach Guide Combs:** Select the desired guide comb (clipper guards or trimmer combs) based on the hair length you wish to achieve. Align the comb with the blade and snap it securely into place.



Figure 3: Various guide combs for different hair lengths.

4. OPERATING INSTRUCTIONS

- **Power On/Off:** Press the power button on each device to turn it on or off.
- **Adjusting Clipper Length:** The main hair clipper features an adjustable fade lever (0.8-2mm) for precise control over cutting length. Adjust the lever up or down to fine-tune the blade position.



Figure 4: Adjustable taper lever for precise length control.

- **Using Guide Combs:** For consistent hair length, always use the appropriate guide comb. Move the clipper/trimmer against the direction of hair growth for an even cut.
- **Precision Trimming:** The zero-gap T-blade trimmer is ideal for detailing, outlining hairlines, trimming beards, sideburns, and neck areas. Use without a comb for the closest trim.



Figure 5: Precision trimmer for detailed work.

- **Hair Cutting Tips:**

- Start with a longer comb length and gradually reduce it if a shorter cut is desired.
- For fading, use the adjustable lever to create smooth transitions between different lengths.
- Clean the blades frequently during use to prevent hair buildup and ensure optimal performance.

BARBERS' CHOICE & EVERYDAY USE



Figure 6: Versatile use for fading, beard trimming, and hair art.

5. MAINTENANCE

- **Cleaning Blades:** After each use, turn off the device and remove any attached guide combs. Use the included cleaning brush to remove loose hair from the blades and the device body.
- **Oiling Blades:** Regularly apply 1-2 drops of lubricating oil to the blades. Turn the device on for a few seconds to allow the oil to distribute evenly. This helps maintain blade sharpness and prevents rust.
- **Storage:** Store the clippers and trimmers in a dry, cool place, preferably in the provided storage pouch, away from direct sunlight and moisture. Ensure devices are fully charged before long-term storage.

6. TROUBLESHOOTING

- **Device Not Turning On:**
 - Check battery level on the LCD display (clipper) or indicator light (trimmer).
 - Ensure the device is fully charged using the provided USB cable.
 - Verify the charging cable is properly connected to both the device and a power source.

• **Poor Cutting Performance / Pulling Hair:**

- Clean the blades thoroughly to remove any trapped hair or debris.
- Apply lubricating oil to the blades.
- Ensure the blades are properly aligned.
- The battery might be low; recharge the device.

• **Excessive Noise/Vibration:**

- Clean and oil the blades.
- Check for any loose parts or damage. If the issue persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Ufree
Model	U-2116
Power Source	Rechargeable Lithium-Ion Battery
Clipper Battery Capacity	2000mAh
Clipper Runtime	Up to 180 minutes
Clipper Charging Time	Approximately 3 hours
Trimmer Battery Capacity	1800mAh
Trimmer Runtime	Up to 150 minutes
Trimmer Charging Time	Approximately 2 hours
Motor Speed (Clipper)	6200 RPM
Motor Speed (Trimmer)	6000 RPM
Noise Level	Less than 60 dB
Blade Material	Self-sharpening, Close Shave Blade
Adjustable Fade Lever	0.8-2mm
Trimmer Blade Type	Zero-gap T-blade
Included Components	Hair Clipper, Precision Trimmer, 4 Clipper Guards, 3 Trimmer Guide Combs, 2 USB Charge Lines, Lubricating Oil, Cleaning Brush
Country of Origin	China

Package Dimensions	8.9 x 5.87 x 2.76 inches; 1.41 Pounds
--------------------	---------------------------------------

8. WARRANTY AND SUPPORT

- **Warranty:** The Ufree Hair Clippers and Trimmers Set comes with a 12-month after-sale warranty.
- **Money Back Guarantee:** A 30-day money-back guarantee is provided for your peace of mind.
- **Customer Support:** Enjoy 24-hour customer support for any inquiries or assistance you may need.
- **Contact:** If you have any questions or encounter any issues, please do not hesitate to contact Ufree customer service.

9. IMPORTANT SAFETY INFORMATION

- Always follow safety precautions as indicated in the product description.
- Begin cutting hair on the lower neck area and move the clippers upwards against the direction of hair growth.
- Keep out of reach of children.
- Do not immerse the device in water.
- Use only the provided charging cables.

10. LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

© 2024 Ufree. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CRSZ9F1Y>

More documents and user manuals: <https://manuals.plus/>