

[Manuals.plus](#) /

› [Braun](#) /

› Braun Electric Shaver Series 7 7177cc User Manual

Braun 7177cc

Braun Electric Shaver Series 7 7177cc User Manual

Model: 7177cc

[Product](#)

[Overview](#)

[EasyClick Attachments](#)

[Safety Information](#)

[Care & Maintenance](#)

[What's Included](#)

[Warranty &
Support](#)

[Initial](#)

[Setup](#)

[Troubleshooting](#)

[Operating Your](#)

[Shaver](#)

[Specifications](#)

PRODUCT OVERVIEW

The Braun Series 7 7177cc electric shaver is designed for a close and comfortable shave, adapting to your facial contours with its 360° Flex Head. It features multiple shave modes and AutoSense technology to adjust power based on beard density. This waterproof shaver is suitable for both wet and dry use.



This image displays the complete Braun Series 7 7177cc electric shaver set, including the shaver unit, SmartCare Center, travel pouch, body groomer, and beard trimmer with various combs.



3 shave modes including Turbo
For a faster shave

60 min battery runtime
With a 5 minute quick charge

100% waterproof
To use wet or dry

360 degree flex head
For a close shave in hard to reach areas

This graphic highlights the core features of the shaver: three distinct shave modes (Turbo, Standard, Gentle), a 60-minute battery runtime with a 5-minute quick charge option, full waterproof capability for wet or dry use, and a 360-degree flex head for adapting to contours.

IMPORTANT SAFETY INFORMATION

WARNING: Use with caution to avoid cuts. Keep out of reach of children. Do not use while charging. Clean after each use to prevent bacterial growth.

WHAT'S INCLUDED IN YOUR SET

Your Braun Series 7 7177cc package includes:

- 1x Series 7 electric shaver
- 1x SmartCare Center (cleaning and charging station)
- 1x Travel Pouch
- 1x Body Groomer attachment
- 1x Beard Trimmer attachment

- 1-3, 5, and 7 mm Trimming Combs for the beard trimmer
- Power cord
- Cleaning fluid cartridge for SmartCare Center



This image visually lists all components included in the product box, ensuring users can verify their package contents.

INITIAL SETUP

Charging the Shaver

Before first use, fully charge your shaver.

1. Connect the power cord to the shaver's charging port or the SmartCare Center.
2. Plug the power adapter into an electrical outlet.
3. The LED display on the shaver will indicate charging progress. A full charge provides up to 60 minutes of cordless shaving. A 5-minute quick charge is available for one shave.

Adjusts to contours

for a close shave,
even in tricky areas



This image shows the base of the shaver where the power cord connects for direct charging.

SmartCare Center Setup

The SmartCare Center automatically cleans, lubricates, dries, and charges your shaver.

1. Open the SmartCare Center by pressing the button on the side.
2. Insert a cleaning fluid cartridge into the base until it clicks into place.
3. Close the SmartCare Center.
4. Place the shaver head-down into the SmartCare Center. Ensure it clicks into place.
5. The cleaning cycle will begin automatically or can be initiated by pressing the start button.

This video clip illustrates the process of preparing the SmartCare Center for use, from opening the unit to correctly positioning the cleaning cartridge and the shaver for automatic maintenance.


OPERATING YOUR SHAVER

Shaving Modes

The Series 7 offers three distinct shaving modes to customize your experience:

- **Standard Mode:** For a balanced and efficient shave.
- **Turbo Mode:** Provides extra power for a faster shave, ideal for dense beards.
- **Gentle Mode:** Reduces power for a softer shave, suitable for sensitive skin.

To switch between modes, press the mode selection button below the power button.

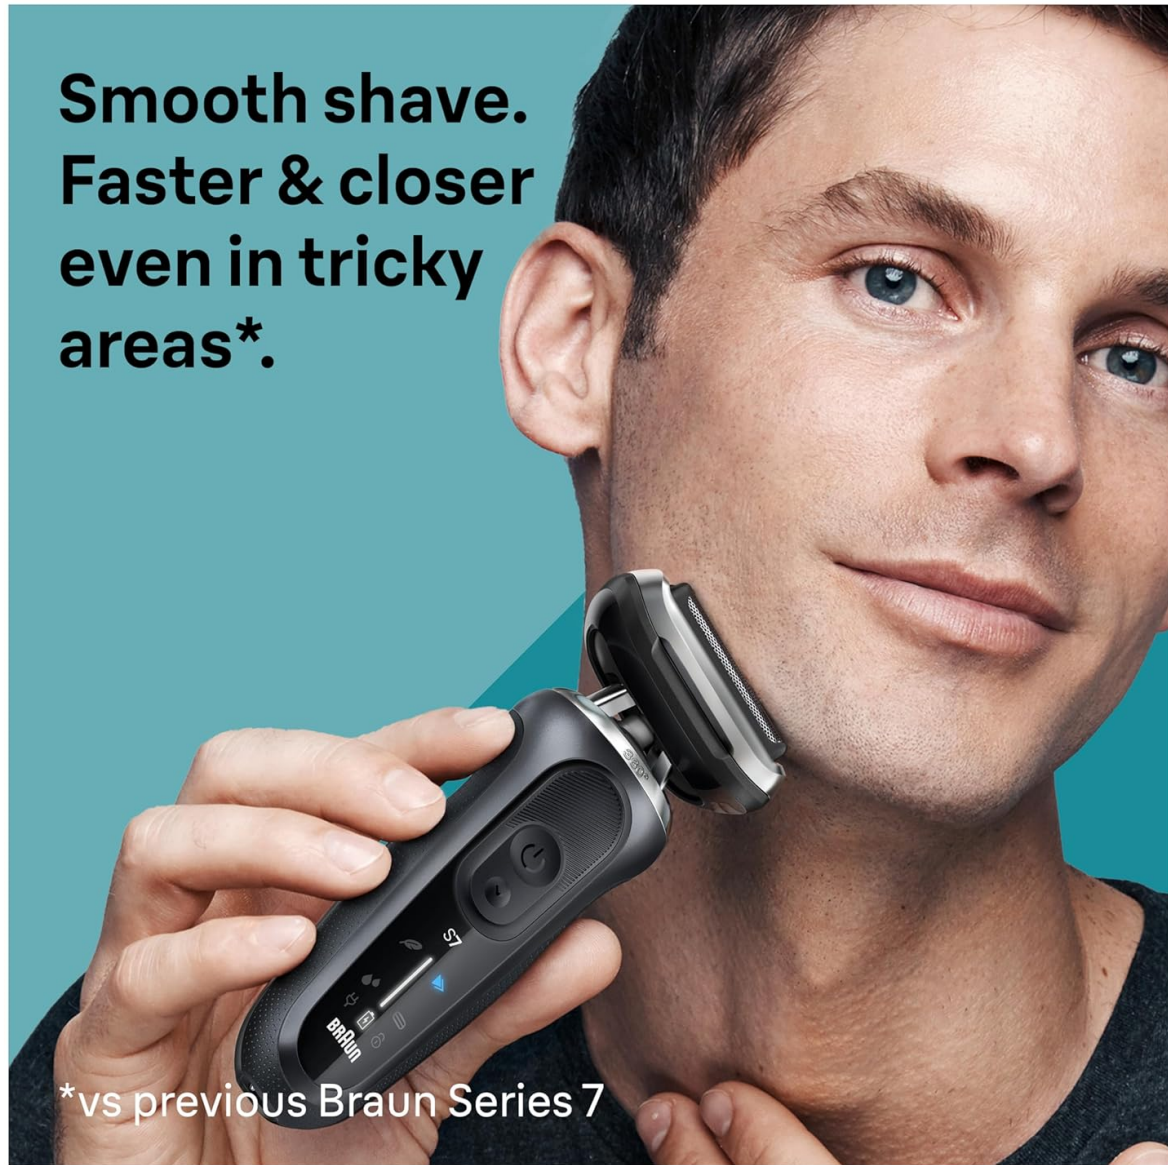

This image shows the shaver in action, highlighting its flexible head that moves across the face to maintain constant skin contact, even in difficult areas.



This close-up emphasizes the shaver's Turbo mode, which provides an extra boost of power for quicker and more efficient shaving, particularly useful for thicker hair.

Wet & Dry Use

Your Braun Series 7 shaver is 100% waterproof. You can use it dry, with shaving foam or gel, or even in the shower for a refreshing experience.



100%
waterproof

Shave wet or dry, or use
a shaving foam for a refreshing
skin feeling.
Made in Germany,
built to last.


This image showcases the shaver's waterproof capability, allowing it to be used with water, foam, or gel, or even in the shower.

EASYCLICK ATTACHMENTS

Easily transform your shaver into a versatile grooming tool with the included EasyClick attachments.

Attaching and Detaching

1. To remove the shaver head, press the release buttons on the sides of the head and pull upwards.
2. To attach a new head (e.g., Beard Trimmer or Body Groomer), align it with the shaver body and press down until it clicks into place.

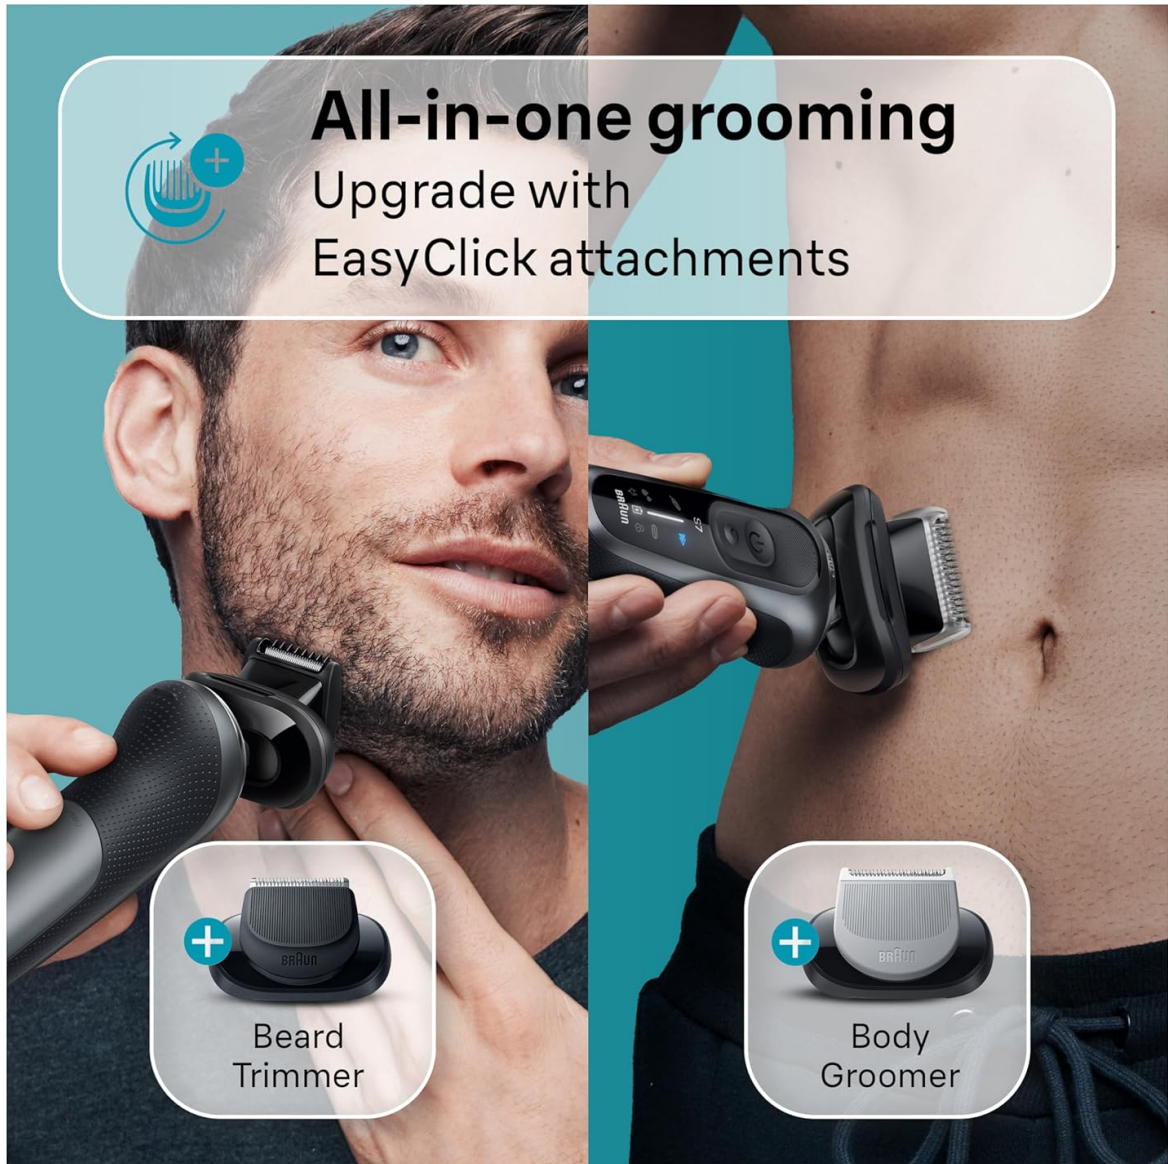

This image demonstrates the versatility of the shaver with its EasyClick attachments, showing how it can be used for both beard trimming and body grooming.

Beard Trimmer

The beard trimmer attachment allows you to style your beard from 1mm to 7mm. It comes with various combs for different lengths.

Body Groomer

The body groomer attachment is designed for efficient and easy full body shaving.

CARE & MAINTENANCE

Manual Cleaning

After each use, rinse the shaver head under warm running water. For a more thorough clean, remove the shaver head and rinse both the head and the shaver body.

SmartCare Center Cleaning

For ultimate hygiene and performance, use the SmartCare Center. It automatically cleans, lubricates, dries, and charges your shaver. Replace the cleaning cartridge approximately every 3 weeks, depending on usage.



This image highlights the SmartCare Center's functionality, which keeps the shaver hygienically clean, charged, and optimized for performance with the touch of a button.

Replacing Shaver Parts

For optimal performance, it is recommended to replace the shaver head (foil and cutter block) every 18 months.

Replacement parts can be purchased from authorized Braun retailers or the Braun official store.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver not turning on	Battery is depleted.	Charge the shaver using the power cord or SmartCare Center.
Poor shaving performance	Shaver head is worn or dirty; beard density is high.	Clean the shaver head thoroughly or replace it. Use Turbo mode for denser beards.
Irritation after shaving	Skin sensitivity; improper shaving technique.	Use Gentle mode. Shave against the grain with light pressure. Consider using shaving foam/gel.
SmartCare Center not cleaning	Cleaning cartridge is empty or not properly inserted.	Replace the cleaning cartridge. Ensure it is correctly seated.

TECHNICAL SPECIFICATIONS

- **Model Name:** Series 7
- **Item Model Number:** 72-G7650cc
- **Power Source:** Battery Powered (Lithium Ion)
- **Battery:** 1 Lithium Ion battery required (included)
- **Special Feature:** Faster Shave, 360° Flex Head, AutoSense Technology, Wet & Dry Use

- **Recommended Uses:** Beard
- **Manufacturer:** Procter & Gamble
- **GTIN/UPC:** 069055141601
- **Package Dimensions:** 10 x 6.38 x 6.26 inches
- **Item Weight:** 2.47 Pounds

WARRANTY & SUPPORT

Braun electric shavers are designed for durability and quality. For specific warranty details, please refer to the warranty card included in your product packaging.

For further assistance, product registration, or to purchase accessories and replacement parts, visit the official Braun Store: [Braun Official Store](#).

You may also consider purchasing extended protection plans for your product:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly plan covering multiple eligible purchases)