

[Manuals.plus](#) /

> [Koonie](#) /

> Koonie Portable Clip On Fan Instruction Manual

Koonie KN-VP001

Koonie Portable Clip On Fan Instruction Manual

Model: KN-VP001

Brand: Koonie

1. INTRODUCTION

Thank you for choosing the Koonie Portable Clip On Fan. This compact and versatile fan is designed to provide personal cooling in various settings, from your desk to a baby stroller or during outdoor activities. Featuring a powerful yet quiet airflow, a 360-degree rotatable design, and a convenient LED display for battery and speed settings, this fan offers comfort and convenience. Please read this manual carefully before use to ensure proper operation and maintenance.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Quiet but Powerful Airflow:** Engineered for strong airflow (up to 4.5m/s) with minimal noise, suitable for quiet environments.
- **Easy Clamp & 360° Rotate:** Features a robust clip (max open width 2 inches) for secure attachment to various surfaces and a 360-degree adjustable head for directional airflow.
- **Baby-safe Fan Frame:** Redesigned front grille with narrow spacing to prevent small fingers from entering, ensuring safety for children.
- **Digital Display:** An integrated LED display clearly shows battery level and the selected fan speed (1, 2, or 3).
- **Rechargeable and Portable:** Equipped with a 2000mAh battery providing up to 10 hours of operation, and a compact, lightweight design for easy transport.

2.2 Product Components

The Koonie Portable Clip On Fan consists of the following main components:

- Fan Head with Blades and Grille
- Digital LED Display
- Power Button / Speed Control Button

- USB-C Charging Port
- Adjustable Arm / Pivot Joint
- Strong Clip Base



Figure 2.1: Overview of the Koonie Portable Clip On Fan.



Figure 2.2: Close-up of the digital display showing fan speed.

3. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not disassemble, repair, or modify the fan yourself. Contact qualified service personnel for repairs.
- Keep the fan away from water, moisture, and high temperatures.

- Do not insert fingers or foreign objects into the fan grille while it is operating.
- Use only the provided charging cable or a compatible USB-C cable for charging.
- Ensure the fan is placed on a stable surface or securely clipped before operation.
- Keep out of reach of small children when not in use, despite the baby-safe design.
- Avoid dropping the fan or subjecting it to strong impacts.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the fan. The digital display will show the battery percentage.

1. Locate the USB-C charging port on the fan.
2. Connect the provided USB-C cable to the fan's charging port.
3. Connect the other end of the USB-C cable to a compatible USB power adapter (not included) or a computer USB port.
4. The digital display will show the charging status. A full charge typically takes approximately 2.5 hours.

We Have No Blind Spots

Adjust angle at any time to get cool breeze



Figure 4.1: Connecting the USB-C charging cable to the fan.

4.2 Placement and Clipping

The fan's versatile clip allows for easy attachment to various surfaces.

1. Open the clip by pressing the lever at the back of the base.
2. Attach the clip securely to a desk, shelf, stroller handle, treadmill, or other suitable surface. Ensure the surface thickness does not exceed 2 inches for optimal grip.
3. Once clipped, adjust the fan head to your desired angle. The fan supports 360-degree rotation for comprehensive airflow direction.

Choose Your Comfort Zone

Adjust the Wind Speed You Need, 1-2-3



Figure 4.2: Fan clipped securely to a baby stroller.



Figure 4.3: Demonstrating the 360-degree rotation capability.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Speed Control

The fan features a single button for power and speed adjustment.

1. **To Power On:** Press the power button once. The fan will start at Speed 1, and the digital display will show '1' and the current battery percentage.
2. **To Adjust Speed:** Press the power button again to cycle through speeds:
 - Press once for Speed 1 (low).
 - Press twice for Speed 2 (medium).
 - Press three times for Speed 3 (high).
3. **To Power Off:** After Speed 3, press the power button a fourth time to turn the fan off.

5.2 Digital Display Interpretation

The LED display provides real-time information:

- **Battery Percentage:** Shows the remaining battery charge (e.g., '100%' for full).
- **Fan Speed:** Displays the current speed setting ('1', '2', or '3').

6. MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your fan.

6.1 Cleaning the Fan

To clean the fan blades and grille:

1. Ensure the fan is powered off and disconnected from any charging source.
2. Gently twist and remove the front grille cover.
3. Rinse the removed grille cover directly with water. Allow it to dry completely before reattaching.
4. Wipe the fan blades with a dry paper towel or a soft, dry cloth. Do not use water or liquid cleaners directly on the fan body or motor.
5. Once both parts are dry, align the grille cover and twist it back into place until secure.



Figure 6.1: Instructions for removing the fan cover for cleaning.

6.2 Battery Care

- Charge the fan regularly, even if not in frequent use, to maintain battery health.
- Avoid completely draining the battery before recharging.
- Store the fan in a cool, dry place when not in use for extended periods.

7. TROUBLESHOOTING

If you encounter issues with your Koonie Portable Clip On Fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan fully using the USB-C cable.

Problem	Possible Cause	Solution
Fan airflow is weak.	Low battery.	Recharge the fan.
	Fan blades or grille are obstructed/dirty.	Clean the fan blades and grille as per Section 6.1.
Digital display is not working.	Battery is completely dead.	Connect to a power source to charge. The display should activate.
Fan makes unusual noise.	Obstruction in blades.	Power off the fan and check for any foreign objects. Clean if necessary.
	Fan is not securely clipped.	Ensure the fan is securely clipped to a stable surface.

If the problem persists after trying these solutions, please contact Koonie customer support for assistance.

8. SPECIFICATIONS

Feature	Specification
Brand	Koonie
Model Name	fan
Item Model Number	KN-VP001
Color	black
Electric Fan Design	Table Fan
Power Source	Battery Powered
Battery Type	1 Lithium Ion battery required (2000mAh)
Charging Time	Approx. 2.5 hours (with Type-C)
Operating Time	Up to 10 hours (depending on speed setting)
Number of Speeds	3 RPM
Control Method	Push Button / Touch
Rotation	360° Adjustable
Product Dimensions	6.69"D x 2.54"W x 5.31"H
Item Weight	0.7 pounds (0.33 Kilograms)
Clip Max Open Width	2 inches
Indoor/Outdoor Usage	Indoor
UPC	716151400667

9. WARRANTY AND SUPPORT

Koonie products are manufactured to high-quality standards. For information regarding warranty coverage, technical support, or replacement parts, please visit the official Koonie website or contact their customer service directly. You can find more information and contact details at the [Koonie Store on Amazon](#).

© 2025 Koonie. All rights reserved.
This manual is subject to change without notice.