

## Tineco Floor One Switch S7

# Tineco Floor One Switch S7 Multi-Function Cordless Stick Vacuum Cleaner Instruction Manual

Model: Floor One Switch S7

## 1. INTRODUCTION

The Tineco Floor One Switch S7 is a versatile 5-in-1 multi-function intelligent floor cleaner designed to replace traditional vacuum cleaners. It offers an efficient solution for tackling liquid spills, dry greasy stains, and other dirt that conventional vacuums cannot remove. Equipped with advanced cleaning and suction technology, it effortlessly handles daily messes and spills across various surfaces.



*Image: The Tineco Floor One Switch S7, showcasing its primary wet/dry floor cleaning mode and its detachable handheld vacuum configuration with various attachments.*

## 2. PACKAGE CONTENTS

Please verify that all items are included in your package:

- SwitchPro Motor
- Drying and Charging Station
- Additional Roller Brush
- Cleaning Tool
- Detergent Solution
- ZeroTangle Power Brush
- Mini Motorized Brush
- 2-in-1 Crevice Tool

*Image: An illustration detailing all components and accessories included with the Tineco Floor One Switch S7.*

### 3. SETUP

### 3.1 Assembly

1. Unpack all components from the packaging.
2. Insert the handle into the main body of the vacuum until it clicks securely into place.
3. Place the main unit onto the charging and drying station.
4. Ensure the clean water tank and dirty water tank are correctly installed.

### 3.2 Initial Charging

Before first use, fully charge the device. Connect the power adapter to the charging station and plug it into a wall outlet. The LED display will indicate charging status. A full charge typically takes approximately 4-5 hours.

## 4. OPERATING MODES

The Tineco Floor One Switch S7 offers versatile cleaning with its SwitchPro motor, allowing seamless transition between floor washing and handheld vacuuming modes.

## 4.1 Floor Washing Mode

In this mode, the device functions as a wet/dry vacuum, ideal for hard floors. Fill the clean water tank with water and, if desired, Tineco cleaning solution. The intelligent iLoop™ sensor detects dirt levels and adjusts water flow and suction power automatically.

## 4.2 Handheld Vacuum Mode

Detach the main unit from the floor head to use it as a powerful handheld vacuum. Attach the appropriate accessories (e.g., mini motorized brush, 2-in-1 crevice tool) for cleaning upholstery, high surfaces, or tight spaces. This mode is suitable for dry debris only.



Image: The Tineco Floor One Switch S7 being used in various cleaning scenarios, demonstrating its adaptability for whole-home cleaning.

## 5. KEY FEATURES

### 5.1 MHCBS™ Technology

The Multi-Channel Cleaning Brush System (MHCBS™) ensures your floors are impeccably clean by continuously washing the brush with fresh water. An integrated scraper efficiently recycles dirty water, maintaining a constant supply of clean water at 450 rotations per minute for optimal cleaning performance.



Image: A visual representation of the MHCBS™ technology, showing how the floating scraper and continuous clean water system keep the brush clean during operation.

### 5.2 ZeroTangle Brush

The specially designed ZeroTangle brush effectively targets and removes hair, pet hair, and other fibers without tangling. This feature simplifies brush maintenance and ensures consistent cleaning performance, making it easy to vacuum both long and short hair.



Image: The ZeroTangle brush in action, demonstrating its ability to pick up hair and debris without becoming tangled, ensuring easy cleaning.



### 5.3 FlashDry Self-Cleaning System

The FlashDry system provides a comprehensive self-cleaning process. It uses 70°C heated clean water to dissolve stains and thoroughly clean the entire device, from the hose to the brush. Following this, the unit performs an internal drying cycle at 70°C for 5 minutes to eliminate residual water from all components. The roller brush rotates bi-directionally, using centrifugal force to dry and restore its volume, thereby reducing odors.



Image: An animated depiction of the FlashDry self-cleaning system, illustrating the use of 70°C water for cleaning and hot air for rapid drying of the roller brush.

### 5.4 PureCyclone Filtration

The 5-stage PureCyclone filtration system effectively separates air and dust, keeping the filter cleaner for longer. This maintains powerful and lasting suction performance, ensuring fresh air output.



Image: A detailed view of the 5-stage PureCyclone filtration system, highlighting its 8 cyclones for efficient air and dust separation.

### 5.5 iLoop™ Smart Sensor

Tineco's intelligent iLoop™ sensor detects real-time dust and debris, optimizing suction power and water flow for a thorough clean and extended battery life. The smart LED screen guides you through the cleaning process, displaying operational status and allowing selection of Auto, Max, Custom, or Suction modes based on dirt levels and situations.



Image: The intelligent LED display of the Tineco Floor One Switch S7, showing the iLoop™ sensor's real-time dirt detection and various cleaning modes.

## 5.6 Extended Battery Life

Redesigned battery cells ensure the Floor One Switch S7 maintains its exceptional cleaning power for an extended duration. Compared to other batteries, its lifespan is up to three times longer, guaranteeing prolonged use without interruption.

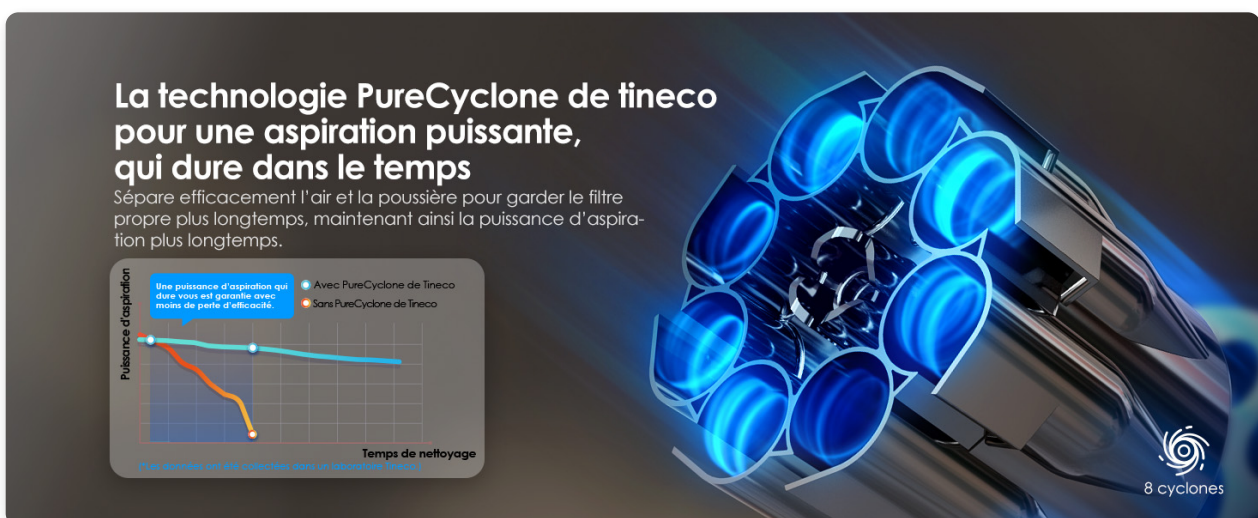


Image: A graphic illustrating the extended battery life of the Tineco Floor One Switch S7, demonstrating its superior longevity compared to standard batteries.

## 6. MAINTENANCE

### 6.1 Cleaning the Dirty Water Tank

After each use, empty and rinse the dirty water tank thoroughly to prevent odors and maintain hygiene. Remove the tank, discard the contents, and wash it with clean water. Allow it to air dry completely before reattaching.

### 6.2 Cleaning the Roller Brush

Regularly inspect the roller brush for any trapped debris or hair. While the ZeroTangle brush minimizes



tangles, occasional manual cleaning may be necessary. Remove the brush from the head and use the provided cleaning tool to remove any stubborn residue. Allow the brush to dry completely before reinstallation.

### 6.3 Filter Maintenance

The PureCyclone filtration system requires periodic cleaning. Remove the filter components and rinse them under running water. Ensure they are completely dry before placing them back into the device to prevent mold growth and maintain optimal suction.

### 6.4 Using the FlashDry Self-Cleaning System

To initiate the FlashDry self-cleaning cycle, ensure the device is placed on its charging station and has at least 20% battery life. Press the self-clean button. The device will automatically clean and dry the roller brush and internal components. This process helps maintain the device's cleanliness and prevents odors.

## 7. TROUBLESHOOTING

This section addresses common issues you might encounter with your Tineco Floor One Switch S7.

- **No Power/Device Not Turning On:** Ensure the battery is charged. Check if the power adapter is securely connected to both the charging station and the wall outlet.
- **Weak Suction:** Check if the dirty water tank is full and needs emptying. Inspect the roller brush and air ducts for blockages. Clean the filters as described in the maintenance section.
- **Water Leaking:** Verify that the clean water tank and dirty water tank are correctly installed and sealed. Check for any cracks or damage to the tanks.
- **Unpleasant Odor:** Empty and thoroughly clean the dirty water tank and roller brush after each use. Run the FlashDry self-cleaning cycle regularly.
- **Roller Brush Not Spinning:** Ensure the roller brush is correctly installed and free from obstructions. Check if the device is in the correct operating mode.

If you encounter issues not listed here or if the problem persists, please refer to the warranty and support section for further assistance.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Tineco
Model Number	Floor One Switch S7
Color	Black

Feature	Detail
Product Dimensions (L x W x H)	31 x 32.5 x 112 cm
Weight	5.3 Kilograms
Capacity (Clean Water Tank)	850 Milliliters
Power	250 Watts
Noise Level	78 Decibels
Battery Life	Up to 1 hour and 5 minutes
Special Features	ZeroTangle Brush, FlashDry at 70°C in 5 min, Front LED brush light, 5-in-1 Multi-function cleaner, PureCyclone 8-stage filtration
Filter Type	HEPA Filter
Surface Recommendation	Tiles, laminate, vinyl, epoxy, hardwood floors, marble, etc.
Power Source	Battery Powered
Voltage	25.2 Volts
Wireless	Yes

## 9. WARRANTY AND SUPPORT







Your Tineco Floor One Switch S7 comes with a manufacturer's warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included in your product packaging or visit the official Tineco website.

For technical support, spare parts, or customer service inquiries, please contact Tineco customer support through their official channels. Contact information can typically be found on the Tineco website or in your product documentation.

Always use genuine Tineco replacement parts and accessories to ensure optimal performance and to maintain your warranty.



Related Documents - Floor One Switch S7

	<p><a href="#">Manuel d'utilisation Tineco FLOOR ONE S9 ARTIST Nettoyeur de sol sans fil</a></p> <p>Guide complet pour le nettoyeur de sol sans fil Tineco FLOOR ONE S9 ARTIST, incluant consignes de sécurité, spécifications techniques, présentation de l'appareil, accessoires, instructions d'assemblage, fonctionnement, entretien, et guide de dépannage.</p>
	<p><a href="#">Tineco FLOOR ONE S7 SERIES Smart Cordless Floor Washer Instruction Manual</a></p> <p>Comprehensive instruction manual for the Tineco FLOOR ONE S7 SERIES Smart Cordless Floor Washer, detailing setup, operation, maintenance, and troubleshooting for optimal home cleaning.</p>
	<p><a href="#">Tineco iFloor BREEZE Compact Cordless Vacuum &amp; Washer Instruction Manual</a></p> <p>This instruction manual provides essential information for the safe and effective operation of the Tineco iFloor BREEZE Compact Cordless Vacuum &amp; Washer, covering safety, operation, maintenance, and troubleshooting.</p>
	<p><a href="#">Tineco FLOOR ONE S5 Series Smart Cordless Vacuum &amp; Washer Instruction Manual</a></p> <p>Comprehensive instruction manual for the Tineco FLOOR ONE S5 Series, detailing setup, operation, maintenance, safety guidelines, and troubleshooting for this smart cordless wet dry vacuum cleaner.</p>
	<p><a href="#">Tineco FLOOR ONE S9 ARTIST PRO SERIES: Smart Cordless Floor Washer Instruction Manual</a></p> <p>This instruction manual provides essential guidance for the Tineco FLOOR ONE S9 ARTIST PRO SERIES Smart Cordless Floor Washer. Discover how to safely and effectively operate your appliance for optimal hard floor cleaning. The manual covers setup, usage, maintenance, and troubleshooting.</p>
	<p><a href="#">Tineco FLOOR ONE i6 STRETCH SERIES Cordless Floor Washer: User Manual and Operation Guide</a></p> <p>Comprehensive user manual for the Tineco FLOOR ONE i6 STRETCH SERIES Cordless Floor Washer. Learn about safety instructions, operation, maintenance, troubleshooting, specifications, and warranty information.</p>

