

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Aigostar](#) /

› Aigostar 9-Blade Pedestal Fan User Manual

Aigostar B30101AW8

Aigostar 9-Blade Pedestal Fan User Manual

Model: B30101AW8

INTRODUCTION

Thank you for choosing the Aigostar 9-Blade Pedestal Fan. This manual provides essential information for the safe and efficient operation of your new fan. Please read it thoroughly before assembly and use, and retain it for future reference.



Figure 1: Aigostar 9-Blade Pedestal Fan and its remote control.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- Always unplug the fan from the power outlet before cleaning, disassembling, or servicing.
- Do not insert fingers or any other objects through the grill when the fan is operating.
- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Keep the fan away from water or excessive humidity. Do not use in bathrooms or wet areas.
- Do not operate any fan with a damaged cord or plug. If the cord is damaged, it must be replaced by the manufacturer or a qualified service agent.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

Verify that all components are present and in good condition upon opening the package:

- Front Grille
- Spinner
- Blade (9-blades)
- Mounting Nut
- Rear Grille
- Fan Body with Motor
- Pole
- Round Base
- Remote Controller
- Small Screws (for grille assembly)
- User Manual (this document)

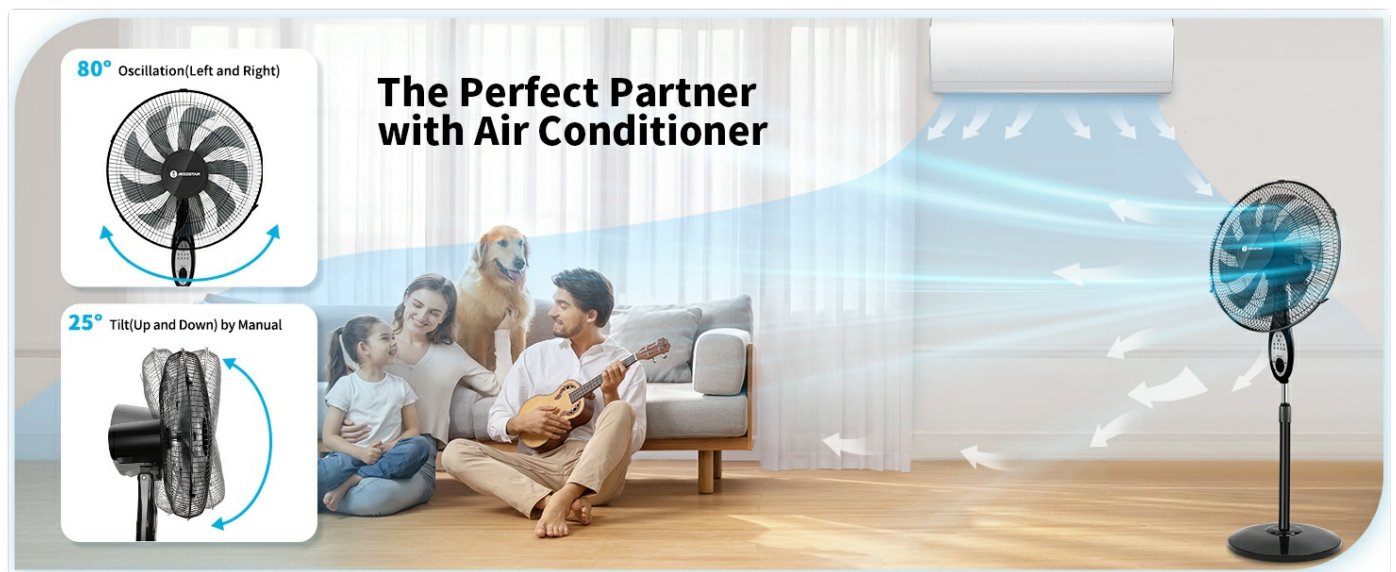


Figure 2: Exploded view of fan components.

SETUP: ASSEMBLY GUIDE

Follow these steps to assemble your Aigostar Pedestal Fan:

1. **Assemble the Base:** Remove the base screw and washer from the bottom of the pole. Insert the stand pole into the base hole. Secure it with the washer and screw from underneath.
2. **Attach Fan Body:** If the internal pole is inside the main pole, pull it out. Insert the fan body (motor unit) onto the top of the pole. Secure it with the thumb screw provided.
3. **Mount Rear Grille:** Loosen the mounting nut from the motor shaft. Place the rear grille onto the motor unit, aligning the holes. Tighten the mounting nut to secure the rear grille.
4. **Install Fan Blades:** Slide the 9-blade fan assembly onto the motor shaft, ensuring it is properly seated. Secure the blades with the spinner by turning it clockwise until tight.

5. **Attach Front Grille:** Align the front grille with the rear grille. Secure the two grilles together using the clips around the edge and the small screw at the bottom.



Figure 3: Visual guide for fan installation steps.

Installation Video Guide

Your browser does not support the video tag.

Video 1: Detailed instructions on how to install the Aigostar 9-Blades Pedestal Fan with Remote.

OPERATING INSTRUCTIONS

Your Aigostar Pedestal Fan offers multiple settings for personalized comfort.

Control Panel and Remote Control

The fan can be operated using the intuitive control panel on the fan body or the included remote control.



Figure 4: Fan control panel and remote control overview.

Speed Settings

Choose from three adjustable wind speeds: Low, Medium, and High. The 9-blade design ensures a powerful yet smooth airflow even at higher settings.



Figure 5: The 9-blade design provides enhanced airflow.

Wind Modes

Select from three distinct wind modes to suit your preference:

- **Normal Mode:** Provides a consistent, steady airflow.
- **Natural Mode:** Simulates a natural breeze with varying wind speeds.
- **Sleep Mode:** Offers a gentle, quiet airflow ideal for undisturbed sleep, gradually decreasing speed over time.

Your browser does not support the video tag.

Video 2: Demonstration of the fan's 3 modes (Normal, Natural, Sleep) and adjustable height.

Oscillation and Tilt

The fan features an 80° oscillation angle to cover a wider area and an adjustable up-down tilt of 25° to direct airflow precisely where needed.

WIDER OSCILLATION & STRONG WIND

The most powerful fan, offering extreme refreshment of **1250 r/min** on maximum speed



Figure 6: Oscillation and tilt capabilities.

Timer Function

Set the fan to automatically turn off after a specified period, up to 7.5 hours, in 0.5-hour increments. This feature helps conserve energy and provides convenience, especially during sleep.

Your browser does not support the video tag.

Video 3: Overview of the fan's quiet operation and 7.5-hour timer function.

Adjustable Height

The fan's height can be adjusted between 41 to 48 inches (104 cm to 122 cm), allowing you to optimize airflow for various settings, whether standing, sitting, or lying down.



ADJUSTABLE HEIGHT 41" to 47"

Choose high or low based your needs



Figure 7: Adjustable height feature.

MAINTENANCE AND CARE

Regular cleaning and proper storage will ensure the longevity and optimal performance of your fan.

Cleaning Instructions

- Always unplug the fan before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- To clean the blades, remove the front grille (refer to assembly steps in reverse). Wipe the blades with a damp cloth. Ensure blades are completely dry before reassembling the grille.
- The safety grill is designed to prevent direct contact with fan blades and is easy to clean.

Storage Tips

When not in use, store the fan in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

TROUBLESHOOTING

If you encounter any issues with your fan, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; Power outlet not working; Power button not pressed.	Ensure the fan is securely plugged into a working outlet. Press the Power button on the control panel or remote.
Weak airflow.	Fan speed is too low; Grilles or blades are dirty.	Increase the fan speed setting. Clean the grilles and blades as per maintenance instructions.
Fan is noisy.	Loose parts; Fan not on a level surface.	Check that all parts are securely assembled. Place the fan on a stable, level surface.
Remote control not working.	Batteries are dead or incorrectly inserted; Obstruction between remote and fan.	Replace batteries (2xAAA, not included). Ensure there is a clear line of sight to the fan's receiver.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Aigostar
Model Number	B30101AW8
Color	Black
Electric Fan Design	Floor Fan
Power Source	Corded Electric
Product Dimensions	15.75"D x 16.93"W x 47.24"H
Special Features	Remote Controlled, Adjustable Height, Timer, Adjustable Tilt, Oscillating
Noise Level	28 dB
Wattage	60 watts
Number of Blades	9
Air Flow Capacity	2000 Cubic Feet Per Minute
Speed	1250 RPM
Voltage	120 Volts
Control Method	Push Button, Remote
Blade Material	Plastic
Item Weight	12.07 pounds

Feature	Detail
UPC	850027654317

WARRANTY AND SUPPORT

Your Aigostar 9-Blade Pedestal Fan comes with a **1-year assurance** from the date of purchase. Aigostar is committed to providing lifetime customer service for this product.

For any issues, questions, or support needs, please feel free to get in touch with Aigostar customer service. Contact information can typically be found on the official Aigostar website or through your purchase platform.

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question