

[Manuals.plus](#) /

› [Dpofirs](#) /

› Dpofirs 6-Digit Electronic Combination Padlock User Manual

Dpofirs Dpofirs3m4g6nkw18

Dpofirs 6-Digit Electronic Combination Padlock User Manual

MODEL: DPOFIRS3M4G6NKW18

Introduction

This manual provides detailed instructions for the Dpofirs 6-Digit Electronic Combination Padlock. Please read carefully before use to ensure proper operation and longevity of your device.

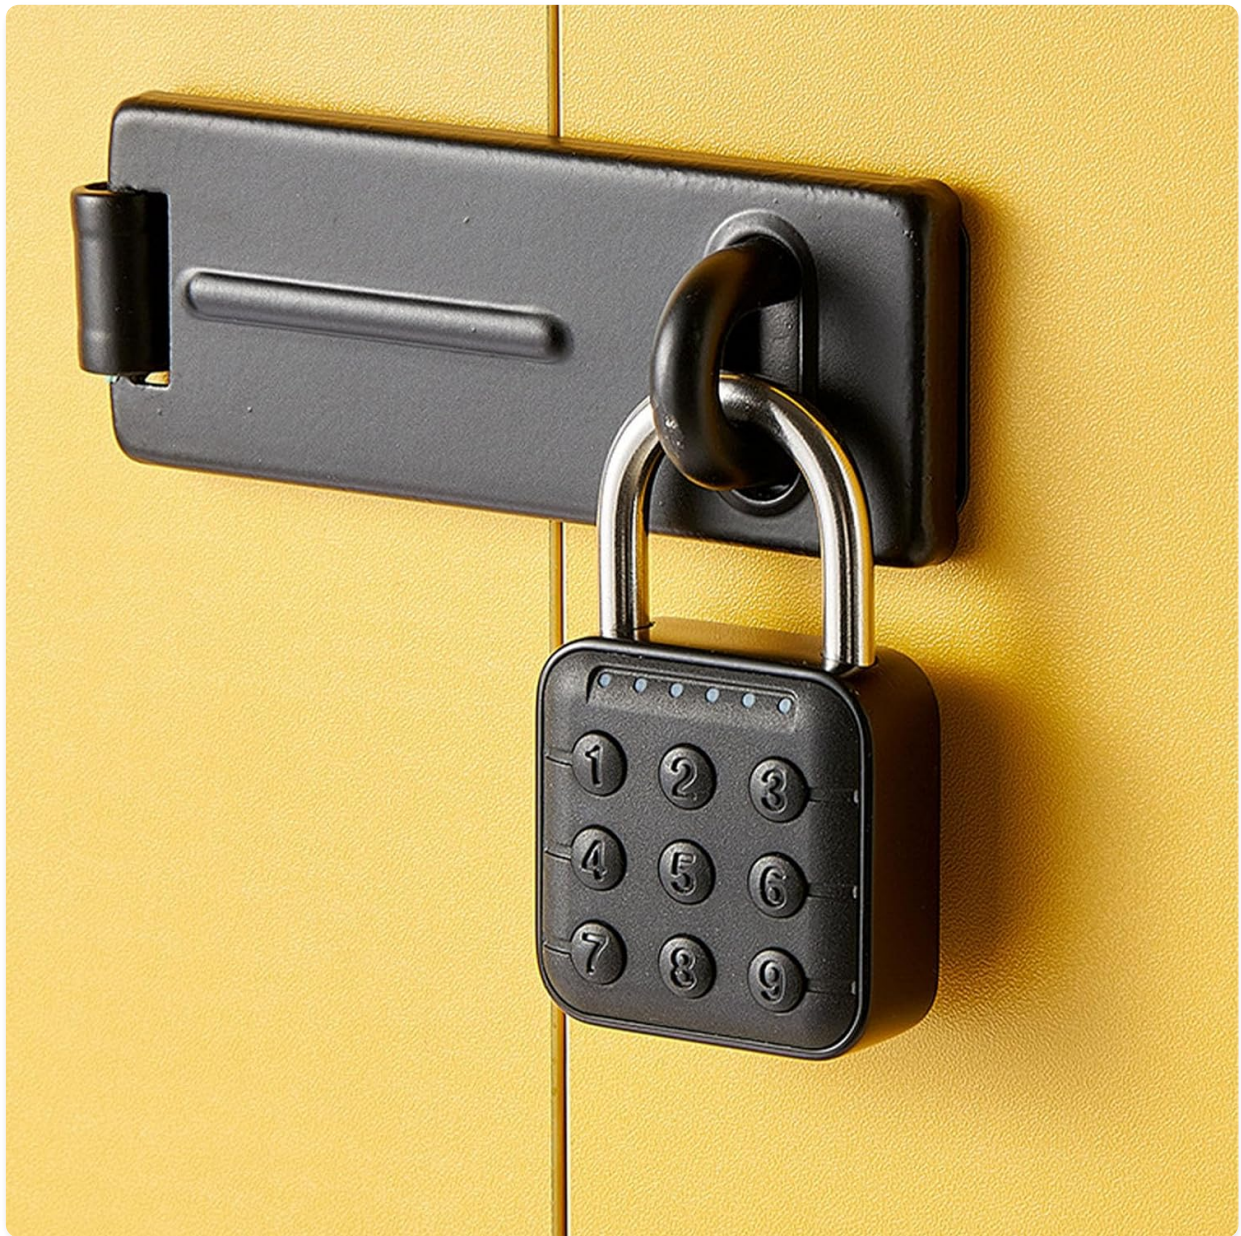


Figure 1: Dpofirs 6-Digit Electronic Combination Padlock in use on a cabinet.

Key Features:

- **6-Digit Password Unlocking:** Supports up to 10 unique passwords for multiple users, enhancing security and convenience.
- **Durable Construction:** Made from robust zinc alloy with an ABS panel and a 304 stainless steel lock beam, ensuring a firm and reliable structure.
- **IP67 Waterproof Rating:** Designed for both indoor and outdoor use, resistant to dust and water immersion up to 1 meter for 30 minutes.
- **Long Battery Life:** Powered by 2 CR2032 button batteries, offering a standby time of up to 12 months.
- **Versatile Application:** Ideal for securing suitcases, cabinets, warehouse doors, dormitory doors, construction site doors, and various other items.

Setup and Initial Use

1. Initial Power-Up

The lock is powered by 2 CR2032 button batteries. To activate the system for the first time, ensure the

plastic film on the back of the lock is removed. The lock will then be ready for use with the default password.



Figure 2: View of the battery compartment, showing where the plastic film needs to be removed.

2. Unlocking with Default Password

The factory default password is **000000**. To unlock the device, input this 6-digit password. The blue indicator lights will turn on, followed by green lights, and the shackle will automatically pop open.

Your browser does not support the video tag.

Video 1: Demonstration of unlocking the padlock using the 6-digit password.

3. Registering a New Password

To set a new password, first unlock the device using the current password (default is 000000). While the lock is open, input the current password again. The green light will blink. Immediately input your desired new 6-digit password. The green light blinking indicates the new password has been successfully set. If the red light blinks, the password input was incorrect, and you will need to restart the process.

Operating Instructions

1. Locking the Padlock

To secure the padlock, simply push the shackle down into the lock body until it clicks into place. The lock will automatically engage and secure.

2. Unlocking the Padlock

Enter your registered 6-digit password using the keypad. Upon correct entry, the blue indicator lights will illuminate, followed by green lights, and the shackle will automatically pop open.

Your browser does not support the video tag.

Video 2: Visual guide on how to unlock the 6-Digit Password Lock.

Maintenance

1. Battery Replacement

The lock is powered by 2 CR2032 button batteries. The standby time is approximately 12 months. When the indicator lights dim or the lock becomes unresponsive, it is time to replace the batteries. To replace, open the battery compartment on the back of the lock, remove the old batteries, and insert new CR2032 batteries, ensuring correct polarity.



Figure 3: CR2032 button batteries used for the padlock.

2. Waterproofing

This padlock boasts an IP67 waterproof grade, meaning it is fully protected against dust ingress and can withstand immersion in water up to 1 meter for 30 minutes. This makes it suitable for various outdoor and challenging environments.



Figure 4: The padlock demonstrating its IP67 waterproof capability with water droplets on its surface.

Troubleshooting

Common Issues and Solutions:

- **Lock not opening:** Try entering the password several times. If it still fails, replace the button cell batteries and attempt to unlock again.
- **Failed password registration:** Ensure the lock is in an unlocked state before attempting to register a new password. Follow the password setting steps precisely. If the red light blinks, the password input was incorrect, and the device will exit the setting mode.
- **Device exits setting mode unexpectedly:** This may occur if there is a delay between steps during password registration or deletion. Repeat the process carefully, ensuring timely input.

- **Deleting all passwords:** To delete all registered passwords and restore factory default settings, input the default password (000000) to unlock the device. While unlocked, input 000000 again. The red light will turn on, then input the unlock password again. If the green light turns on, all passwords are cleared, and the device returns to factory default.

Specifications

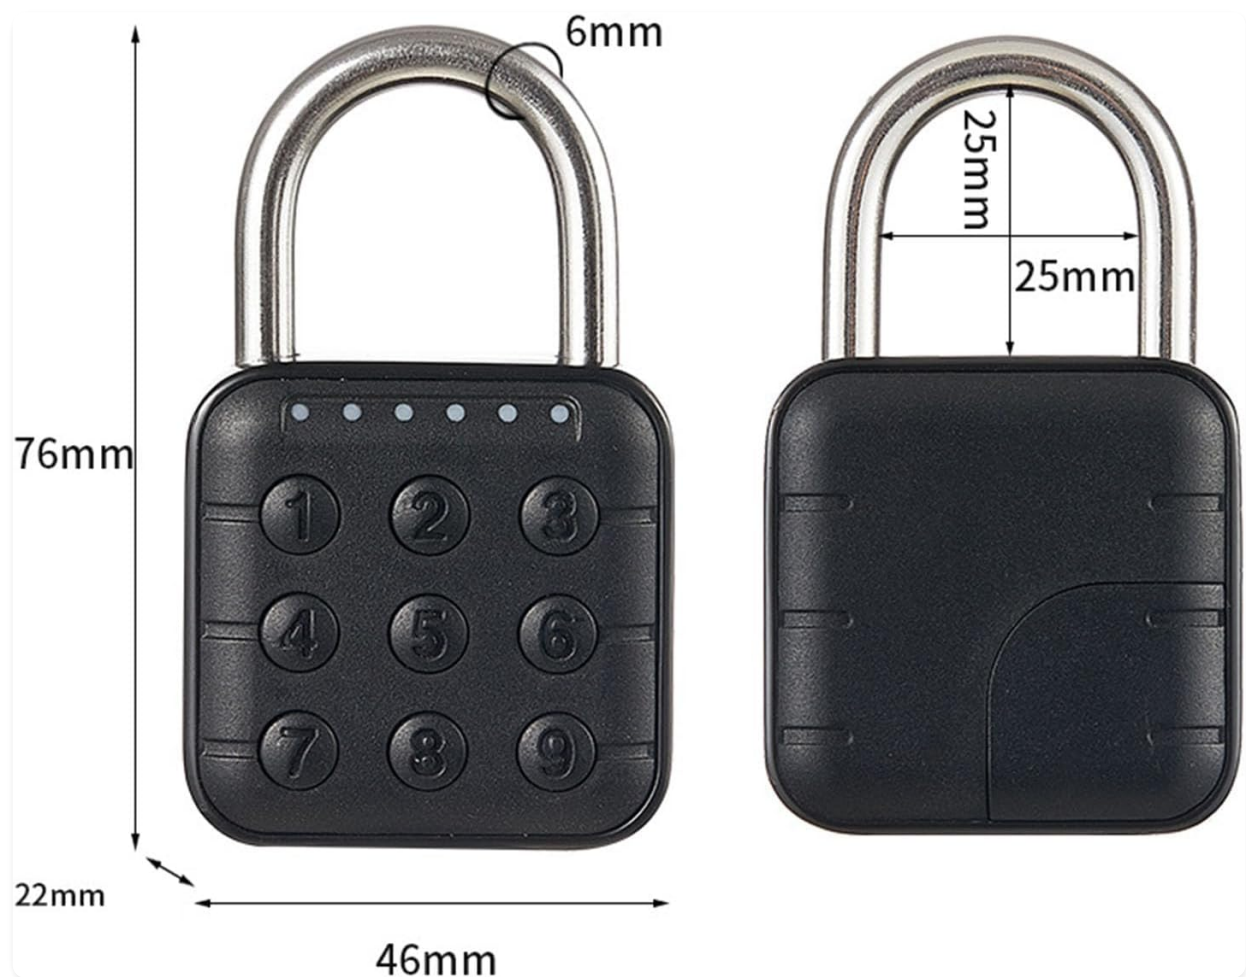


Figure 5: Detailed dimensions of the padlock.

Parameter	Value
Password Length	6 Digits
Number of Passwords	Up to 10 Sets
Standby Time	12 Months
Battery Type	2 x CR2032 Button Battery (built-in)
Lock Body Surface	Black Paint Spraying
Unlocking Method	Password Button
Lock Body Material	Zinc Alloy, ABS Panel
Lock Beam Material	304 Stainless Steel
Waterproof Grade	IP67

Temperature Range	-10 to 45°C
Dimensions	76 x 46 x 22 mm
Item Weight	120 g

Warranty and Support

Warranty Information

This product is covered by a standard return policy, typically 30 days for refund/replacement. For specific details regarding warranty coverage and terms, please refer to your purchase documentation or contact the seller directly.

Customer Support

For any questions, technical assistance, or support inquiries regarding your Dpofirs 6-Digit Electronic Combination Padlock, please contact Dpofirs customer support through the platform where you made your purchase.