

[Manuals.plus](#) /

› [LETSHAHA](#) /

› LETSHAHA Kids Instant Print Camera KC05 User Manual

LETSHAHA KC05

LETSHAHA Kids Instant Print Camera KC05 User Manual

Model: KC05

1. INTRODUCTION

Thank you for choosing the LETSHAHA Kids Instant Print Camera KC05. This camera is designed to provide an engaging and creative photography experience for children. It features ink-free instant printing, a 180-degree rotating lens for selfies, 24MP photo resolution, 1080P video recording, 10x digital zoom, and various creative filters and frames. Please read this manual carefully to ensure proper use and to maximize your child's enjoyment of the camera.

2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- LETSHAHA Kids Instant Print Camera KC05
- 3 Rolls of Thermal Print Paper
- 32GB SD Card
- USB Charging Cable
- Lanyard
- 5 Colored Pens

PACKAGE ACCESSORIES



INSTALL PRINTER PAPER



Image: Contents of the LETSHAHA Kids Instant Print Camera KC05 package.

3. PRODUCT OVERVIEW

The LETSHAHA Kids Instant Print Camera KC05 is a compact digital camera designed for children. It features a 2.0-inch IPS display, a 180-degree rotating lens, and an integrated thermal printer for instant black-and-white photos. The camera supports both digital photo and video capture.



Image: Key features of the LETSHAHA Kids Instant Print Camera KC05.

4. SETUP

4.1. Battery Charging

Before first use, fully charge the camera's built-in lithium polymer battery using the provided USB cable. Connect the cable to the camera's USB port and a compatible USB power adapter (not included). The charging indicator light will show the charging status.

4.2. SD Card Installation

Insert the included 32GB SD card into the designated SD card slot on the camera. Ensure the card is inserted correctly until it clicks into place. The camera requires an SD card to save photos and videos.

4.3. Printer Paper Installation

To install the thermal print paper:

1. Open the paper slot cover on the camera.
2. Insert a roll of thermal paper into the compartment. Ensure the smooth side of the paper faces the print head.
3. Pull a small length of paper out of the slot and close the cover firmly.



Image: Step-by-step guide for installing printer paper.

Your browser does not support the video tag.

Video: A short demonstration of how to install the thermal paper into the camera.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Press and hold the power button to turn the camera on or off.

5.2. Taking Photos

Point the camera at your subject and press the shutter button to capture a photo. The camera features a 24MP effective still resolution for clear images.

5.2.1. Selfies with 180° Rotating Lens

For easier selfies, rotate the lens 180 degrees towards yourself. This allows you to frame your shot while viewing yourself on the screen.



Image: Using the 180° rotating lens for selfies.

Your browser does not support the video tag.

Video: Demonstration of the 180-degree flip lens for taking selfies.

5.3. Recording Videos

Switch to video mode and press the shutter button to start recording 1080P high-definition videos. Press the button again to stop recording.



Image: The camera's 1080P video recording function.

5.4. Zoom Function

Use the zoom controls to apply up to 10x digital zoom for closer shots.



Image: The 10x digital zoom feature.

5.5. Creative Features (Frames & Filters)

Enhance your photos with various built-in photo frames and creative filters. Navigate through the menu options to select your desired effects before taking a picture.



Image: Examples of creative filters and frames.

Your browser does not support the video tag.

Video: A demonstration of navigating through frames and screen colors on the camera.

5.6. Instant Printing

The camera uses ink-free thermal printing technology to produce black-and-white photos instantly. After taking a picture, the camera will automatically print it. You can also select photos from the gallery to print. The camera offers different print modes (Lattice, Grey Scale) and 5 print shade levels to customize the output.

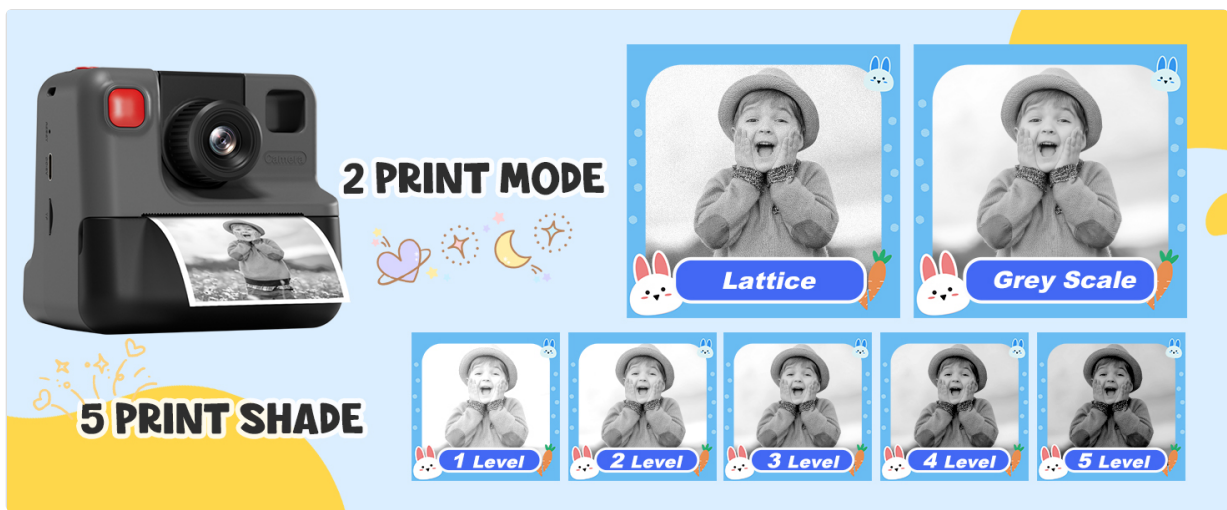


Image: Print modes and shade levels available.

5.7. Viewing and Transferring Files

Review your captured photos and videos on the 2.0-inch IPS display. To transfer files to a computer, connect the camera using the USB cable. The camera will appear as a removable storage device.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and lens. Do not use liquid cleaners or solvents.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Print Paper:** Keep thermal print paper rolls in their original packaging until ready to use to protect them from light and moisture.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use for extended periods.

7. TROUBLESHOOTING

Issue	Possible Solution
Camera does not turn on	Ensure the battery is charged. Connect the camera to a power source using the USB cable and try again.
Poor print quality or no print	Check if the thermal paper is installed correctly with the smooth side facing the print head. Ensure there is enough paper. The camera may require a moment to warm up for optimal printing; avoid using it in extremely cold conditions immediately after powering on.
Cannot save photos/videos	Verify that the SD card is properly inserted and has sufficient free space. The SD card may need to be formatted (refer to camera settings).
Camera freezes or becomes unresponsive	Try resetting the camera by pressing and holding the power button for 10-15 seconds. If the issue persists, allow the battery to fully discharge and then recharge.

Issue	Possible Solution
Charging cable gets hot	Immediately disconnect the charging cable from both the camera and the power source. Do not use the cable again. Contact customer support for a replacement. Always use the original or a certified replacement charging cable.

8. SPECIFICATIONS

Feature	Specification
Model Name	Children's Camera (KC05)
Effective Still Resolution	24 MP
Video Resolution	1080p
Screen Size	2.4 Inches (LCD)
Digital Zoom	10x
Lens Type	Wide Angle, 180 Degrees Real Angle Of View
Image Stabilization	Digital
Memory Storage Capacity	32 GB (SD Card included)
Connectivity Technology	USB
Battery Cell Type	Lithium Polymer
Item Weight	220 Grams
Supported File Format	JPEG, RAW (for photos), MP4 (for video)
Age Range Description	Kid

9. WARRANTY AND SUPPORT

This product comes with a 1-year warranty. For any questions, technical support, or warranty claims, please contact LETSHAHA customer service through the retailer's platform or the official brand website. Please retain your proof of purchase for warranty service.