

INSE INSE 26kPa Cordless Stick Vacuum Cleaner

INSE 26kPa Cordless Stick Vacuum Cleaner User Manual

Model: INSE 26kPa Cordless Stick Vacuum Cleaner

[Safety Instructions](#)

[Product Components](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the INSE Cordless Stick Vacuum Cleaner. Retain this manual for future reference.

- This appliance is intended for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters in place.
- Use only the charger supplied by the manufacturer to recharge the battery.
- Do not handle the charger or appliance with wet hands.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Turn off the appliance before connecting or disconnecting the motorized brush.
- Store the vacuum cleaner in a dry, indoor area.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your INSE Cordless Stick Vacuum Cleaner:



Image Description: A comprehensive view of the INSE Cordless Stick Vacuum Cleaner in its assembled form, alongside its various attachments. The main unit features a dark gray and rose gold finish. Accessories include an extension wand, a motorized floor brush with LED lights, a crevice tool, a dusting brush, and two spare HEPA filters. A close-up of the LED display on the main unit is also visible, showing 'LOW' and 'HIGH' suction indicators.

- **Main Unit:** Contains the motor, dustbin, and removable battery.
- **Extension Wand:** Connects the main unit to the floor brush or other attachments for extended reach.
- **Motorized Floor Brush:** Equipped with LED lights for improved visibility and suitable for various floor types.
- **Crevice Tool:** Ideal for cleaning narrow gaps and tight spaces.
- **Dusting Brush:** For delicate surfaces and upholstery.
- **HEPA Filters:** Two filters are included for effective air filtration.

- **Charging Adapter:** (Not pictured, but included for battery charging).

3. SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble the Main Unit:** Ensure the dustbin and filters are correctly installed in the main unit.
3. **Attach Extension Wand:** Insert the extension wand into the main unit until it clicks securely into place.
4. **Attach Floor Brush:** Connect the motorized floor brush to the other end of the extension wand until it clicks. For handheld use, attachments can be connected directly to the main unit.
5. **Charge the Battery:** Before first use, fully charge the removable battery. Connect the charging adapter to the battery and plug it into a power outlet. The LED display will indicate charging status.



Image Description: The INSE Cordless Stick Vacuum Cleaner stands upright on its own in a living room setting, demonstrating its self-standing design. A cat is visible on a nearby sofa, highlighting the vacuum's suitability for pet owners.

The vacuum cleaner features a **self-standing design**, allowing it to stand upright on its own without needing to be leaned against a wall or placed in a dock. This provides convenient storage and accessibility during cleaning breaks.

4. OPERATING INSTRUCTIONS

Powering On/Off and Suction Modes



Image Description: A close-up view of the INSE vacuum cleaner's LED display, showing real-time status updates. The display indicates battery level, current suction mode (LOW, MID, HIGH), and a blockage reminder icon. The text overlay highlights 'All-in-One LED Screen' and its functions.

- **Power On/Off:** Press the power button located on the main unit to turn the vacuum cleaner on or off.
- **Adjust Suction Mode:** Use the mode button on the LED display to cycle through the available suction settings:
 - **Eco Mode (12kPa):** For light cleaning and maximum runtime.
 - **Mid Mode (19kPa):** For everyday cleaning tasks.
 - **Max Mode (26kPa):** For deep cleaning and stubborn dirt.

- **LED Display:** The integrated LED screen provides real-time information, including:
 - Battery level indicator.
 - Current suction level.
 - Blockage reminder.



Image Description: A woman is shown comfortably using the INSE Cordless Stick Vacuum Cleaner on a carpeted floor in a living room. Illustrations of different debris types (dust, pet hair, coffee beans) with corresponding suction levels (12kPa, 19kPa, 26kPa) are displayed, emphasizing the powerful suction and brushless motor.

Using Attachments

- **Motorized Floor Brush:** Use for general floor cleaning on carpets, tiles, and hardwood. The integrated LED lights illuminate the cleaning path.
- **Crevice Tool:** Attach directly to the main unit or extension wand to clean corners, edges, and tight spaces in furniture or vehicles.
- **Dusting Brush:** Attach directly to the main unit or extension wand for cleaning delicate surfaces, upholstery, and curtains.

Brosse LED motorisée 2-en-1

Adapté au nettoyage de différents types de sols



Image Description: A close-up of the INSE vacuum cleaner's motorized LED brush head actively cleaning various debris (coffee beans, rice, dust) from a floor that transitions from wood to carpet. The LED lights on the brush head are illuminated, highlighting its effectiveness on different floor types.

Battery Runtime

Jusqu'à 45 minutes d'autonomie

 **45mins**
Mode Éco (12 kPa)

 **30mins**
Mode Moyen (19 kPa)

 **15mins**
Mode Maximum (26 kPa)

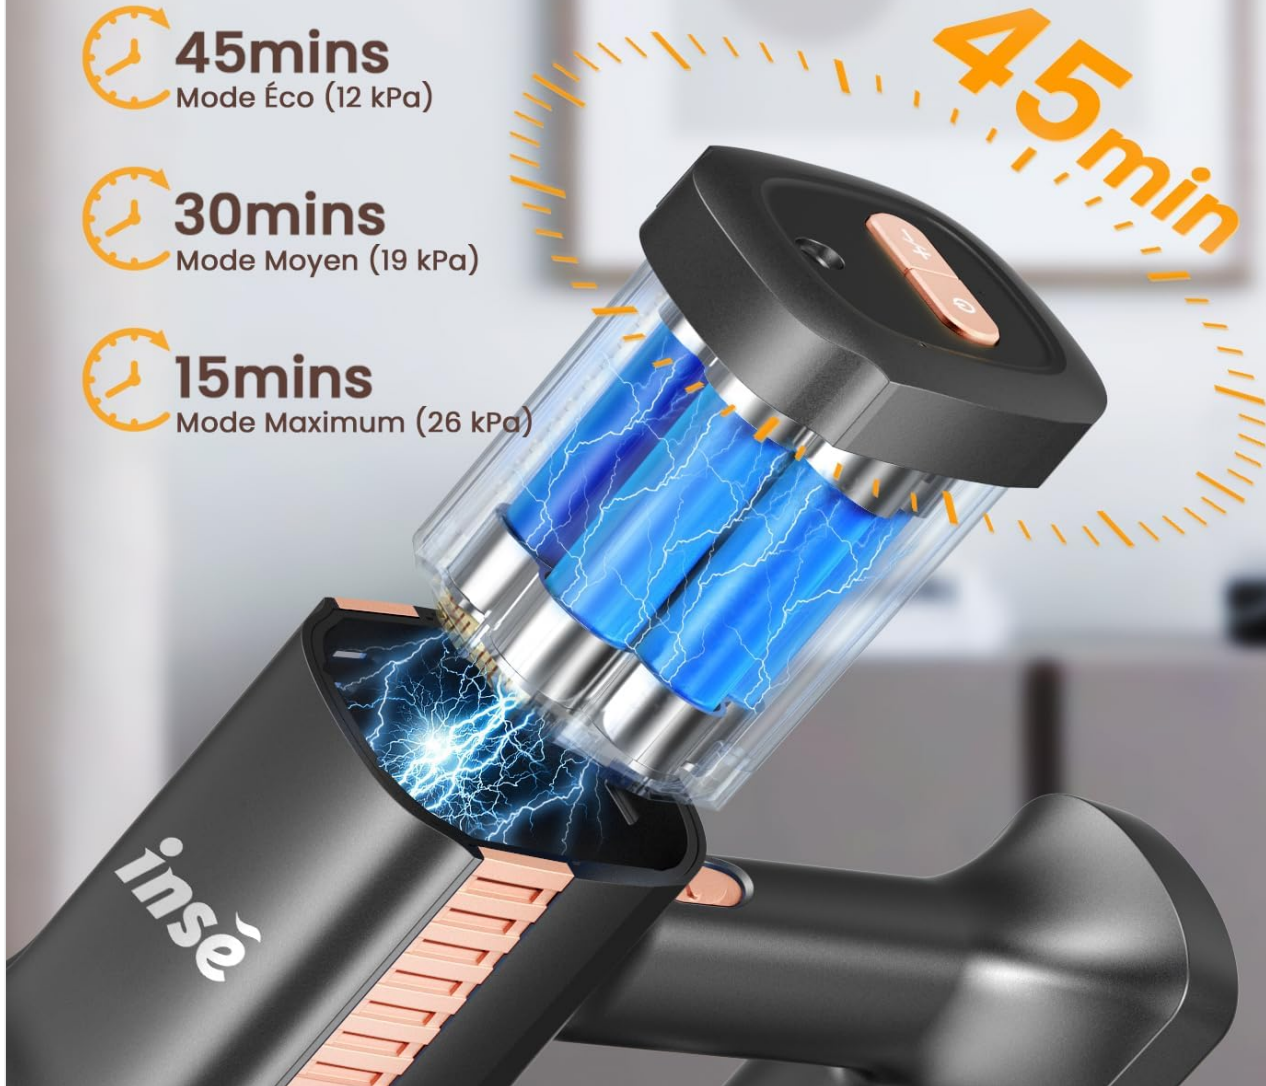


Image Description: An illustration detailing the battery runtime of the INSE vacuum cleaner across different suction modes. It shows 45 minutes in Eco Mode (12 kPa), 30 minutes in Mid Mode (19 kPa), and 15 minutes in Maximum Mode (26 kPa). The battery pack is depicted with six cells, emphasizing its capacity.

The 2500mAh*6 cell battery provides varying runtimes depending on the selected suction mode:

- **Eco Mode (12kPa):** Up to 45 minutes.
- **Mid Mode (19kPa):** Up to 30 minutes.
- **Max Mode (26kPa):** Up to 15 minutes.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin

1. Ensure the vacuum cleaner is turned off.
2. Press the dustbin release button to detach the dustbin from the main unit.

3. Hold the dustbin over a trash can and press the bottom release latch to open and empty the contents.
4. Close the dustbin latch and reattach the dustbin to the main unit until it clicks securely.

Cleaning the Filters

Système de filtration haute efficacité



Image Description: A detailed diagram illustrating the INSE vacuum cleaner's high-efficiency filtration system. It shows the cyclonic filtration, metal mesh filter, HEPA filter, and air outlet filter, with arrows indicating airflow and dust separation. The system is stated to achieve >99.99% filtration.

The vacuum cleaner features a multi-stage filtration system, including a HEPA filter, metal mesh filter, and cyclonic filtration. Clean these regularly to maintain suction power.

1. Turn off the vacuum cleaner and remove the dustbin.
2. Twist and pull out the filter assembly from the dustbin. This typically includes the HEPA filter and the metal mesh filter.
3. Tap the filters gently over a trash can to remove loose dust and debris.
4. If heavily soiled, the filters can be rinsed under cold running water. **Ensure filters are completely dry (allow 24-48 hours) before re-inserting them into the vacuum cleaner.** Using wet filters can damage the motor.
5. Reassemble the filters and place them back into the dustbin, then reattach the dustbin to the main unit.

Cleaning the Brush Roll

1. Turn off the vacuum cleaner and detach the motorized floor brush.
2. Locate the brush roll release mechanism (usually a latch or button) on the side of the brush head.
3. Remove the brush roll. Use scissors or a cleaning tool to cut and remove any tangled hair or debris.
4. Clean any debris from the brush roll housing.
5. Reinsert the brush roll and secure it with the release mechanism.

6. TROUBLESHOOTING GUIDE

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is not charged or not properly inserted.	Ensure the battery is fully charged and securely inserted into the main unit.
Low suction power.	Dustbin is full. Filters are clogged. Blockage in the nozzle, wand, or hose.	Empty the dustbin. Clean or replace the filters. Check for and remove any blockages.
Brush roll not spinning.	Brush roll is jammed with debris. Brush roll is not properly installed.	Turn off the vacuum, remove the brush roll, and clear any tangled hair or debris. Ensure it is reinstalled correctly.
LED display shows a blockage reminder.	Airflow is restricted.	Check the dustbin, filters, extension wand, and floor brush for any obstructions and clear them.

7. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	INSE
Model	INSE 26kPa Cordless Stick Vacuum Cleaner
Suction Power	Up to 26 kPa (Max Mode)
Motor Power	265W Brushless Motor
Battery Capacity	2500mAh*6 cells
Runtime	Up to 45 minutes (Eco Mode)
Filter Type	HEPA Filter
Product Weight	Approximately 3.7 kg (total)
Product Dimensions	25 x 22 x 117 cm
Special Features	Cordless, Self-standing, LED Display, Motorized LED Brush, 6-in-1 Versatility

8. WARRANTY AND CUSTOMER SUPPORT

INSE is committed to providing high-quality products and excellent customer service.

- **Customer Service:** Enjoy 24/7 customer service for any inquiries or assistance you may need.
- **After-Sales Support:** The INSE cordless vacuum cleaner comes with 100% satisfactory lifetime after-sales support.
- **Contact Information:** For support, please refer to the contact details provided on the product packaging or the official INSE website.