

[Manuals.plus](#) /

› [BINELUCOLU](#) /

› BINELUCOLU L-Bar Shrink Wrap Sealer Machine SWM-01 Instruction Manual

BINELUCOLU SWM-01

BINELUCOLU L-Bar Shrink Wrap Sealer Machine SWM-01 Instruction Manual

Model: SWM-01 | Brand: BINELUCOLU

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, setup, and maintenance of your BINELUCOLU L-Bar Shrink Wrap Sealer Machine, Model SWM-01. This machine is designed for fast and effective heat sealing and cutting of various shrink films, offering a sealing time adjustable from 0 to 3 seconds. Please read this manual thoroughly before operating the machine to ensure proper usage and to prevent damage or injury.



Image 1.1: The BINELUCOLU L-Bar Shrink Wrap Sealer Machine.

2. SAFETY INSTRUCTIONS

- Always connect the machine to a grounded power outlet with the correct voltage (110V).
- Do not operate the machine with wet hands or in damp environments.
- Keep hands and loose clothing away from the sealing bar and heating elements during operation.
- Ensure the machine is placed on a stable, level surface.
- Unplug the machine from the power source before cleaning or performing any maintenance.
- Do not attempt to modify or repair the machine yourself. Contact qualified service personnel.
- Keep children and unauthorized personnel away from the machine during operation.

3. PACKAGE CONTENTS

Carefully unpack all components and verify that all items listed below are present and undamaged. If any items are missing or damaged, please contact customer support.

- L-Bar Shrink Wrap Sealer Machine Main Unit
- Heat Shrink Film Stand (Rollers and Support Brackets)

- Handle for Sealing Bar
- Electric Heating Wire (pre-installed or spare)
- Assembly Tools (e.g., screwdriver, wrenches)
- Fasteners and Small Parts
- Instruction Manual



Image 3.1: Overview of the machine and its included components.

4. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main parts of the L-Bar Shrink Wrap Sealer Machine:

- **Handle:** Used to lower the sealing bar for sealing and cutting.
- **Electric Heating Wire:** The element responsible for sealing and cutting the film. It is made of high-temperature and pressure-resistant material.
- **Heat Shrink Film Stand:** Supports the roll of shrink film, allowing for smooth feeding.
- **Control Panel:** Contains the power switch, cleaning button, and time adjustment knob.

Product Introduce

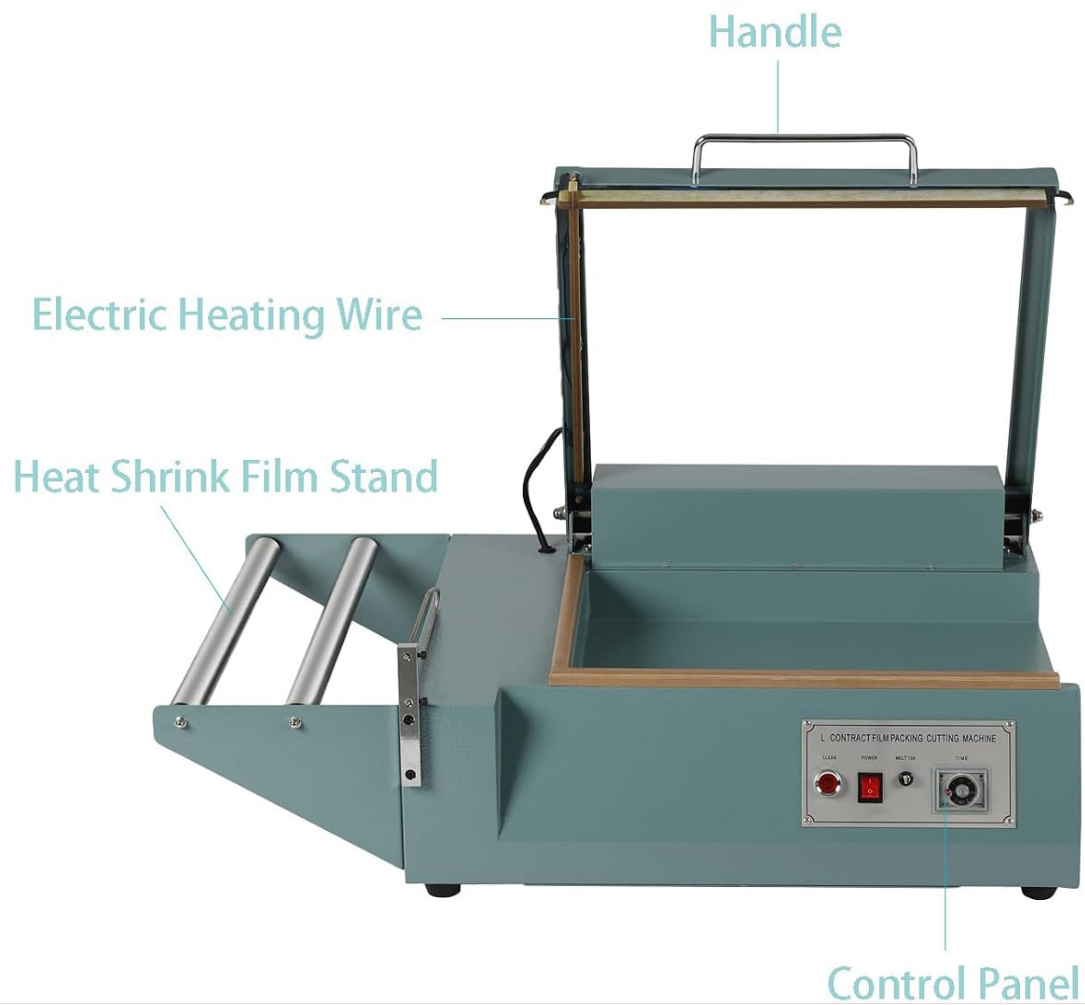


Image 4.1: Key components of the L-Bar Sealer Machine.

Heat Resistant Electric Heating Wire

High temperature and pressure resistant anti-cracking electric heating wire, good resistivity, not easy to aging, rest assured that the use.

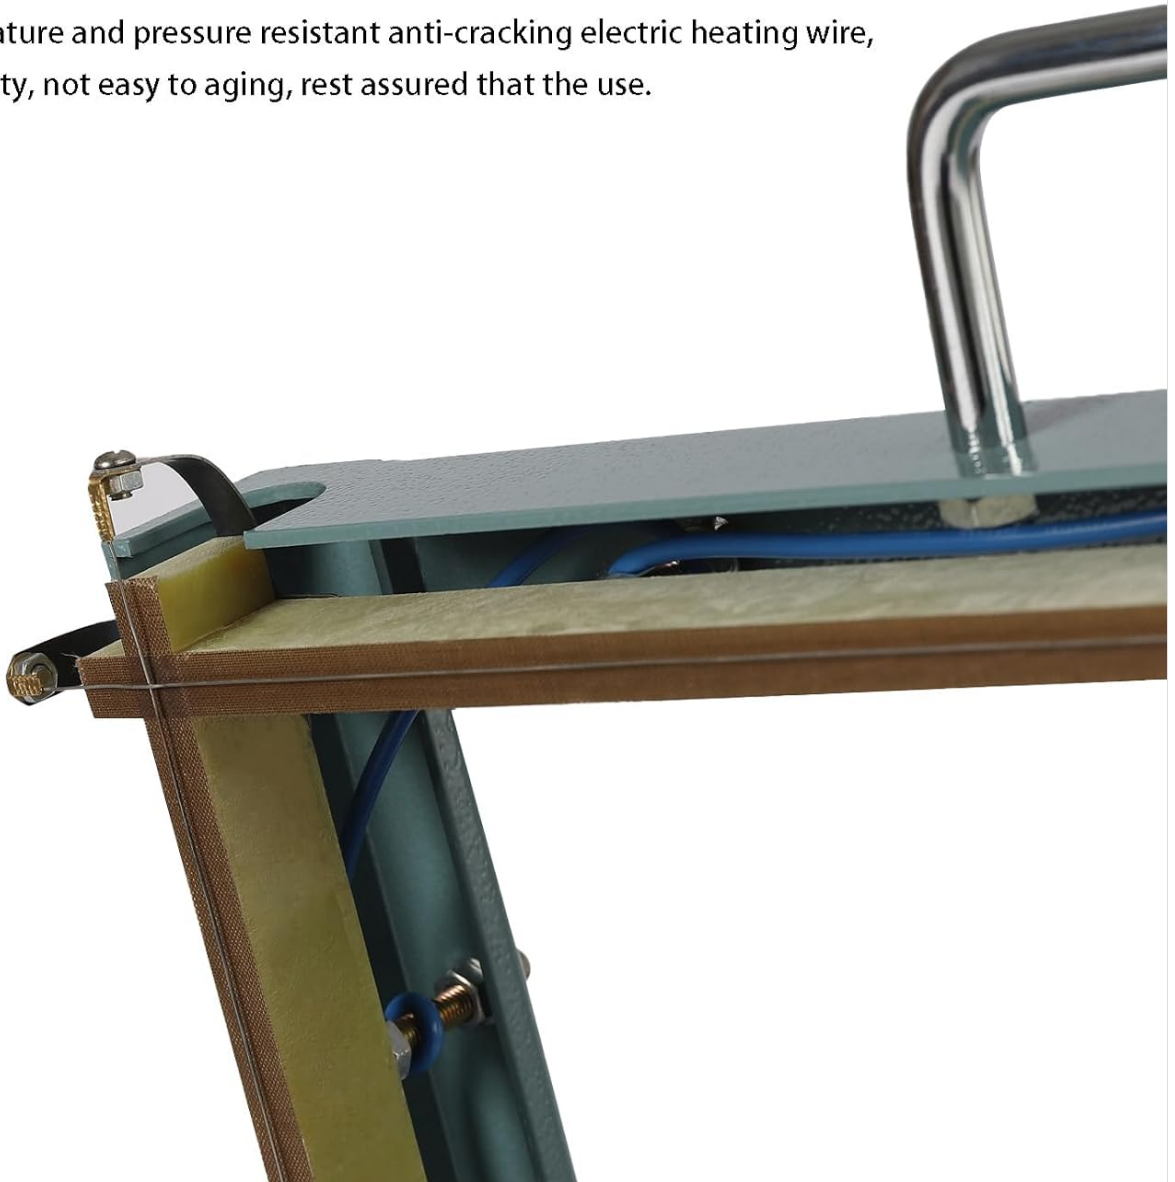


Image 4.2: Detail of the heat-resistant electric heating wire, designed for durability and efficient sealing.

5. SETUP

1. **Unpack:** Remove the machine and all components from the packaging.
2. **Placement:** Place the main unit on a stable, flat, and heat-resistant surface. Ensure adequate space around the machine for operation and ventilation.
3. **Assemble Film Stand:** Attach the support brackets for the heat shrink film stand to the designated slots on the machine. Insert the rollers into the brackets.
4. **Install Handle:** Securely attach the handle to the sealing bar mechanism.
5. **Load Film:** Place a roll of appropriate shrink film onto the film stand rollers, ensuring it feeds smoothly towards the sealing area.
6. **Power Connection:** Plug the power cord into a standard 110V grounded electrical outlet.



Image 5.1: The heat shrink film stand, ready for film loading.

6. OPERATING INSTRUCTIONS

Follow these steps for effective sealing and cutting:

1. **Power On:** Flip the red power switch on the control panel to the 'ON' position. The machine does not require preheating.
2. **Adjust Sealing Time:** Use the 'TIME' knob on the control panel to set the desired sealing duration. The adjustable range is 0-3 seconds. Start with a lower setting and adjust as needed based on film thickness and material.
3. **Position Item:** Place the item to be wrapped within the shrink film, positioning it under the L-bar sealing area.
4. **Operate Sealing Arm:** Firmly press down the handle to lower the L-bar sealing arm. Hold it down for the set sealing time. The machine will automatically cut and seal the film.
5. **Release and Remove:** Once the sealing time elapses, release the handle and carefully remove the sealed item.
6. **Repeat:** Continue the process for subsequent items.
7. **Cleaning Button:** If the heating wire accumulates dirt, press the 'CLEAN' button on the control panel. This will heat the wire to help clean off residue.



Image 6.1: The L-Bar Sealer Machine in operation, demonstrating item placement for sealing.

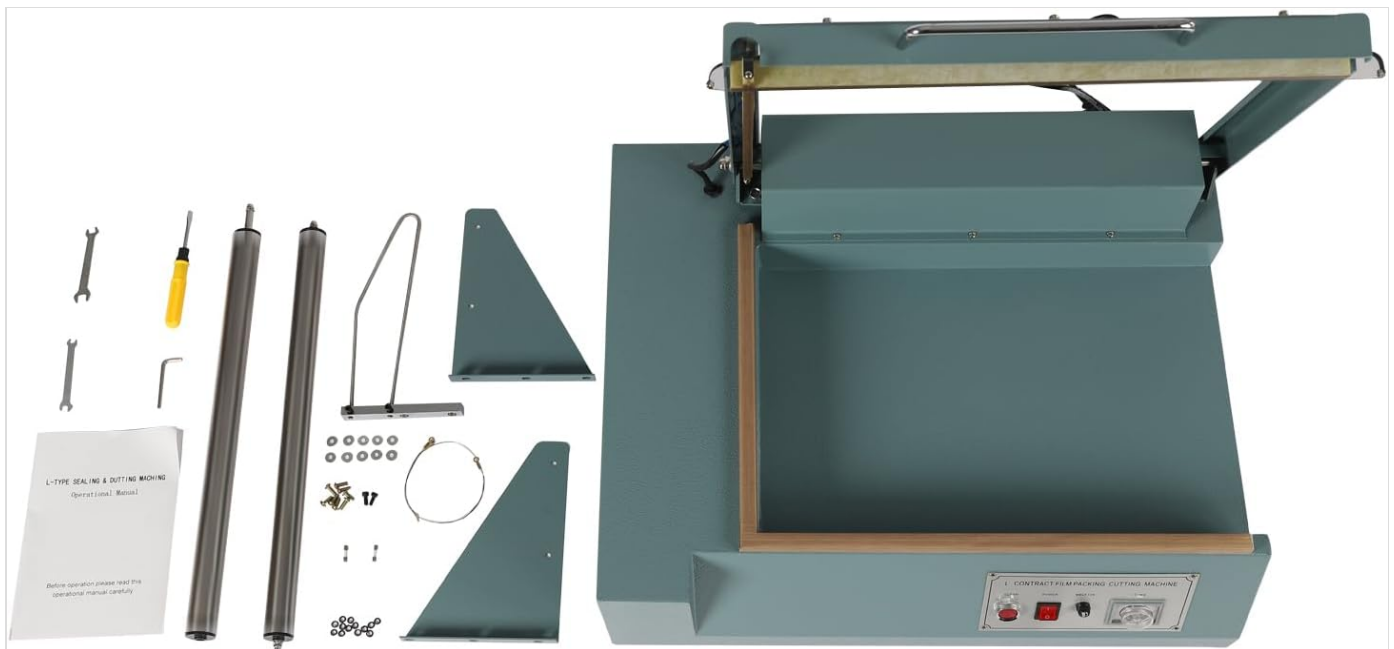


Image 6.2: The control panel, showing the power switch, cleaning button, and adjustable timer.

7. MAINTENANCE

- **Cleaning:** Regularly clean the machine's exterior with a soft, dry cloth. For the heating wire, use the 'CLEAN' button as described in the operating instructions. Ensure the machine is unplugged before any manual cleaning.
- **Heating Wire Inspection:** Periodically inspect the electric heating wire for wear or damage. Replace if necessary, following the manufacturer's guidelines.
- **Film Stand:** Keep the film stand rollers clean and free of debris to ensure smooth film feeding.
- **Storage:** When not in use, store the machine in a dry, clean environment, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

- **Machine Does Not Power On:**
 - Check if the power cord is securely plugged into a working outlet.
 - Ensure the power switch is in the 'ON' position.
 - Verify the circuit breaker or fuse for the outlet.
- **Film Not Sealing Properly:**
 - Adjust the 'TIME' knob to increase the sealing duration.
 - Inspect the electric heating wire for damage or excessive residue. Clean or replace if necessary.
 - Ensure the film type is compatible with heat sealing.
- **Film Not Cutting Cleanly:**
 - Check the heating wire for wear or breakage. A worn wire may not cut effectively.
 - Ensure the sealing arm is pressed down firmly and evenly.

9. SPECIFICATIONS

Technical specifications for the BINELUCOLU SWM-01 L-Bar Shrink Wrap Sealer Machine:

- **Material:** High-quality Iron
- **Voltage:** 110V/60Hz
- **Power:** 1000W
- **Sealing & Cutting Time:** 0-3 seconds (Adjustable)
- **Applicable Shrink Film Material:** POF Folding Film (also compatible with PE, PP, PVC)
- **Max. Sealing & Cutting Size:** 50 x 35 cm (19.69 x 13.78 inches)
- **Overall Size:** 95 x 55 x 37 cm (37.40 x 21.65 x 14.56 inches)
- **Net Weight:** 19 kg (41.89 lbs)
- **Gross Weight:** 22 kg (48.5 lbs)

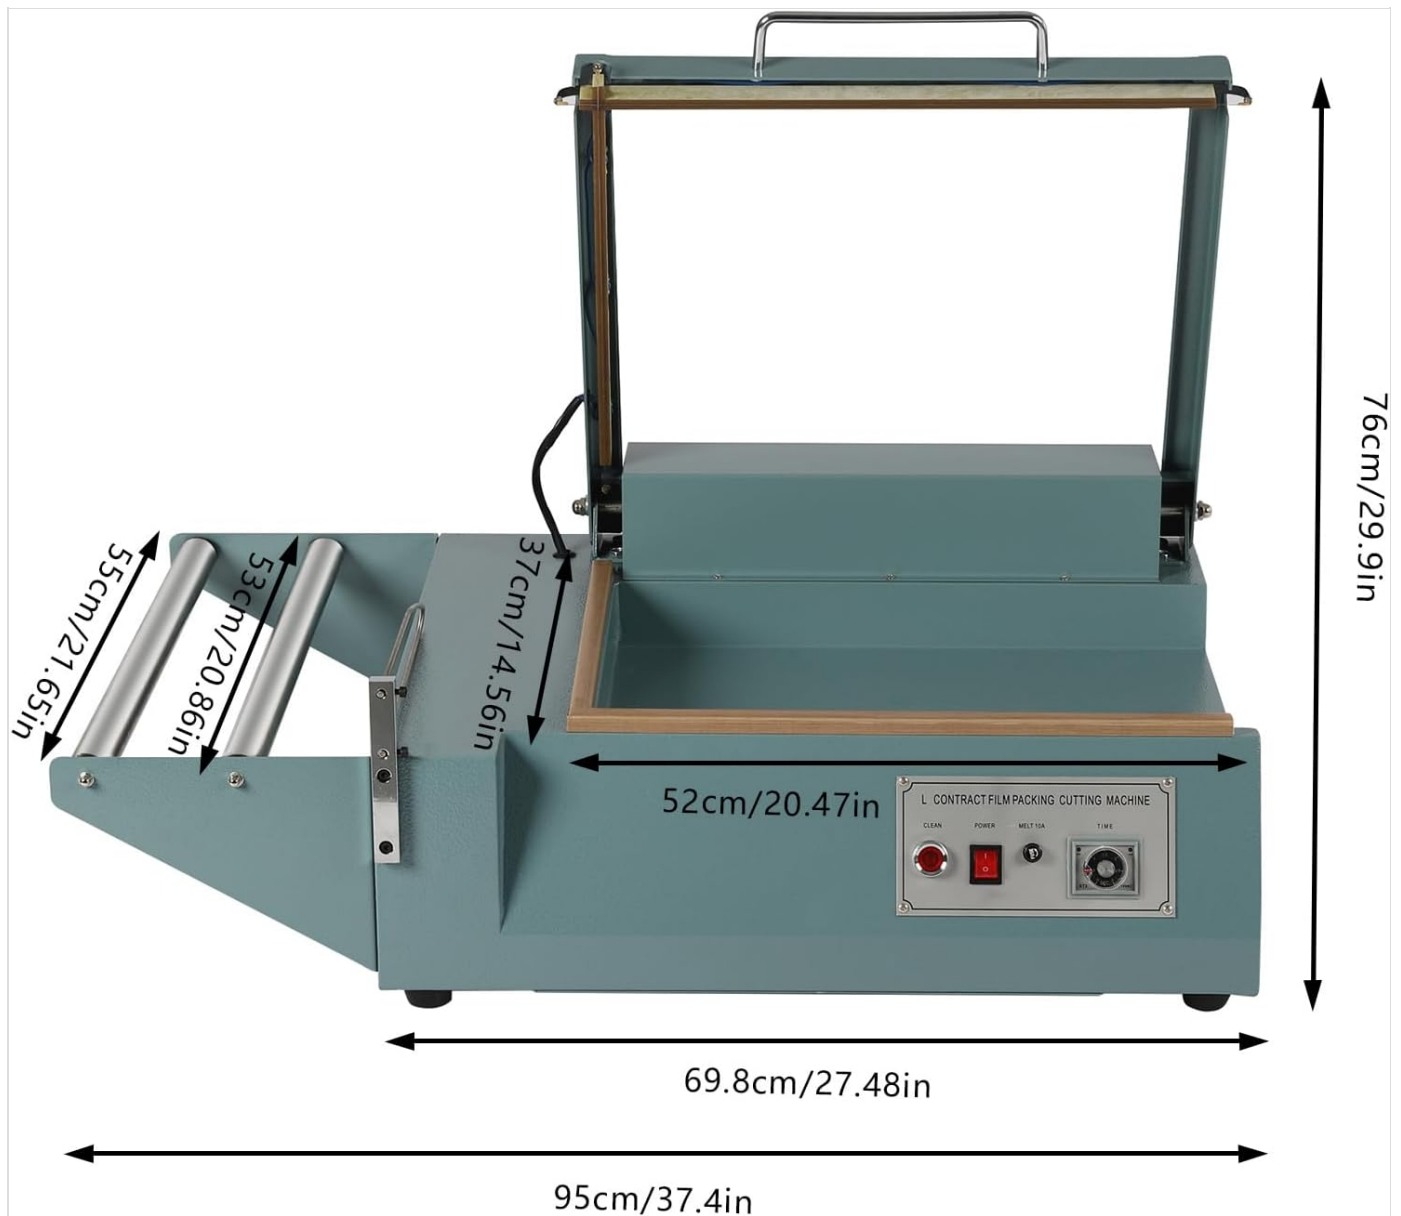


Image 9.1: Dimensional overview of the L-Bar Shrink Wrap Sealer Machine.

Wide Application



POF



PE



PP



PVC

Image 9.2: Detailed product specifications including material, power, and dimensions.

10. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official BINELUCOLU website. You may also contact customer support through the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question