



[Manuals.plus](#) /

› [Mobilier-Deco](#) /

› Mobilier-Deco SOKA Extensible Round Dining Table - Instruction Manual

## Mobilier-Deco SOKA 3701332432923

# Mobilier-Deco SOKA Extensible Round Dining Table - Instruction Manual

Model: SOKA 3701332432923

## 1. INTRODUCTION

Thank you for choosing the Mobilier-Deco SOKA Extensible Round Dining Table. This table is designed to offer both aesthetic appeal and practical functionality, making it a versatile addition to any dining room or living space. Its elegant white marble effect top and sophisticated crossed metal base are crafted to complement both classic and contemporary interiors. This manual provides essential information for the safe assembly, operation, and maintenance of your new dining table.



Image 1: The Mobilier-Deco SOKA Extensible Round Dining Table in its compact, round configuration.

## 2. SAFETY INFORMATION

Please read and adhere to the following safety guidelines to ensure safe use and prevent injury or damage:

- Adult supervision is required for assembly.
- Do not use the table if it is unstable. Ensure all connections are secure before use.
- Do not overload the table beyond its capacity. Distribute weight evenly.
- Keep small parts away from children during assembly to prevent choking hazards.

## 3. PACKAGE CONTENTS

Your Mobilier-Deco SOKA dining table is delivered in two packages. Please verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Tabletop sections (White Marble Effect MDF)
- Extensible leaf (White Marble Effect MDF)
- Metal Base Components (Crossed Legs, Support Brackets)
- Assembly Hardware (Screws, Allen Key, etc.)

## 4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to assemble the table on a soft, clean surface to prevent scratches.

1. **Assemble the Metal Base:** Connect the crossed metal leg components using the provided screws and Allen key. Ensure all connections are tightened securely but do not overtighten. The base should form a stable, sturdy structure.
2. **Attach Tabletop Sections:** Carefully place the main tabletop sections onto the assembled metal base. Align the pre-drilled holes on the tabletop with the holes on the base. Secure the tabletop to the base using the appropriate screws.
3. **Install Extension Mechanism:** The extension mechanism is typically pre-installed on the tabletop sections. Familiarize yourself with the sliding rails and locking mechanisms.
4. **Insert Extensible Leaf:** The extensible leaf is stored separately or integrated into the table. For integrated leaves, follow the operating instructions below to reveal the storage compartment and lift the leaf into place.



Image 2: Underside view illustrating the table's extension mechanism and sliding rails.



Image 3: Detail of the extension leaf being lifted and rotated into its operational position.

## 5. OPERATING INSTRUCTIONS: EXTENDING AND RETRACTING THE TABLE

The SOKA dining table features an easy-to-use extension mechanism to adjust its size according to your needs.

### To Extend the Table:

1. **Unlock Tabletop Sections:** Locate any locking mechanisms (latches or clips) underneath the tabletop that hold the two main sections together. Release these locks.
2. **Separate Tabletop Halves:** Gently pull the two halves of the tabletop apart. The sliding rails will guide them smoothly, creating a gap in the center.
3. **Retrieve Extension Leaf:** If the extension leaf is stored within the table, it will typically be revealed in the center gap. Lift the leaf and rotate it into position (refer to Image 3). If stored externally, place the leaf into the gap.
4. **Secure Extension Leaf:** Ensure the extension leaf is properly seated and aligned with the main tabletop sections. Engage any locking pins or clips to secure it in place.
5. **Close Tabletop Halves:** Push the two main tabletop halves back together until they meet the edges of the extension leaf. Re-engage the tabletop locking mechanisms to secure the entire surface.

### To Retract the Table:

1. **Unlock Tabletop Sections:** Release the locking mechanisms that hold the main tabletop sections together.
2. **Separate Tabletop Halves:** Gently pull the two halves apart to create a gap.
3. **Remove/Store Extension Leaf:** If the leaf is external, remove it. If it's integrated, disengage its locks, fold or rotate it back into its storage compartment (reverse of Image 3).
4. **Close Tabletop Halves:** Push the two main tabletop halves completely together until they meet.
5. **Lock Tabletop Sections:** Re-engage the locking mechanisms underneath the tabletop to secure it in its compact, round form.



Image 4: The Mobilier-Deco SOKA Extensible Round Dining Table in its extended, oval configuration.

## 6. MAINTENANCE

Proper care will ensure the longevity and appearance of your dining table.

- **Cleaning:** Wipe the tabletop and base with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the marble effect finish or metal.
- **Spills:** Clean spills immediately to prevent staining, especially on the marble effect surface.
- **Heat Protection:** Always use placemats or coasters under hot dishes to protect the tabletop from heat damage.

- **Weight Distribution:** Avoid placing excessively heavy items on one spot. Distribute weight evenly across the surface.
- **Regular Checks:** Periodically check and tighten all screws and bolts to maintain stability.

## 7. TROUBLESHOOTING

If you encounter any issues with your table, consider the following common solutions:

- **Table is Unstable:** Ensure all assembly screws are fully tightened. Check that the table is on a level surface. Adjust any leveling feet if present.
- **Extension Mechanism Sticking:** Clean the sliding rails to remove any dust or debris. A small amount of silicone-based lubricant can be applied to the rails if necessary (avoid oil-based lubricants).
- **Scratches on Surface:** Minor scratches on the marble effect surface may be reduced with specialized furniture repair kits. For deeper scratches, professional repair may be required.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Mobilier-Deco
Model Name	SOKA
Model Number	3701332432923
Color	White (Marble Effect)
Material	Metal structure, MDF wood top (25 mm thickness)
Dimensions (Compact)	110 cm (Diameter) x 76 cm (Height)
Dimensions (Extended)	150 cm (Length) x 110 cm (Width) x 76 cm (Height)
Item Weight	50 kg
Seating Capacity	Up to 8 people (extended)
Base Type	Crossed
Usage	Indoor

## 9. WARRANTY AND SUPPORT

Specific warranty details and direct customer support contact information are not provided within the product description. For any warranty claims, missing parts, or further assistance, please refer to your purchase documentation or contact the retailer where the product was purchased. Ensure you have your model number (SOKA 3701332432923) and proof of purchase readily available.