

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TCL](#) /

› [TCL 32-Inch Class 3 Series 1080p FHD LED Smart Roku TV User Manual](#)

TCL TCL 32S3

TCL 32-Inch Class 3 Series 1080p FHD LED Smart Roku TV User Manual

Model: TCL 32S3

INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your TCL 32-Inch Class 3 Series 1080p FHD LED Smart Roku TV. This television offers Full HD resolution, integrated Roku TV functionality, dual-band Wi-Fi, and compatibility with Apple AirPlay, Alexa, and Google Assistant. Please read these instructions thoroughly before use to ensure proper functionality and safety.

WHAT'S IN THE BOX

Upon opening the packaging, verify that all the following components are present:

- TCL 32-Inch Class 3 Series 1080p FHD LED Smart Roku TV
- Remote control
- Wall Mount Kit (may include bracket, screws, anchors, and a level)
- Power Cable
- Quick Start Guide (this manual provides detailed instructions)



Image: The TCL 32-Inch Roku TV displayed with its included wall mount bracket below it.



Image: Various components of the wall mount kit, including the main bracket, mounting hardware, and a small level.

SETUP

1. Initial Placement and Power Connection

Place the TV on a stable, flat surface or prepare for wall mounting. Ensure adequate ventilation around the TV. Connect the power cable to the TV and then to a power outlet.

2. Wall Mount Installation (Optional)

If you choose to wall mount your TV, follow these general steps. Always refer to the specific instructions provided with your wall mount kit for detailed guidance, as mounting hardware can vary.

- 1. Identify Mounting Points:** Locate the VESA mounting holes on the back of your TV.
- 2. Attach TV Brackets:** Secure the vertical brackets from the wall mount kit to the back of the TV using the appropriate screws. Ensure they are firmly attached.
- 3. Mark Wall Position:** Hold the wall plate against the wall at your desired viewing height. Use a level to ensure it is straight and mark the drilling points.
- 4. Drill Holes and Install Anchors:** Drill pilot holes at the marked locations. Insert wall anchors if required for your wall type (e.g., drywall).
- 5. Secure Wall Plate:** Attach the wall plate to the wall using the provided screws. Verify it is securely fastened.
- 6. Mount TV:** Carefully lift the TV and hook the attached TV brackets onto the wall plate. Ensure the TV is securely seated. Some mounts include a locking mechanism or pull cords to release the TV.



Image: A diagram illustrating the installation of an ultra-slim TV wall mount, showing how the TV bracket attaches to the TV and then hooks onto the wall plate. It also highlights the pull-down cord for releasing the bracket.

3. Connecting External Devices

Your TV features 3 HDMI inputs (including 1 ARC port) for connecting devices such as Blu-ray players, gaming consoles, or soundbars. Use high-quality HDMI cables for optimal performance.

- **HDMI:** Connect devices to any available HDMI port.
- **HDMI ARC:** If connecting a soundbar or AV receiver, use the HDMI ARC port for simplified audio return channel functionality.
- **Antenna/Cable:** Connect an antenna or cable TV feed to the RF input for over-the-air or basic cable channels.

4. Initial Roku TV Setup

Upon first power-on, the TV will guide you through the Roku TV setup process:

1. **Language Selection:** Choose your preferred language.
2. **Network Connection:** Connect to your home Wi-Fi network. The TV supports dual-band Wi-Fi (2.4GHz and

5GHz) for reliable streaming.

3. **Roku Account:** Create a new Roku account or sign in to an existing one. This is required to access streaming channels and features.
4. **Channel Selection:** Add your favorite streaming channels.
5. **Antenna TV Setup (Optional):** If an antenna is connected, scan for available channels.

OPERATING YOUR TCL Roku TV

1. Roku TV Interface

The Roku TV home screen provides easy access to all your entertainment. Your favorite broadcast TV, streaming channels, gaming console, and other devices are displayed on a simple, customizable home screen. Use the remote control to navigate between inputs and streaming apps.



Image: The Roku TV home screen showing icons for popular streaming services like Netflix, Disney+, Apple TV, Roku Channel, Discovery+, ESPN, HBO Max, and Paramount+.

2. Streaming Entertainment

Access over half a million movies and TV episodes, plus sports, news, music, and more through the Roku platform. You can also stream free TV directly from your home screen or browse over 150 free live channels using the Live TV Channel Guide.

3. Voice Control

Your TCL Roku TV is compatible with Amazon Alexa and Google Assistant. Connect your TV to a compatible smart speaker or device to use voice commands for functions such as turning the TV on/off, changing channels, and adjusting volume.

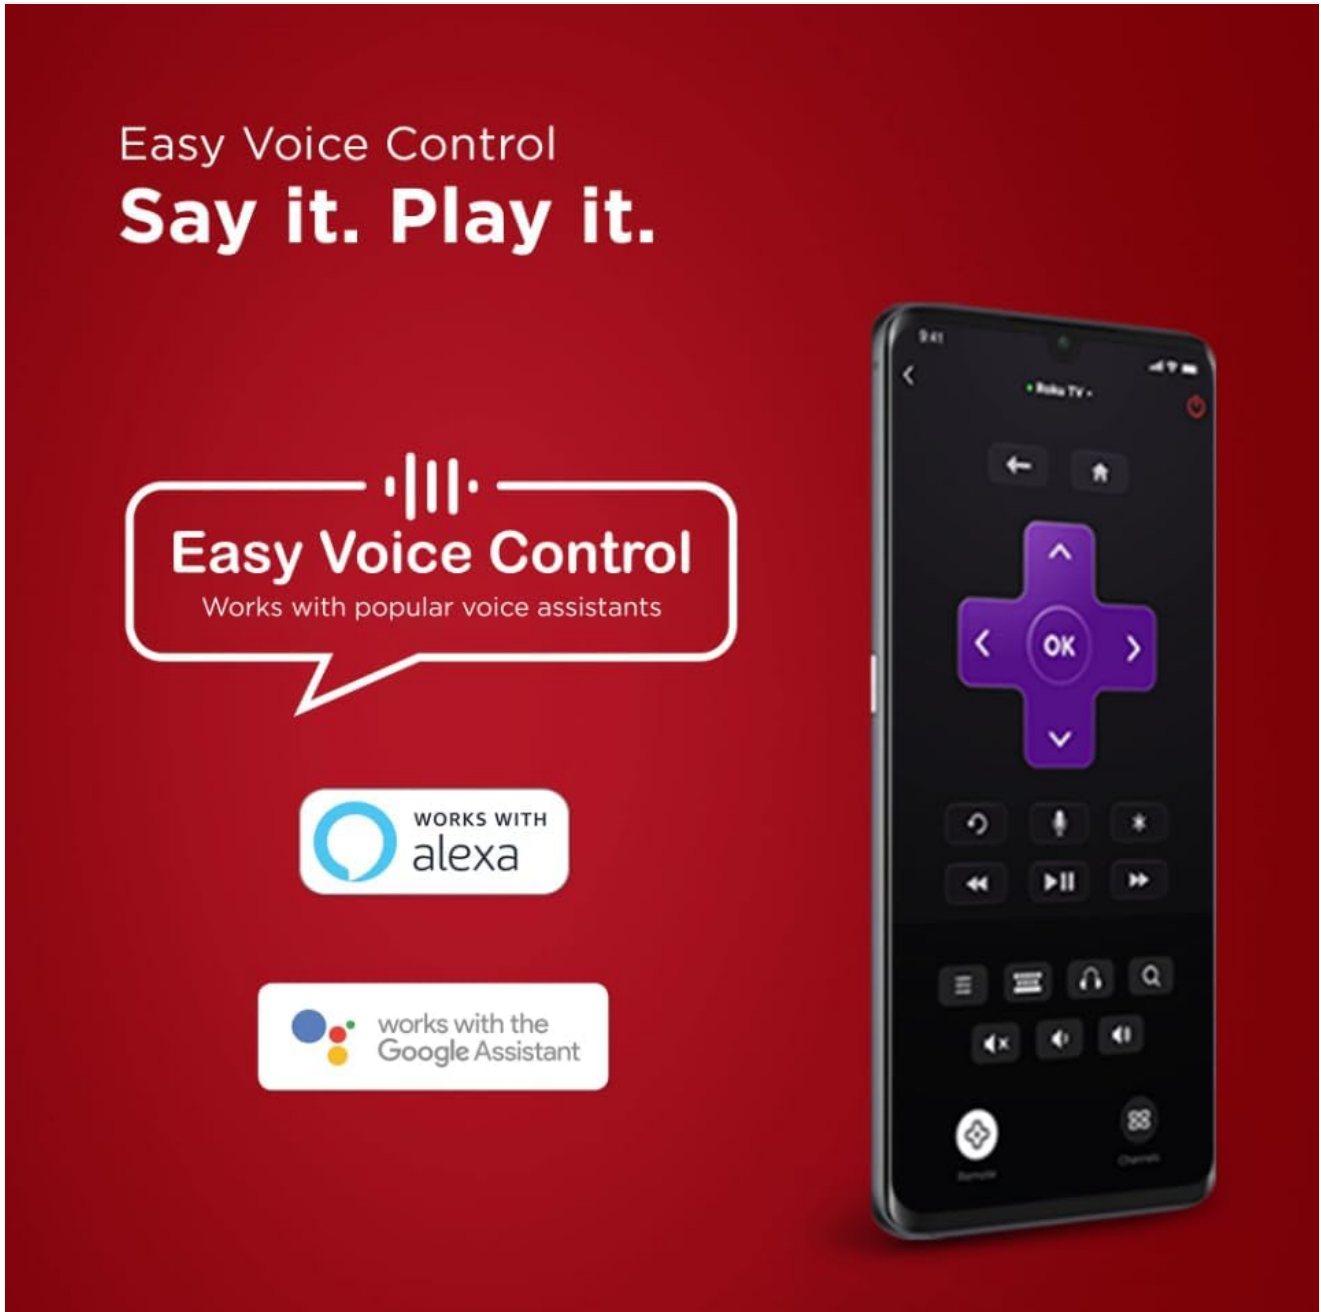


Image: A graphic illustrating the "Easy Voice Control" feature, showing compatibility with Amazon Alexa and Google Assistant.

4. Apple AirPlay

Effortlessly share videos, photos, music, and more from your Apple devices (iPhone, iPad, Mac) directly to your TV using Apple AirPlay. Ensure both your Apple device and the TV are connected to the same Wi-Fi network.

5. Roku Mobile App

Download the Roku mobile app for additional control and features. The app allows you to use your smartphone as a remote, search for content, and even listen privately with headphones connected to your phone.

Powerful Mobile App

The must-have app for streamers



Image: Screenshots of the Roku mobile app interface on a smartphone, showing search, content browsing, and remote control functions.

6. Gaming

Connect your gaming console to one of the HDMI inputs for a Full HD gaming experience. The TV is ready to display your favorite games.

Gaming
Ready to Play



Image: The TCL TV screen displaying a video game, indicating its suitability for gaming.

7. Dolby Audio

Experience enhanced audio quality with Dolby Audio processing, providing clear and immersive sound for your entertainment.



Image: The Dolby Audio logo positioned above a graphic depicting sound waves emanating from a TV screen, illustrating the immersive audio experience.

MAINTENANCE

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-specific cleaning solution. Avoid harsh chemicals.
- **Cleaning the Cabinet:** Use a soft, dry cloth to wipe the TV cabinet.
- **Ventilation:** Ensure the ventilation openings on the TV are not blocked to prevent overheating.
- **Power Cord:** Regularly check the power cord for any damage. If damaged, discontinue use and contact support.

TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common solutions:

Problem	Possible Solution
No power / TV won't turn on	<p>Ensure the power cord is securely plugged into both the TV and a working electrical outlet.</p> <p>Try a different outlet.</p> <p>Check if the remote control batteries need replacement.</p>
No picture, but sound is present	<p>Verify the correct input source is selected.</p> <p>Check all cable connections (HDMI, etc.) are secure.</p> <p>Try restarting the TV by unplugging it for 30 seconds and plugging it back in.</p>
No sound, but picture is present	<p>Increase the volume.</p> <p>Check if the TV is muted.</p> <p>Verify audio cables are correctly connected.</p> <p>If using external audio, ensure it is powered on and correctly configured.</p>

Problem	Possible Solution
Wi-Fi connection issues / Freezing	<p>Restart your Wi-Fi router and modem.</p> <p>Go to the TV's network settings and reconnect to your Wi-Fi network.</p> <p>Ensure the TV is within range of your Wi-Fi router.</p> <p>Perform a system restart on the TV (Settings > System > Power > System restart).</p> <p>If issues persist, consider a factory reset (Settings > System > Advanced system settings > Factory reset), noting this will erase all settings and installed apps.</p>
Remote control not working	<p>Replace the batteries in the remote control.</p> <p>Ensure there are no obstructions between the remote and the TV's IR sensor.</p>

SPECIFICATIONS

Feature	Detail
Brand	TCL
Model Number	TCL 32S3
Screen Size	32 Inches (82 cm diagonal)
Display Technology	LED
Resolution	1080p Full HD
Refresh Rate	60 Hz
Aspect Ratio	16:9
Connectivity Technology	Wi-Fi (Dual-Band)
HDMI Inputs	3 (1 ARC compatible)
Special Features	Works with Alexa and Google Assistant, Apple AirPlay, Roku Smart TV Platform, Dolby Audio
Item Weight	12.32 pounds
Product Dimensions (D x W x H)	32 x 6 x 22 inches

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official TCL support website. For technical assistance, troubleshooting beyond this manual, or service inquiries, contact TCL customer support.

As this product is listed as "Renewed," specific warranty terms may differ from new products. Please consult the seller or Amazon Renewed program details for applicable warranty coverage.

IMPORTANT SAFETY INFORMATION

- Read all instructions before operating the TV.

- Keep these instructions for future reference.
- Heed all warnings on the appliance and in the operating instructions.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.