

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KODAK](#) /

› [Kodak PIXPRO FZ45 Digital Camera User Manual](#)

## KODAK PIXPRO FZ45

# Kodak PIXPRO FZ45 Digital Camera User Manual

Model: PIXPRO FZ45

## INTRODUCTION

---

This manual provides comprehensive instructions for the operation and maintenance of your Kodak PIXPRO FZ45 Digital Camera. Please read this manual thoroughly before using your camera to ensure proper handling and optimal performance. The Kodak PIXPRO FZ45 is a compact and user-friendly digital camera designed for capturing high-quality photos and Full HD videos with ease.

## WHAT'S INCLUDED

---

Your Kodak PIXPRO FZ45 package includes the following items:

- Kodak PIXPRO FZ45 Digital Camera (Red)
- 32GB SD Memory Card
- Camera Bag
- 2x AA Batteries
- USB Cable
- Wrist Strap
- Quick Start Guide
- Kodak 1 Year Limited Warranty Card

## PRODUCT OVERVIEW

---

The Kodak PIXPRO FZ45 is designed for simplicity and performance. Below are key components and their functions.



Figure 1: Kodak PIXPRO FZ45 Digital Camera bundle, showing the red camera, a black camera bag, and a SanDisk 32GB SD card.



Figure 2: Front view of the Kodak PIXPRO FZ45 camera, highlighting the lens, flash, and Kodak branding.



Figure 3: Rear view of the Kodak PIXPRO FZ45 camera, displaying the 2.7-inch LCD screen and various control buttons for navigation and settings.



Figure 4: Top view of the Kodak PIXPRO FZ45 camera, showing the shutter button and power button.



Figure 5: Side view of the Kodak PIXPRO FZ45 camera, indicating the wrist strap attachment point.



Figure 6: Bottom view of the Kodak PIXPRO FZ45 camera, revealing the battery and memory card compartment cover.



## SLINGER ALPINE 2 CAMERA BAG

the open and shut case for modern compact point and shoot and smaller mirrorless cameras



Staunch fabrics



Water-resistant materials



Accessible Camera bag

Figure 7: The Slinger Alpine 2 Camera Bag, a compact and water-resistant case designed for point-and-shoot cameras.



Figure 8: The SanDisk Ultra 32GB SD Memory Card, included for storing photos and videos.

## SETUP

---

### 1. Inserting Batteries

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the cover open.
3. Insert the two AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

### 2. Inserting Memory Card

1. With the battery compartment open, locate the SD card slot.
2. Insert the 32GB SD memory card with the metal contacts facing the front of the camera until it clicks into place.
3. To remove, gently push the card in until it springs out.

### 3. Attaching the Wrist Strap

Thread the wrist strap through the strap lug on the side of the camera to prevent accidental drops.

## OPERATING THE CAMERA

---

### Powering On/Off

Press the **Power** button located on the top of the camera to turn it on or off.

### Basic Controls

The camera features an intuitive button layout on the rear for easy navigation:

- **DISP.:** Toggles display information on the LCD screen.
- **SET:** Confirms selections in menus.
- **MODE:** Changes shooting modes (e.g., Auto, Program, Scene Modes).
- **Directional Pad:** Navigates menus and adjusts settings. The up arrow often controls flash settings, and the down arrow may control self-timer.
- **W/T (Zoom Lever):** Controls the optical and digital zoom. 'W' for wide-angle, 'T' for telephoto.

### Taking Photos

1. Turn on the camera.
2. Frame your shot using the 2.7-inch LCD screen.
3. Press the **Shutter** button halfway down to focus. The focus frame will turn green when focus is achieved.
4. Press the **Shutter** button all the way down to capture the image.

### Recording Videos

The FZ45 supports 1080p Full HD video recording.

1. Switch to video recording mode using the **MODE** button if necessary.
2. Press the dedicated **Record** button (often marked with a red dot) to start recording.
3. Press the **Record** button again to stop recording.

### Using the Flash

The built-in flash can be adjusted for various lighting conditions. Press the **Flash** button (often the up arrow on the directional pad) to cycle through modes like Auto Flash, Fill-in Flash, Red-eye Reduction, and Flash Off.

## MAINTENANCE

---

### Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and LCD screen, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- Do not use excessive force when cleaning.

### Battery Care

- Remove batteries if the camera will not be used for an extended period to prevent leakage.
- Use only recommended AA alkaline batteries.
- Dispose of used batteries responsibly.

### Memory Card Handling

- Always format new memory cards in the camera before first use.

- Avoid removing the memory card while the camera is powered on or writing data.
- Keep memory cards away from strong magnetic fields.

## TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not power on.	Check if batteries are inserted correctly and have sufficient charge. Replace with new AA batteries if necessary.
Pictures are blurry.	Ensure proper focus by pressing the shutter button halfway. Hold the camera steady during capture. Check lighting conditions; use flash if needed.
Memory card error.	Reinsert the memory card. Try formatting the card (this will erase all data). Use a different compatible SD card if the issue persists.
Flash not firing.	Check flash settings to ensure it's not set to "Flash Off". Allow time for the flash to recharge between shots.
Short battery life.	Using flash frequently or reviewing images extensively can drain batteries faster. Use fresh, high-quality AA alkaline batteries.

## SPECIFICATIONS

Feature	Detail
Brand	KODAK
Model Name	PIXPRO FZ45
Photo Sensor Resolution	16 MP
Optical Zoom	4x
Digital Zoom	6x (combined 24x capability)
Video Resolution	1080p Full HD
Screen Size	2.7 Inches LCD
Image Stabilization	Digital
Supported File Format	RAW, MP4 (Video)
Minimum Focal Length	27 Millimeters
Maximum Focal Length	108 Millimeters
Power Source	2x AA Alkaline Batteries
Connectivity	USB, HDMI (Video Out)
Memory Card Support	SDHC, SDXC (up to 32GB included)
Item Weight	15.52 ounces

Feature	Detail
Color	Red

## WARRANTY AND SUPPORT

---

### Warranty Information

Your Kodak PIXPRO FZ45 Digital Camera comes with a **Kodak 1 Year Limited Warranty**. This warranty covers manufacturing defects and issues arising from normal use within one year from the date of purchase. Please retain your proof of purchase for warranty claims.

### Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please refer to the contact information provided on your warranty card or visit the official KODAK PIXPRO support website. You can also visit the [KODAK Store on Amazon](#) for more product information.

