

[Manuals.plus](#) /

> [SUPERJARE](#) /

> SUPERJARE Bakers Rack with Power Outlet Instruction Manual

SUPERJARE B0CS28XZPC

SUPERJARE Bakers Rack with Power Outlet Instruction Manual

Model: B0CS28XZPC

PRODUCT OVERVIEW

The SUPERJARE Bakers Rack is a versatile storage solution designed for kitchens, coffee bars, or other living spaces. It features multiple shelves, a wire basket, S-shaped hooks, and an integrated power outlet with 3 AC outlets and an on-off switch for convenient appliance use. Its robust construction ensures stability and durability.



Figure 1: Fully assembled SUPERJARE Bakers Rack, showcasing its storage capabilities and integrated power outlet.

SAFETY INFORMATION

- Always ensure the rack is placed on a flat, stable surface to prevent tipping.
- Install the provided anti-tip device to secure the rack to a wall, especially in households with children or pets.
- Do not overload shelves.
- When using the power outlet, ensure appliances are within the specified voltage and amperage limits (125V 15A).
- Turn off the power outlet switch when not in use or when connecting/disconnecting appliances to prevent electrical hazards.
- Keep liquids away from the power outlet to avoid electrical shock.

SETUP AND ASSEMBLY

Assembly of the SUPERJARE Bakers Rack requires careful attention to the instructions. All necessary tools and numbered components are provided to facilitate the process.

Before You Begin:

- Unpack all components and verify against the parts list.
- Ensure you have ample space for assembly.
- Keep small parts out of reach of children.

Assembly Steps (General Guidance):

1. Attach the main frame components using the provided screws and tools.
2. Secure the shelves to the frame, ensuring they are level and stable.
3. Install the wire basket and S-shaped hooks as desired.
4. Mount the power outlet unit to its designated position on the rack.
5. Attach the adjustable feet to the bottom of the rack. Adjust them to ensure the rack is level and stable on your floor.
6. Install the anti-tip device to a wall stud for added safety.

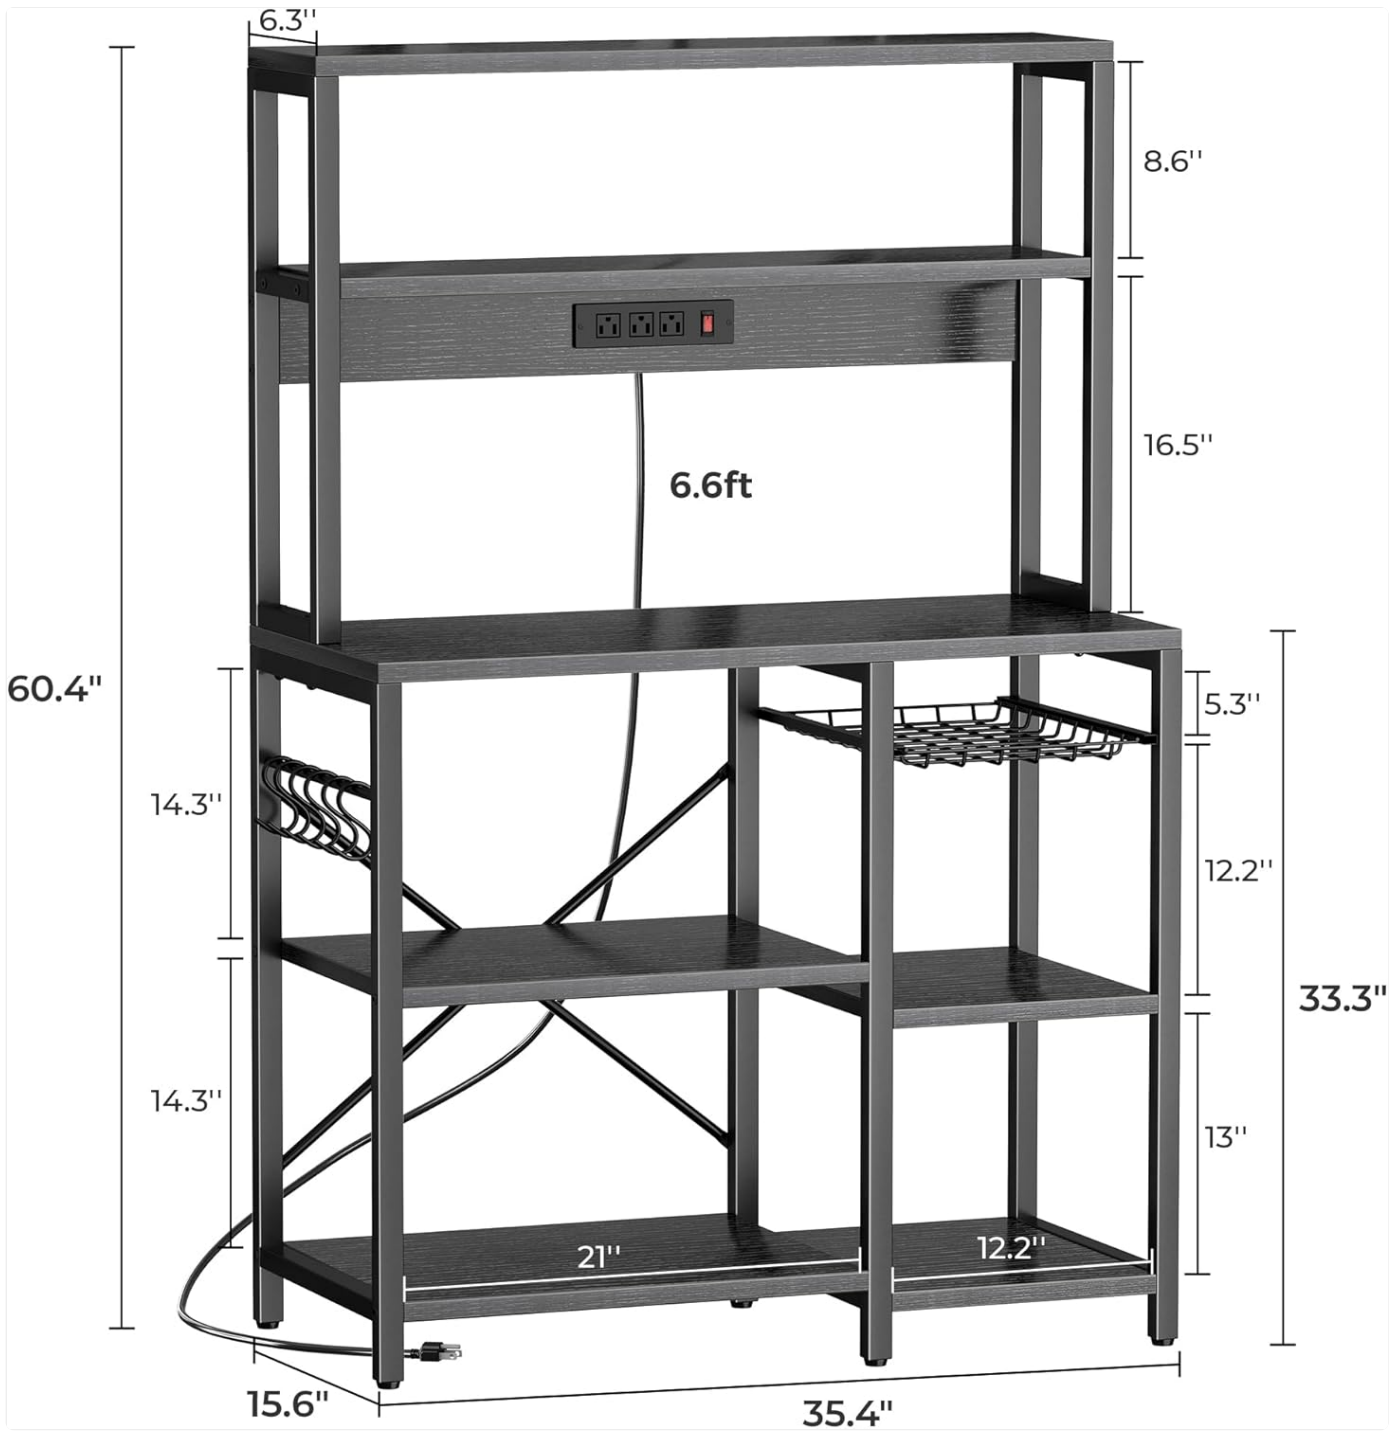


Figure 2: Product dimensions for planning placement and assembly.



Figure 3: Key components including S-shaped hooks, wire tray, adjustable feet, and desktop surface.

OPERATING INSTRUCTIONS

Using the Storage Features:

- **Upper Shelves:** Utilize the two upper shelves for organizing seasonings, spice jars, small decorative items, or snack foods.
- **Spacious Desktop:** The main desktop surface is suitable for larger appliances such as coffee makers, toasters, or microwave ovens.
- **Wire Basket:** The integrated wire basket is ideal for storing fruits, vegetables, or other frequently accessed items.
- **S-Shaped Hooks:** Hang ladles, mugs, towels, or other kitchen utensils on the six S-shaped hooks for easy access.

Using the Power Outlet:

- Plug the rack's power cord into a standard 120V AC wall outlet. The power cord is approximately 6.6 feet long.

- The rack features 3 AC outlets (125V 15A). Connect your kitchen appliances or electronic devices to these outlets.
- Use the integrated on-off switch to control power to all three outlets. Turn the switch to the 'ON' position to supply power and 'OFF' to cut power. This enhances safety and conserves energy when appliances are not in use.



Figure 4: Detail of the 3 AC outlets and on-off switch for safe power management.



Figure 5: Safety features of the integrated power strip.

MAINTENANCE

To maintain the appearance and longevity of your SUPERJARE Bakers Rack, follow these simple care instructions:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Spills:** Promptly clean up any spills to prevent staining or damage to the wood particle board.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Power Outlet:** Ensure the power outlet remains dry and free of dust. Do not attempt to disassemble the power outlet unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Rack is wobbly or unstable.	Uneven floor surface; loose connections; adjustable feet not properly set.	Adjust the leveling feet at the bottom of the rack until it is stable. Ensure all assembly screws are tightened. Verify the anti-tip device is securely installed.
Power outlet not working.	Power switch is off; rack's power cord unplugged; faulty outlet; internal wiring issue.	Ensure the on-off switch on the power strip is in the 'ON' position. Check if the rack's main power cord is securely plugged into a functioning wall outlet. If issues persist (e.g., crackling sounds, intermittent power), discontinue use and contact customer support.
S-shaped hooks or wire basket not holding items securely.	Improper installation; overloaded.	Ensure hooks are correctly seated on the rack's frame. Do not exceed the recommended weight capacity for the hooks or basket.

SPECIFICATIONS

- **Model:** B0CS28XZPC
- **Brand:** SUPERJARE
- **Product Dimensions:** 35.4"D x 15.6"W x 64"H
- **Item Weight:** 43.9 pounds
- **Number of Shelves:** 7
- **Room Type:** Balcony, Coffee Bar, Kitchen
- **Material:** Durable particle board and robust metal frame
- **Power Outlet:** 3 AC Outlets, 125V 15A, 1 On-off Switch, 6.6-foot Power Cord
- **Special Features:** Integrated power outlet, wire basket, 6 S-shaped hooks, adjustable feet, anti-tip device.
- **Assembly Required:** Yes
- **Care Instructions:** Clean with a Damp Cloth

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact SUPERJARE customer support directly. For assistance with product issues, missing parts, or general inquiries, please reach out to the manufacturer's customer service department.

Manufacturer: SUPERJARE

Contact: Refer to the official SUPERJARE website or product packaging for current contact details.



