

[Manuals.plus](#) /

› [Lamshaw](#) /

› Instruction Manual for Lamshaw Smart Watch Replacement Bands

## Lamshaw H97 Pro Smart Watch Band

# Instruction Manual for Lamshaw Smart Watch Replacement Bands

COMPATIBLE WITH YOUSOKU H97 PRO / MGAOLO 1.5 INCHES H97 PRO SMART WATCHES

Model: H97 Pro Smart Watch Band

## INTRODUCTION

---

This manual provides comprehensive instructions for the installation, proper use, and maintenance of your new Lamshaw Silicone Replacement Bands. These bands are specifically designed for compatibility with the YOUSOKU H97 Pro Smart Watch and the MgaoLo 1.5 Inches H97 Pro Smart Watch.

To ensure optimal performance and longevity of your watch bands, please read this manual thoroughly before proceeding with installation or use. Proper installation is crucial for a secure fit and comfortable wearing experience.



*Figure 1: Lamshaw Silicone Replacement Bands (Black and White)*

This image displays the two silicone watch bands included in the pack, one in white and one in black, both featuring black buckles. They are shown in a curved position, highlighting their flexible nature.

## SETUP AND INSTALLATION

---

### Pre-installation Check

Before installing your new bands, it is essential to verify the lug width of your smart watch. These 16mm straps are designed to fit watches with 16mm wide lugs only. Please measure the width of your watch's lug (the part where the band attaches) to ensure compatibility. If you are unsure, please consult your watch's original manual or contact the manufacturer.

### Installation Steps

The Lamshaw replacement bands feature quick-release spring bars for easy installation and removal without the need for special tools. Follow these steps to attach the new band to your smart watch:

1. **Prepare the Watch:** If an old band is attached, carefully remove it by locating the quick-release pin or spring bar lever and sliding it to detach the band from the watch lugs.
2. **Identify Band Ends:** Each band segment has a quick-release pin. Identify the correct orientation for each segment

(one side typically has the buckle, the other has the holes).

3. **Attach First Side:** Insert one end of the quick-release pin into one of the lug holes on your watch.
4. **Engage Quick-Release:** While holding the first end in place, pull the quick-release lever on the pin towards the center of the band. This retracts the other end of the pin.
5. **Align and Release:** Carefully align the retracted pin end with the opposite lug hole. Once aligned, release the quick-release lever. The pin should snap into place securely. Gently tug on the band to ensure it is firmly attached.
6. **Repeat for Second Side:** Follow the same steps to attach the second band segment to the other set of lugs on your watch.



*Figure 2: Quick-Release Pin Mechanism*

This image provides a detailed view of a single black silicone watch band, highlighting the quick-release pin mechanism at its ends, which facilitates easy attachment and detachment from the watch.

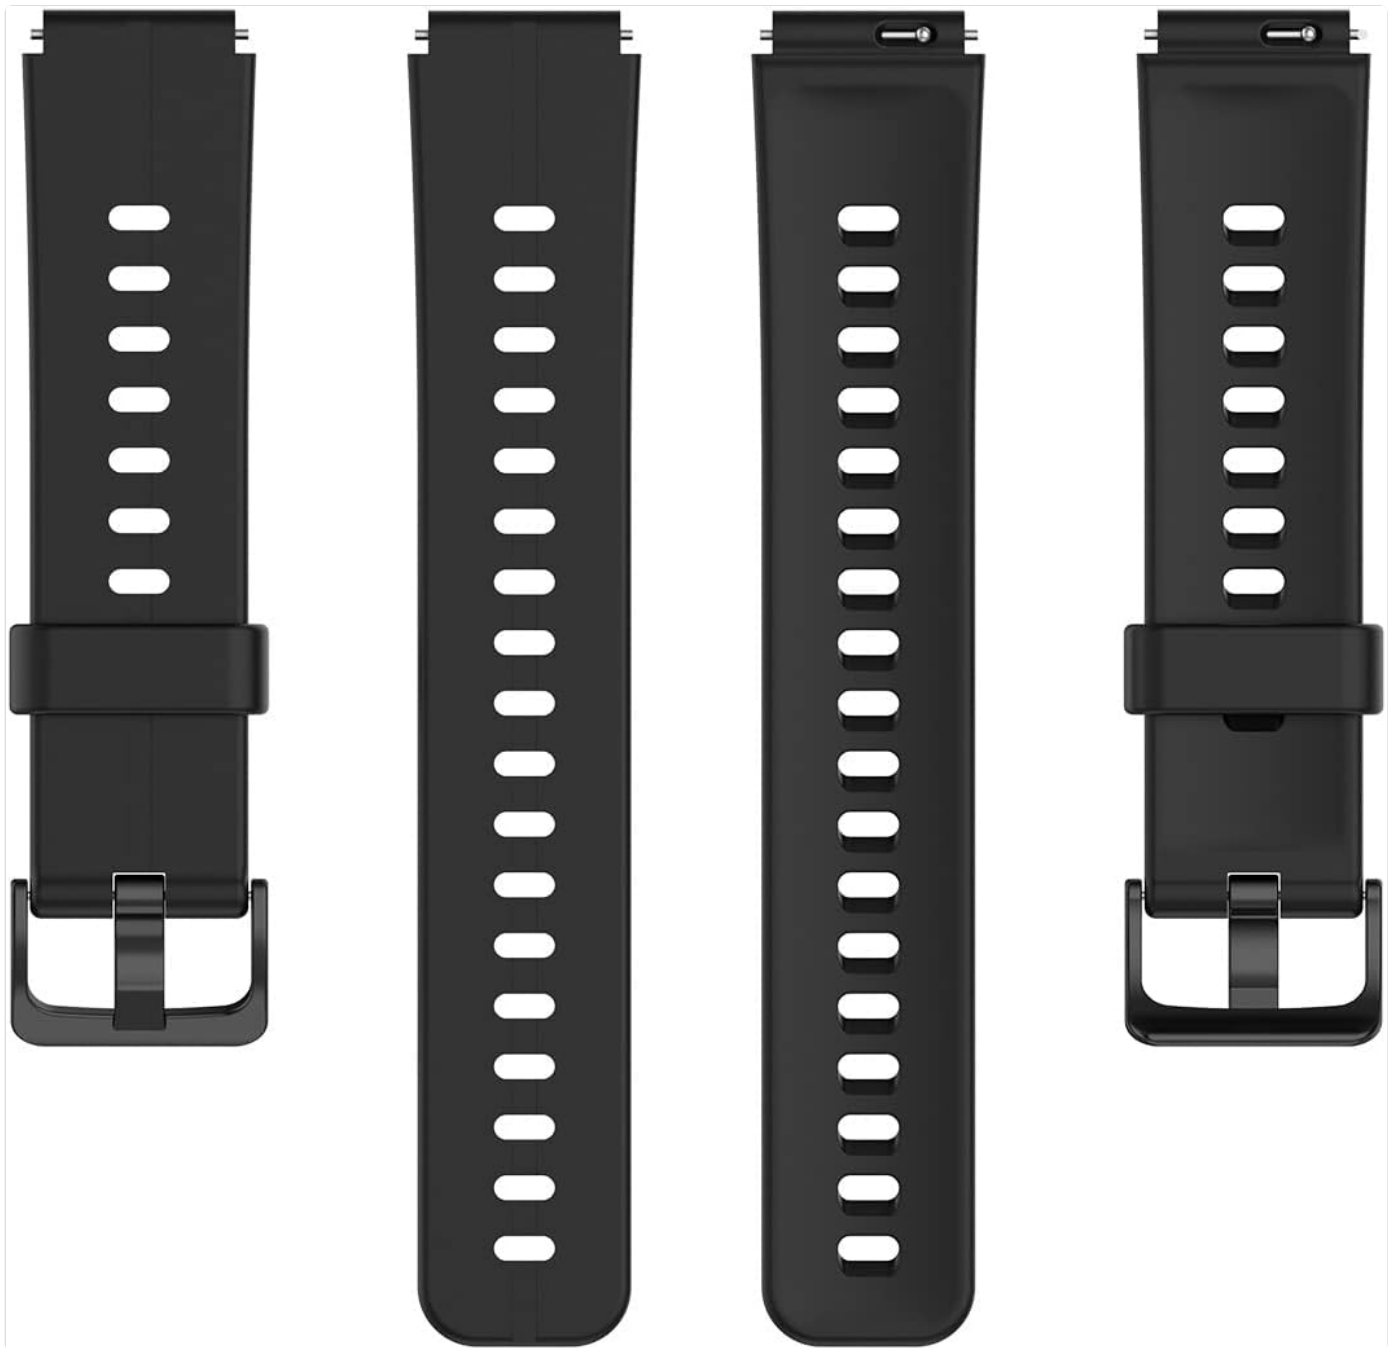


*Figure 3: Band Design and Attachment Points*

This image displays four different perspectives of a black silicone watch band, showcasing its overall design, the buckle, and the quick-release pins at both ends, which are used for securing it to a watch.

## OPERATING (WEARING) INSTRUCTIONS

---

Once installed, your Lamshaw silicone band is ready for daily wear. These bands are made from food-grade silicone material, offering a comfortable, lightweight, and sweat-proof experience.

### Wearing Your Watch

1. **Position the Watch:** Place the watch face on the top of your wrist.
2. **Fasten the Buckle:** Wrap the band around your wrist and insert the tang (pin) of the buckle into one of the adjustment holes that provides a snug yet comfortable fit.
3. **Secure the Excess:** Thread the excess strap through the two keepers (loops) to prevent it from flapping.

Ensure the band is not too tight, which could restrict circulation, nor too loose, which could cause the watch to move

excessively or interfere with sensor readings.



*Figure 4: Watch Band in Use*

This image shows a smart watch with a black band being worn on a child's wrist, demonstrating how the band appears during typical use.

## MAINTENANCE

---

Proper care and maintenance will extend the life of your silicone watch bands and keep them looking new.

### Cleaning Instructions

- **Regular Cleaning:** Wipe the bands regularly with a soft, damp cloth to remove sweat, dirt, and oils.
- **Deep Cleaning:** For a more thorough clean, use mild soap (like hand soap) and water. Gently rub the band with your fingers or a soft brush.
- **Rinsing and Drying:** Rinse the band thoroughly with clean water to remove all soap residue. Dry the band completely with a soft, lint-free cloth before reattaching it to your watch or wearing it.

- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the silicone material and cause discoloration.

### Storage

When not in use, store your bands in a cool, dry place away from direct sunlight and extreme temperatures. This helps prevent material degradation and maintains flexibility.

### TROUBLESHOOTING

If you encounter any issues with your Lamshaw replacement bands, please refer to the common problems and solutions below.

| Problem                                         | Possible Cause / Solution                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Band does not fit the watch lugs.               | <p><b>Incorrect Lug Width:</b> The most common reason is that the watch's lug width is not 16mm. Please re-measure your watch's lug width carefully. These bands are specifically designed for 16mm lugs.</p> <p><b>Incorrect Watch Model:</b> Ensure your watch is a YOUSOKU H97 Pro or MgaoLo 1.5 Inches H97 Pro Smart Watch.</p>                                                                                     |
| Difficulty installing the quick-release pin.    | <p><b>Pin Not Fully Retracted:</b> Ensure you are pulling the quick-release lever fully to retract the pin sufficiently.</p> <p><b>Misalignment:</b> Make sure one end of the pin is securely in its lug hole before attempting to align the other end. Gently wiggle the band to help the pin snap into place.</p>                                                                                                     |
| Band feels uncomfortable or causes irritation.  | <p><b>Too Tight:</b> Loosen the band by adjusting to a larger hole. The band should be snug but not constricting.</p> <p><b>Residue:</b> Clean the band thoroughly as per the Maintenance section. Accumulated sweat or dirt can cause irritation.</p> <p><b>Allergy:</b> While made of skin-friendly silicone, rare individual sensitivities may occur. Discontinue use if irritation persists.</p>                    |
| Band shows signs of wear or damage prematurely. | <p><b>Excessive Stress:</b> Avoid pulling or stretching the band excessively. While durable, extreme force can cause damage.</p> <p><b>Chemical Exposure:</b> Ensure the band has not come into contact with harsh chemicals, solvents, or abrasive materials.</p> <p><b>Contact Support:</b> If the band rips or breaks under normal use, please contact customer support as per the Warranty and Support section.</p> |

### SPECIFICATIONS

- **Material:** Premium Food-Grade Silicone
- **Band Width:** 16mm
- **Clasp Type:** Tang Buckle
- **Compatibility:** YOUSOKU H97 Pro Smart Watch, MgaoLo 1.5 Inches H97 Pro Smart Watch
- **Features:** Quick-release spring bars, Skin-friendly, Lightweight, Sweat-proof, Durable
- **Color Options (as per pack):** Black, White (other colors may be available separately)

# WARRANTY AND SUPPORT

Lamshaw is committed to providing a wonderful shopping experience and excellent after-sales service for its products.

If you encounter any problems or have questions regarding your Lamshaw Smart Watch Replacement Bands, please do not hesitate to contact our customer support team. We are dedicated to offering a perfect solution immediately to ensure your satisfaction.

Please refer to your purchase documentation or the seller's information on the platform where you purchased the product for specific contact details and warranty terms.

© 2024 Lamshaw. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CS2NG3K6>

More documents and user manuals: <https://manuals.plus/>