

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BURLAN](#) /

› [BURLAN 10-inch Rechargeable Desk Fan \(Model N701\) Instruction Manual](#)

## BURLAN N701

# BURLAN 10-inch Rechargeable Desk Fan (Model N701) Instruction Manual

Your guide to safe and efficient use

[Introduction](#)

[Safety Instructions](#)

[Package Contents](#)

[Product Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. INTRODUCTION

Thank you for choosing the BURLAN 10-inch Rechargeable Desk Fan, Model N701. This air circulator is designed to provide powerful yet quiet airflow, enhancing comfort in various environments. Its portable, battery-operated design with USB charging capability makes it versatile for use in offices, living rooms, bedrooms, and outdoor settings. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Image 1.1: The BURLAN 10-inch Rechargeable Desk Fan, Model N701.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using this fan.
- Do not operate any fan with a damaged cord or plug. Discard the fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.

- Never insert fingers or any other objects through the grille when the fan is operating.
- Unplug the fan from the power source before moving, cleaning, or when not in use.
- Do not use the fan in wet or damp locations such as bathrooms or laundry areas.
- This fan is intended for indoor use only. Do not use outdoors.
- Keep the fan out of reach of children and pets.
- Ensure the fan is placed on a stable, flat surface to prevent tipping.
- Only use the provided USB cable or a certified equivalent for charging.

### **3. PACKAGE CONTENTS**

---

Please check the package for the following items:

- BURLAN 10-inch Rechargeable Desk Fan (Model N701)
- USB Charging Cable (approximately 4ft)
- Instruction Manual (this document)

### **4. PRODUCT OVERVIEW**

---

Familiarize yourself with the main components of your BURLAN Desk Fan:

# Air Circulator Fan

Providing quiet, powerful cooling for your home or office



Image 4.1: Illustration of the fan's air circulation capability.

- **Fan Head:** Contains the blades and front/rear grilles.
- **Control Panel:** Located on the base or rear of the fan, typically includes power and speed adjustment buttons.
- **Base:** Provides stability and houses the battery and USB charging port.
- **USB Charging Port:** For connecting the USB charging cable.
- **Adjustable Stand:** Allows for vertical tilt adjustment of the fan head.

## 5. SETUP

### 5.1 Initial Charging

Before first use, it is recommended to fully charge the fan's built-in 4000mAh battery.

1. Connect the small end of the USB charging cable to the USB charging port on the fan.
2. Connect the larger end of the USB cable to a compatible USB power source (e.g., computer USB port, USB wall adapter, power bank).
3. The charging indicator light will illuminate (color may vary) to show that the fan is charging.

4. Allow approximately 4-6 hours for a full charge. The indicator light will change or turn off once fully charged.



Image 5.1: The fan connected to a USB power source for charging.

## 5.2 Placement

Place the fan on a stable, flat surface. Ensure there are no obstructions to the airflow at the front or rear of the fan.

## 6. OPERATION

### 6.1 Power On/Off and Speed Adjustment

The fan features 4 adjustable speed settings:

1. **Power On:** Press the power button once to turn on the fan at the lowest speed setting (Soft Wind).
2. **Adjust Speed:** Press the power button repeatedly to cycle through the speed settings: Soft Wind (Speed 1), Medium Wind (Speed 2), High Wind (Speed 3), Strong Wind (Speed 4).
3. **Power Off:** After the highest speed setting, pressing the button again will turn the fan off. Alternatively,

press and hold the power button for 2-3 seconds to turn off the fan from any speed setting.



Image 6.1: Visual representation of the four adjustable wind force modes.

## 6.2 Vertical Tilt Adjustment

The fan head can be manually tilted up or down by up to 110 degrees to direct airflow as needed. Gently hold the fan head and adjust it to your desired angle.

# 110° Rotate Table Fan

Great For Office & Living Room & Outdoor



Image 6.2: Demonstrating the 110-degree vertical rotation capability of the fan.

## 6.3 Battery Life and USB Power

The built-in 4000mAh battery provides up to 11 hours of continuous operation on lower settings. For extended use or when the battery is low, the fan can be operated while connected to a USB power source.



Image 6.3: The fan operating quietly in a bedroom setting, highlighting its low noise level.

## 7. MAINTENANCE AND CLEANING

---

Regular cleaning helps maintain optimal performance and extends the lifespan of your fan.

### 7.1 General Cleaning

- Always unplug the fan before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan.
- Do not use abrasive cleaners or solvents, as they may damage the fan's finish.

### 7.2 Cleaning the Blades and Grille

The front cover of the fan is detachable for easy cleaning of the blades and interior grille.

1. Ensure the fan is turned off and unplugged.
2. Locate the release mechanism or screws on the edge of the front grille. Carefully detach or unscrew the front cover.
3. Wipe the fan blades and the inside of the grilles with a soft, damp cloth. For stubborn dust, a mild soap solution can be used, followed by wiping with a clean, damp cloth.
4. Ensure all parts are completely dry before reassembling.
5. Carefully reattach the front cover, ensuring it is securely fastened.



Image 7.1: Illustration of the fan's detachable front cover for easy cleaning.

## 8. TROUBLESHOOTING

If you encounter any issues with your BURLAN Desk Fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted. Not connected to power.	Charge the fan using the USB cable. Ensure the USB cable is securely connected to both the fan and a working power source.
Weak airflow.	Low battery. Fan speed set too low. Obstruction in front/rear grille.	Charge the fan. Increase the fan speed. Check for and remove any obstructions.
Fan is making unusual noise.	Loose parts. Dust accumulation on blades.	Turn off and unplug the fan. Check if the front grille is securely attached. Clean the fan blades as described in the Maintenance section.
Battery life is shorter than expected.	Operating on highest speed settings. Battery degradation over time.	Lower the fan speed to conserve battery. Ensure the fan is fully charged before use.

## 9. SPECIFICATIONS

Feature	Detail
Brand	BURLAN

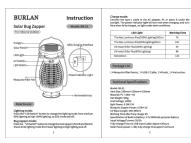
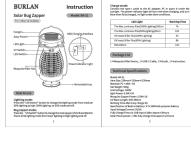
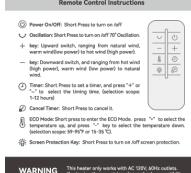
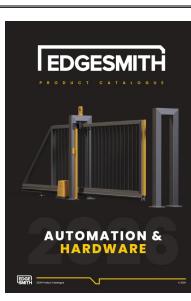
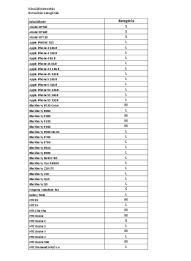
Feature	Detail
Model Name	N701
Product Dimensions	7"D x 6"W x 10"H
Item Weight	1.7 Pounds
Power Source	Battery Powered / USB
Battery Capacity	4000mAh (Built-in)
Wattage	5 watts
Voltage	5 Volts
Noise Level	As low as 28dB (manufacturer stated)
Air Flow Capacity	70 Cubic Feet Per Minute
Number of Blades	3
Number of Power Levels	4
Control Method	Push Button
Special Features	Rechargeable Battery, Ultra Quiet, Multiple USB Cord Powered Compatibility, 110° Vertical Tilt

## 10. WARRANTY AND SUPPORT

BURLAN products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact BURLAN customer support directly. Please retain your proof of purchase for warranty claims.

### Customer Support:

For technical assistance, troubleshooting, or warranty inquiries, please visit the official BURLAN website or contact their customer service department. Contact details are typically provided on the product packaging or the brand's official online presence.

	<p><a href="#">BURLAN BK-21 Solar Bug Zapper: Indoor &amp; Outdoor Mosquito Killer - Instructions &amp; Specifications</a></p> <p>Comprehensive guide for the BURLAN BK-21 Solar Bug Zapper. Covers charging, operation modes, technical specifications, package contents, cleaning instructions, safety warnings, and warranty information for effective insect control in indoor and outdoor environments.</p>
	<p><a href="#">Burlan Space Heater Remote Control Instructions and Operation Guide</a></p> <p>Comprehensive guide to operating the Burlan Space Heater remote control. Learn how to use power functions, adjust heat settings, set timers, utilize ECO mode, manage oscillation, and understand indicator lights. Includes important safety warnings.</p>
	<p><a href="#">BURLAN BK-21 Solar Bug Zapper: Indoor &amp; Outdoor Mosquito Killer - Instructions &amp; Specifications</a></p> <p>Comprehensive guide for the BURLAN BK-21 Solar Bug Zapper. Covers charging, operation modes, technical specifications, package contents, cleaning instructions, safety warnings, and warranty information for effective insect control in indoor and outdoor environments.</p>
	<p><a href="#">Burlan Space Heater Remote Control Instructions and Operation Guide</a></p> <p>Comprehensive guide to operating the Burlan Space Heater remote control. Learn how to use power functions, adjust heat settings, set timers, utilize ECO mode, manage oscillation, and understand indicator lights. Includes important safety warnings.</p>
	<p><a href="#">Edgesmith Automation &amp; Hardware Product Catalogue 2026</a></p> <p>Edgesmith offers a comprehensive range of gate automation, hardware, and electric fencing solutions. This 2026 catalogue features leading brands like Roger Technology, Locinox, and Boss Hardware, providing solutions for residential and commercial projects, emphasizing quality, innovation, and professional installation.</p>
	<p><a href="#">Mobile Device Insurance Categories and Classification</a></p> <p>A comprehensive list of mobile devices categorized by their insurance tiers (S, M, L). This classification helps in determining insurance premiums and coverage for various phone models from different manufacturers.</p>