

[Manuals.plus](#) /

› [iWALK](#) /

› iWALK Magnetic Portable Charger (MXB009) User Manual

iWALK MXB009

iWALK Magnetic Portable Charger User Manual

Model: MXB009

Brand: iWALK

INTRODUCTION

Thank you for choosing the iWALK Magnetic Portable Charger. This 10,000mAh wireless power bank is designed to provide convenient and efficient charging for your compatible devices, featuring a versatile stand and strong magnetic attachment. Please read this manual thoroughly before use to ensure optimal performance and safety.

Package Contents:

- 1x iWALK 10,000mAh Power Bank (Model: MXB009)
- 1x USB-C to USB-C Cable
- 1x User Manual



Image: The iWALK Magnetic Portable Charger attached to an iPhone, demonstrating its compact design and the extended ring holder for versatile use.

KEY FEATURES

1. High Capacity & Fast Charging

The iWALK MXB009 features a 10,000mAh battery capacity, capable of charging an iPhone 13 twice, an iPhone 14 Pro

twice, and an iPhone 15 Pro Max 1.5 times. It supports 15W Max magnetic wireless charging, allowing your iPhone 16 to reach 50% charge in approximately 60 minutes. Additionally, it offers 20W Power Delivery (PD) wired charging via its USB-C port.

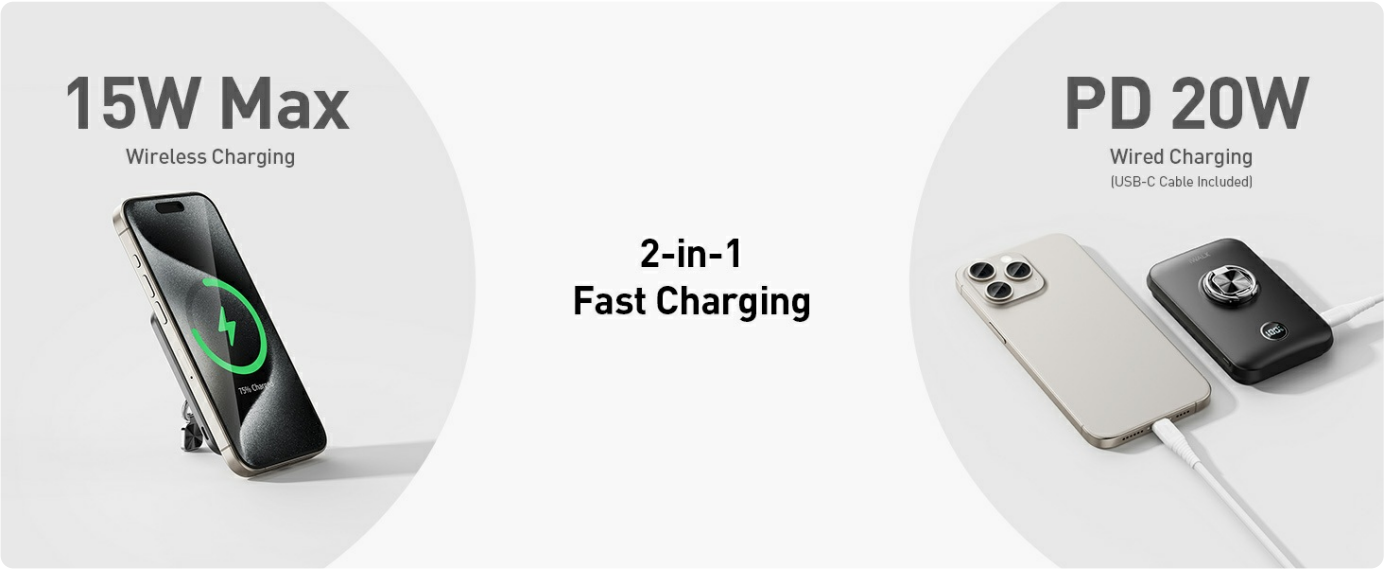


Image: Visual representation of the power bank's 15W wireless and 20W wired fast charging capabilities.

Efficient Energy Conversion

Excellent Heat Dissipation by **MagCool 2.0**

Bring a High Energy Conversion Rate

iPhone 15 Pro Max

≈ **1.5** charges

iPhone 14 Pro

≈ **2.0** charges

iPhone 13

≈ **2.0** charges



*Data based on iWALK internal laboratory testing.

Image: An illustration detailing the approximate number of charges the power bank can provide for various iPhone models, such as 1.5 charges for iPhone 15 Pro Max and 2.0 charges for iPhone 14 Pro and iPhone 13.

2. Dual Device Charging

Charge two devices simultaneously using both the wireless charging pad and the USB-C port. The USB-C port supports bidirectional charging, allowing the power bank itself to be fully recharged in just 2.5 hours.

3. Multifunctional Ring Holder

The integrated ring holder offers 360° rotation and 180° folding, serving as a secure finger grip or a sturdy phone stand for hands-free viewing. This design enhances usability and portability.

Multi-Use Ring Holder

Meets Your Multi-Scenario
Use of the Folding Needs



Finger Ring Using



Kickstand Using



Image: The multi-use ring holder shown in two configurations: as a finger ring for secure holding and as a kickstand for hands-free viewing.



**Multi-Angle
Foldable Ring Holder**



Image: A banner illustrating the multi-angle foldable ring holder, showcasing its 180-degree folding and 360-degree rotation capabilities.

4. Smart LED Display

A clear LED display provides real-time battery percentage, allowing you to monitor the remaining power at a glance.



Image: A banner highlighting the smart LED display on the power bank, which allows users to check the remaining power anytime, anywhere.

5. Strong Magnetic Attachment & Compact Design

The power bank features a strong magnetic attachment, ensuring a stable connection to your iPhone while charging. Its ultra-compact and lightweight design makes it easy to carry in your pocket or bag.



Image: A banner demonstrating the strong magnetic attachment of the power bank to an iPhone, indicating a holding force of 10N (2.2lb) for stable charging.

Ultra Compact with High Capacity

Smaller Size, Easily Put into Pocket



Image: The iWALK Magnetic Portable Charger being placed into a pocket, emphasizing its ultra-compact size and portability.

6. Advanced Heat Management

Equipped with a self-developed circuit cooling system, MagCool 2.0, the power bank minimizes heat generation during charging, protecting your device from overheating.

Minimal Heat Generation

Self-Developed Circuit Cooling System **MagCool 2.0**

Protects Charging from Overheating



Over Temperature
Protection

Image: A detailed view of the power bank's internal components, showcasing the MagCool 2.0 circuit cooling system designed to prevent overheating during charging.

7. Compatibility

Specifically designed for iPhone 16/15/14/13/12 series and AirPods. For optimal magnetic attachment, use with MagSafe compatible cases.

Compact and Portable



Image: A banner displaying the range of compatible iPhone models (iPhone 16, 15, 14, 13, 12 series) and indicating support for MagSafe cases.

SPECIFICATIONS

Model Number	MXB009
Battery Capacity	10,000mAh (3.7V/37Wh)
Wireless Charging Output	15W Max (7.5W/10W/15W)
USB-C PD Output	20W Max (5V/3A, 9V/2.22A, 12V/1.67A)
USB-C Input	18W Max (5V/3A, 9V/2A, 12V/1.5A)
Dimensions	4.09 x 2.64 x 1.06 inches
Item Weight	7.4 ounces
Battery Type	Lithium Polymer
Special Features	Digital Display, USB-C Fast Charging, Lightweight, Pocket Size, Wireless Charging, Foldable Ring Holder

SETUP GUIDE

1. Charging the Power Bank

Before first use, fully charge your iWALK Magnetic Portable Charger. Use the included USB-C to USB-C cable and a compatible power adapter (not included) to connect the power bank to a power source. The LED display will show the

charging progress, reaching 100% when fully charged.

- Connect the USB-C cable to the power bank's USB-C port.
- Connect the other end of the cable to a USB-C power adapter.
- Charging time is approximately 2.5 hours for a full charge.

2. Attaching to Your Device

The power bank is designed for magnetic attachment to compatible iPhones (iPhone 16/15/14/13/12 series) and MagSafe-compatible cases.

1. Ensure your iPhone or case has MagSafe compatibility.
2. Align the iWALK power bank with the back of your iPhone. The magnets will snap it into place.
3. Press the power button on the side of the power bank once to initiate wireless charging. The LED display will illuminate to show the power bank's remaining charge.

Your browser does not support the video tag.

Video: An official product video demonstrating the iWALK PowerGrip Magnetic Power Bank, including its magnetic attachment and charging process.

OPERATING INSTRUCTIONS

1. Wireless Charging

- Attach the power bank magnetically to your compatible iPhone.
- Press the power button once to begin wireless charging. The LED display will show the power bank's battery level.
- To stop wireless charging, double-press the power button. The LED display will turn off.

2. Wired Charging (USB-C)

- Connect your device to the power bank's USB-C port using a compatible cable.
- The power bank will automatically begin charging the connected device.
- To stop wired charging, disconnect the cable.

3. Using the Ring Holder/Stand

- **Finger Grip:** Pull out the ring holder and slide your finger through it for a secure grip while holding your phone.
- **Kickstand:** Fold out the ring holder to position your phone upright for hands-free viewing in landscape or portrait mode. The 360° rotation allows for various viewing angles.

CARE AND MAINTENANCE

- Keep the power bank away from water, moisture, and extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Clean the surface with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store in a cool, dry place when not in use.
- For optimal battery life, fully charge the power bank at least once every three months if not used regularly.

TROUBLESHOOTING

Power Bank Not Charging

- Ensure the USB-C cable is securely connected to both the power bank and the power adapter.
- Verify that the power adapter is functioning correctly and connected to a live power outlet.
- Try using a different USB-C cable or power adapter.

Device Not Charging Wirelessly

- Ensure your device is compatible with wireless charging (e.g., iPhone 16/15/14/13/12 series).
- Verify that the power bank is sufficiently charged (check LED display).
- Ensure the power bank is properly aligned with your device's wireless charging coil. Magnetic attachment should be firm.
- Remove any thick phone cases or metallic objects between the power bank and your device that might interfere with wireless charging.
- Press the power button once to activate wireless charging.

Device Not Charging via USB-C Port

- Ensure the USB-C cable is securely connected to both the power bank and your device.
- Verify that the power bank is sufficiently charged.
- Try using a different USB-C cable.

Power Bank Overheating

- It is normal for the power bank to become slightly warm during charging.
- If it becomes excessively hot, disconnect it from the device and power source immediately. Allow it to cool down before resuming use.
- Ensure there is adequate ventilation around the power bank during use.

IMPORTANT SAFETY INFORMATION

- Do not disassemble, open, crush, bend, deform, puncture, or shred the power bank.
- Do not modify or remanufacture the power bank, attempt to insert foreign objects into it, or immerse or expose it to water or other liquids.
- Do not expose the power bank to fire, explosion, or other hazards.
- Do not use a damaged power bank.
- Keep out of reach of children.
- Dispose of the power bank according to local regulations. Do not dispose of it with household waste.

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the official iWALK website or contact their customer support team directly. Contact details can typically be found on the product packaging or the official iWALK brand store.

Visit the official iWALK Store: [iWALK Amazon Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CS2Z6FWC>

More documents and user manuals: <https://manuals.plus/>