

**VTech 80-572335**

## VTech 2-in-1 Map and Go Scooter User Manual

**Brand:** VTech | **Model:** 80-572335

### PRODUCT OVERVIEW

---

The VTech 2-in-1 Map and Go Scooter is designed for toddlers aged 12-36 months, supporting a maximum weight of 42 pounds. This versatile ride-on toy transforms from a stable three-wheeled trike into a two-wheeled scooter, adapting as your child develops coordination and confidence. It features an interactive dashboard with an ignition key, a roller map for exploring locations, and dashboard buttons that introduce numbers, colors, and road safety phrases through songs and sounds. Motion-activated sounds enhance the play experience, encouraging imaginative travel and motor skill development.



*Image: The VTech 2-in-1 Map and Go Scooter in its trike configuration, featuring a pink body with purple accents and an interactive front panel.*

## WHAT'S IN THE BOX

---

- One (1) VTech 2-in-1 Map and Go Scooter
- One (1) Quick Start Guide

## SETUP AND ASSEMBLY

---

Adult assembly is required for the VTech 2-in-1 Map and Go Scooter. Please refer to the included Quick Start Guide for detailed, step-by-step assembly instructions. Ensure all components are securely fastened before allowing a child to use the product.

## Battery Installation

The scooter requires 2 AA batteries. Batteries included with the product are for demo purposes only. For regular use, new batteries are recommended to ensure optimal performance of all electronic features.

1. Locate the battery compartment, typically on the underside or rear of the main unit.
2. Using a screwdriver (not included), open the battery compartment cover.
3. Insert 2 new AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

### Transformation (Trike to Scooter)

The 2-in-1 design allows the rear wheels to be adjusted to transform the ride-on from a three-wheeled trike to a two-wheeled scooter. This feature helps children transition as their balance and coordination improve.



*Image: Rear view of the scooter in trike mode, showing the two widely spaced rear wheels for stability.*



*Image: Front view of the scooter in its two-wheeled scooter configuration, with the headlight illuminated.*

Consult the Quick Start Guide for specific instructions on how to safely adjust and lock the rear wheels for each mode.

## OPERATING INSTRUCTIONS

---

### Power On/Off

Locate the power switch, usually on the main console. Slide it to the "On" position to activate the scooter's electronic features. Slide to "Off" when not in use to conserve battery life.

### Interactive Features

- **Ignition Key:** Turn the pretend ignition key to activate engine sounds and initiate role-play driving scenarios.
- **GPS Roller Map:** Explore different locations by turning the roller map. This feature introduces various environments

and encourages imaginative journeys.

- **Dashboard Buttons:** Press the buttons on the dashboard to hear phrases related to counting, traffic, and road safety. These buttons also play sing-along songs and melodies.
- **Headlight Ring:** Twist the outer headlight ring to activate sound effects and lights, adding to the interactive play.
- **Motion-Activated Sounds:** The scooter is equipped with motion sensors that trigger motor sounds as the child rides, enhancing the realistic driving experience.



Image: A young child happily riding the VTech scooter in its two-wheeled scooter configuration.



Image: A young child seated on the VTech scooter in its stable three-wheeled trike mode.

## MAINTENANCE

- **Cleaning:** Wipe the surface of the scooter with a slightly damp cloth. Do not immerse the product in water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the scooter in a cool, dry place away from direct sunlight and moisture when not in use.
- **Battery Care:** Remove batteries if the product will not be used for an extended period to prevent leakage. Dispose of old batteries responsibly.
- **Inspection:** Periodically check all screws and fasteners to ensure they are tight and secure. Inspect wheels and other moving parts for any signs of wear or damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No power or sound	Batteries are low or incorrectly installed.	Replace with new AA batteries, ensuring correct polarity. Check that the power switch is in the "On" position.

Problem	Possible Cause	Solution
Intermittent sound or function	Loose battery connection or low battery power.	Ensure batteries are securely in place. Replace batteries if necessary.
Wheels not rolling smoothly	Debris caught in wheels or worn parts.	Check wheels for any obstructions and remove them. If parts are worn, contact VTech customer support.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	14.48 x 23.26 x 21.06 inches
Item Weight	6.42 pounds
Model Number	80-572335
Recommended Age	12 months - 3 years
Maximum Weight Capacity	42 pounds
Batteries Required	2 AA batteries (included for demo, new recommended)
Manufacturer	VTech

## WARRANTY AND SUPPORT

For warranty information, product registration, or further support, please visit the official VTech website or refer to the contact information provided in the Quick Start Guide. You can also find the full user manual in PDF format [here](#).