

BOSCH GSN36VL30U

Bosch Series 4 GSN36VL30U Free-Standing Freezer Instruction Manual

Model: GSN36VL30U

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Bosch Series 4 GSN36VL30U free-standing freezer. Please read this manual thoroughly before using the appliance and retain it for future reference.

The Bosch Series 4 GSN36VL30U is a 242-liter free-standing freezer featuring NoFrost technology, 7 drawers, and a stainless steel look finish. It is designed for optimal food preservation with energy efficiency.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Ensure the appliance is properly earthed.
- Do not damage the refrigerant circuit.
- Keep ventilation openings clear of obstructions.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Unplug the appliance before cleaning or maintenance.
- Supervise children to ensure they do not play with the appliance.

3. SETUP AND INSTALLATION

3.1 Unpacking and Placement

Carefully unpack the freezer and remove all packaging materials. Place the appliance on a stable, level surface. Ensure adequate ventilation around the unit. The appliance dimensions are approximately 186 cm (H) x 60 cm (W) x 65 cm (D).







Image 1: Front view of the Bosch Series 4 GSN36VL30U free-standing freezer with its stainless steel door closed.

3.2 Electrical Connection

Connect the freezer to a properly earthed electrical outlet. The nominal voltage required is 220 - 240 V. Refer to the rating plate for specific electrical requirements.

3.3 Door Reversibility

The door is right-hinged as standard but is reversible to suit your kitchen layout. Consult a qualified technician for door reversal if needed. No side clearance is needed for door opening, allowing full access to all drawers.

3.4 Leveling

Adjust the height-adjustable front feet to ensure the appliance is level and stable.

4. OPERATING INSTRUCTIONS

4.1 Control Panel

The freezer features an LED electronic control panel for temperature settings and function activation.



Image 2: Close-up view of the LED electronic control panel, showing temperature settings and function indicators.

4.2 Temperature Setting

Use the electronic controls to set the desired freezing temperature. The recommended temperature for long-term food storage is -18°C .

4.3 Super Freezing Function

Activate the Super Freezing function manually or automatically when adding a large quantity of fresh food to rapidly freeze

it, preserving nutrients and flavor. This function automatically deactivates after a set period.

4.4 Storage Compartments

The freezer is equipped with 7 drawers, including 2 BigBox drawers, and Vario Zone removable safety glass shelves for flexible storage. The Multi Airflow-System ensures even temperature distribution throughout the freezer compartment.





Image 3: Interior view of the freezer, showing multiple transparent drawers and shelves for organized storage.



Image 4: Close-up of the BigBox drawers inside the freezer, designed for larger items, with food items visible.

5. MAINTENANCE AND CLEANING

5.1 NoFrost Technology

Your Bosch freezer features NoFrost technology, which automatically prevents ice build-up. This means manual defrosting is not required, simplifying maintenance.

5.2 Cleaning the Appliance

Before cleaning, always unplug the freezer from the power supply. Clean the interior and exterior surfaces with a soft cloth and a mild detergent solution. Avoid abrasive cleaners or solvents. Regularly clean the door seals to ensure a tight closure.

5.3 Accessories

The freezer comes with an ice cube tray and a cold accumulator. Clean these accessories regularly with warm soapy water.

6. TROUBLESHOOTING

This section provides solutions to common issues. For problems not listed here, contact customer service.

6.1 Acoustic Open Door Warning System

If the door is left open for too long, an acoustic warning will sound. Close the door fully to silence the alarm.

6.2 Malfunction Warning System

The freezer is equipped with a visual and acoustic warning system for malfunctions in the freezer compartment. If an alarm sounds or a warning light illuminates, consult the detailed troubleshooting section in the full user manual or contact customer support.

6.3 Power Failure

In the event of a power failure, the freezer can maintain storage temperature for approximately 25 hours, provided the door remains closed.

7. SPECIFICATIONS

Feature	Detail
Brand	BOSCH
Model Info	GSN36VL30U
Type	Free-standing freezer
Capacity	242 Liters (Net) / 255 Liters (Gross)
Dimensions (H x W x D)	186.0 cm x 60 cm x 65.0 cm
Energy Efficiency Class	EU_2010 (A++ to F range)
Energy Consumption	237 kWh/yr
Noise Level	39 dB(A) re 1 pW
NoFrost	Yes
Freezing Capacity	20 kg/24 h
Storage Time in Power Failure	25 h
Control Type	LED electronic control

Feature	Detail
Door Hinging	Right hinged, reversible
Color	Pearl grey (Stainless steel look doors)
Voltage	220 - 240 V
Climate Class	SN-T
Included Components	Ice cube tray, cold accumulator

8. WARRANTY AND SUPPORT

8.1 Product Warranty

For detailed information regarding the product warranty, please refer to the warranty card included with your appliance or visit the official Bosch website. Extended warranty options may be available from third-party providers.

8.2 Customer Support

Should you require assistance, spare parts, or service, please contact Bosch customer support. You can find contact information on the official Bosch website or in the documentation provided with your freezer.

Visit the official [BOSCH Store](#) for more product information.

