

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SHOKZ](#) /

› [SHOKZ OpenSwim Pro User Manual](#)

SHOKZ OpenSwim Pro

SHOKZ OpenSwim Pro User Manual

Open-Ear Bluetooth & MP3 Bone Conduction Sport Headphones

INTRODUCTION

Welcome to the user manual for your SHOKZ OpenSwim Pro headphones. These innovative open-ear bone conduction headphones are designed for versatile use, offering both Bluetooth connectivity for land-based activities and an integrated MP3 player for underwater listening. With an IP68 waterproof rating, they are perfect for swimming and other water sports, providing a comfortable and secure fit while keeping you aware of your surroundings.

PRODUCT OVERVIEW

Familiarize yourself with the components of your OpenSwim Pro headphones.



Image: The SHOKZ OpenSwim Pro headphones, showcasing their ergonomic, open-ear design in red and dark grey.

- **Bone Conduction Transducers:** Deliver audio through your cheekbones, leaving your ears open.
- **Flexible Band:** Wraps around the back of your head for a secure fit.
- **Control Buttons:** Power/Volume, Mode Switch, Play/Pause.

- **Charging Port:** Magnetic charging port for power and data transfer.

CHARGING YOUR HEADPHONES

Before first use, fully charge your OpenSwim Pro headphones.

1. Connect the magnetic charging cable to the charging port on your headphones.
2. Plug the USB end of the cable into a standard USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status. A full charge takes approximately 1.5 hours.
4. A 10-minute quick charge provides up to 3 hours of listening time.

Battery life is approximately 9 hours of continuous music and calls.

SETUP AND PAIRING

Bluetooth Mode (For Land Use Only)

The OpenSwim Pro supports Bluetooth 5.4 for fast and stable connections.

1. **Power On:** Press and hold the Power/Volume+ button until the LED flashes blue.
2. **Pairing Mode:** If not automatically in pairing mode, press and hold the Multi-function button until the LED flashes red and blue alternately, and you hear "Pairing."
3. **Connect Device:** On your device (smartphone, tablet, computer), enable Bluetooth and select "OpenSwim Pro" from the list of available devices.
4. **Confirmation:** The LED will turn solid blue, and you will hear "Connected" when pairing is successful.

Bluetooth and MP3 Dual Modes



Bluetooth Mode

Fast, and stable connection



Bluetooth 5.4



MP3 Mode

32 GB of MP3 Storage

Note: For underwater use, switch to MP3 mode, since Bluetooth signals do not transmit through water.

Image: Visual representation of the dual Bluetooth and MP3 modes, highlighting Bluetooth for land and MP3 for water use.

Important: Bluetooth signals do not transmit effectively underwater. Use MP3 mode for swimming.

Simultaneous Pairing

Connect your OpenSwim Pro to two devices simultaneously via the Shokz App for seamless switching.

Simultaneous Pairing

Connect headphones to 2 devices at once in the Shokz App



Image: The OpenSwim Pro headphones connected to both a smartphone and a laptop, demonstrating the simultaneous pairing feature.

OPERATING YOUR HEADPHONES

Switching Between Modes (Bluetooth / MP3)

The OpenSwim Pro features dual modes for versatile use.

- To switch between Bluetooth and MP3 modes, use the dedicated mode switch button on the headphones or

control it via the Shokz App.

MP3 Mode (For Underwater Use)

The OpenSwim Pro has 32GB of built-in storage, capable of holding up to 8,000 songs.

- Transferring Music:** Connect your OpenSwim Pro to a computer using the magnetic charging cable. The headphones will appear as a removable disk drive. Drag and drop your audio files (MP3, WAV, FLAC, AAC, APE) into the drive.
- Activating MP3 Mode:** Switch to MP3 mode using the mode button or the Shokz App.
- Playback:** Use the control buttons to play, pause, skip tracks, and adjust volume.

Controls

Button/Action	Function
Power/Volume+ Button (Press & Hold)	Power On/Off
Volume+ Button (Single Press)	Increase Volume
Volume- Button (Single Press)	Decrease Volume
Multi-function Button (Single Press)	Play/Pause, Answer/End Call
Multi-function Button (Double Press)	Next Track
Multi-function Button (Triple Press)	Previous Track
Mode Switch Button	Toggle between Bluetooth and MP3 modes

Shokz App

Enhance your experience with the Shokz App, available for iOS and Android.

- Switch between MP3 and Bluetooth modes.
- Customize EQ settings (e.g., Standard, Vocal).
- View battery status.
- Manage simultaneous pairing.
- Access firmware updates.

Premium Audio Experience

Vivid sound, rich bass, crystal clear calls, noise-canceling mic.

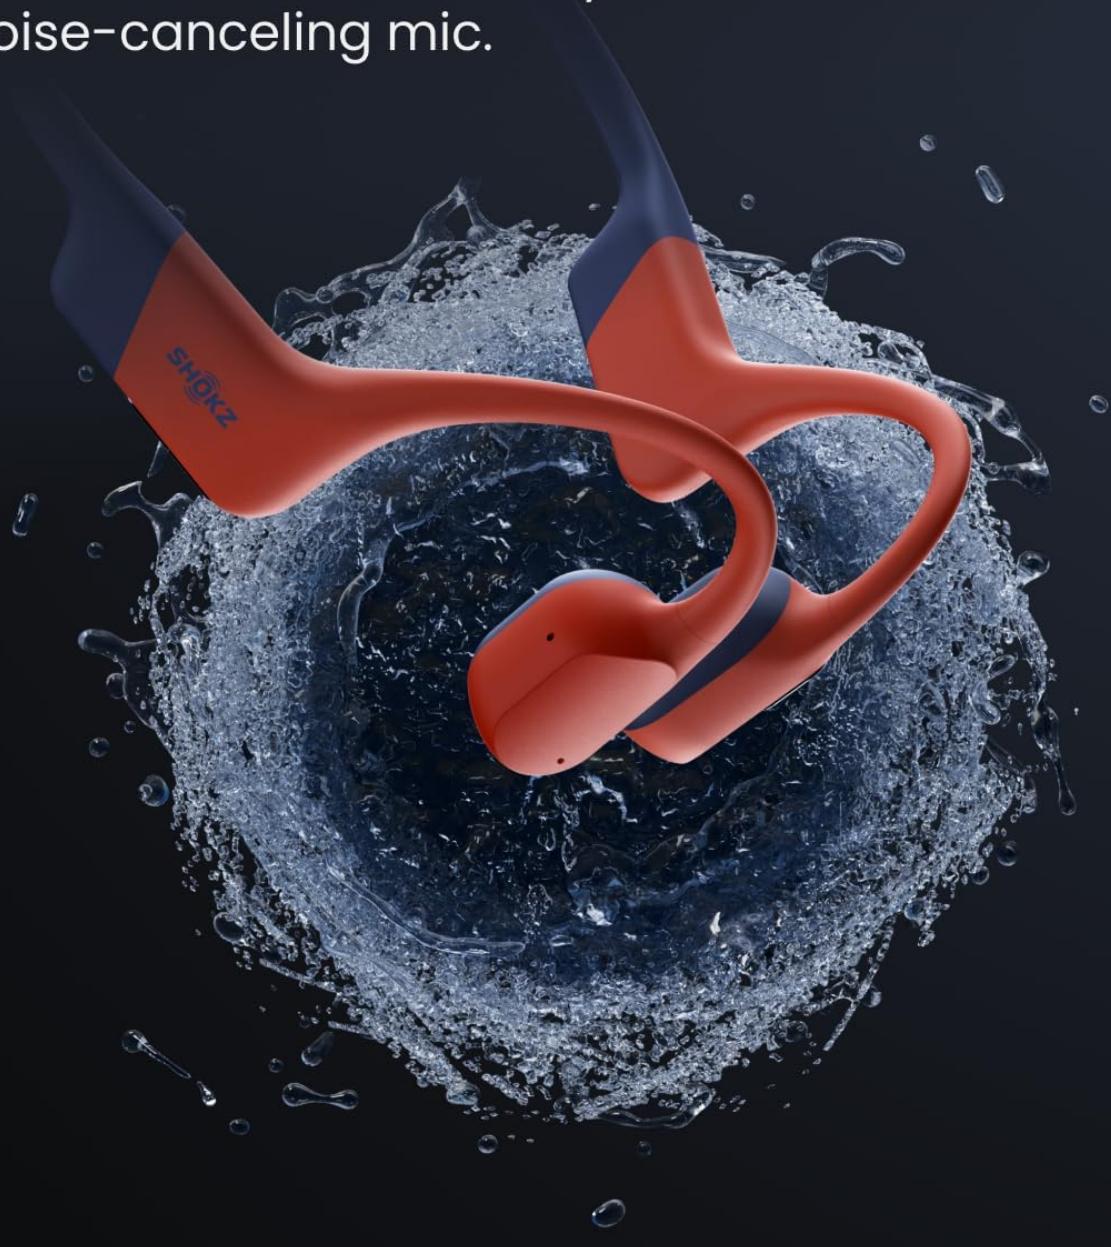


Image: The Shokz App interface, demonstrating its features for controlling the OpenSwim Pro headphones.

WATERPROOF USAGE (IP68 RATED)

The OpenSwim Pro is designed for water activities, with an IP68 rating, meaning it is fully sweatproof and can be submerged in water up to 2 meters (6.5 feet) deep for up to 2 hours.

IP68 Waterproof Rated

Fully sweatproof and submersible in water up to 2 m (≈6.5 ft) deep for up to 2 hours.



Image: A swimmer using the OpenSwim Pro headphones underwater, demonstrating their IP68 waterproof capability.

- Always switch to MP3 mode before entering water, as Bluetooth does not work underwater.
- Ensure the charging port is clean and dry before charging after water exposure.
- The open-ear design allows for seamless integration with swim caps and goggles.

Built for Swimming

Supports 2m deep submersion



IP68 Waterproof

Image: A person swimming with the OpenSwim Pro headphones, highlighting their suitability for aquatic environments.

MAINTENANCE AND CARE

- Cleaning:** Wipe the headphones with a soft, damp cloth. For stubborn dirt, use a mild soap solution. Do not use harsh chemicals or abrasive cleaners.
- Drying:** After swimming or heavy sweating, rinse the headphones with fresh water and dry them thoroughly with a soft cloth. Allow them to air dry completely before charging.
- Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.

- **Charging Port:** Keep the magnetic charging port clean and free of debris to ensure proper connection.

TROUBLESHOOTING

Problem	Possible Solution
Headphones won't power on.	Ensure the headphones are fully charged. Connect to charger and check LED indicator.
Cannot pair via Bluetooth.	Ensure headphones are in pairing mode (flashing red/blue LED). Turn off and on Bluetooth on your device. Move closer to the device.
No sound in MP3 mode.	Ensure music files are properly transferred to the headphones. Check volume level. Ensure headphones are in MP3 mode.
Sound quality is poor.	Adjust the position of the transducers on your cheekbones. Ensure the headphones are clean. Try different EQ settings in the Shokz App.
Headphones not recognized by computer.	Ensure the magnetic charging cable is securely connected. Try a different USB port or computer.

SPECIFICATIONS

Feature	Detail
Model	OpenSwim Pro
Waterproof Rating	IP68 (Submersible up to 2 meters for 2 hours)
Bluetooth Version	Bluetooth 5.4
Internal Storage	32GB (up to 8,000 songs)
Supported Audio Formats	MP3, WAV, FLAC, AAC, APE
Battery Life	Up to 9 hours (music & calls)
Charging Time	Approx. 1.5 hours (10-min quick charge for 3 hours)
Microphones	2 Noise-cancelling mics
Color	Red

WARRANTY AND SUPPORT

SHOKZ products are designed with quality and durability in mind. For detailed warranty information and customer support, please visit the official SHOKZ website or contact their customer service team.

- **Official Website:** www.shokz.com
- **Customer Service:** Refer to the contact information on the official website for support, FAQs, and troubleshooting guides.

Please retain your proof of purchase for warranty claims.

Related Documents - OpenSwim Pro

<p>OPENSWIM User Guide S700</p>	<p>Shokz OpenSwim S700 User Guide Comprehensive user guide for the Shokz OpenSwim headphones, detailing features like MP3 playback, swimming mode, controls, charging, and maintenance.</p>
<p>OPENSWIM User Guide S700</p>	<p>Shokz OpenSwim S700 User Guide: Bone Conduction Headphones for Swimming Comprehensive user guide for the Shokz OpenSwim S700 bone conduction headphones. Learn how to use, charge, care for, and troubleshoot your waterproof swimming headphones, including features like EQ modes and language settings.</p>
	<p>Shokz OpenSwim S700 User Guide: Operation and Features Comprehensive user guide for the Shokz OpenSwim S700 MP3 swimming headphones. Learn how to power on/off, charge, transfer music, and control playback for an optimal audio experience.</p>
<p>OPENSWIM User Guide S700</p>	<p>Shokz OpenSwim S700 User Guide Comprehensive user guide for the Shokz OpenSwim S700 waterproof MP3 headphones, detailing features, operation, and care.</p>
<p>OPENSWIM PRO Инструкция по применению S710</p>	<p>Shokz OpenSwim Pro S710 User Manual and Guide Comprehensive user manual for the Shokz OpenSwim Pro (Model S710) bone conduction headphones. Learn about setup, features, controls, pairing, MP3 mode, charging, and maintenance.</p>
<p>OPENSWIM PRO User Guide S710</p>	<p>Shokz OpenSwim Pro User Guide: Features, Operation, and Maintenance Comprehensive user guide for the Shokz OpenSwim Pro headphones, covering setup, Bluetooth and MP3 modes, multipoint pairing, EQ settings, file transfer, charging, warranty, and troubleshooting. Learn how to use your OpenSwim Pro for swimming and workouts.</p>

