

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tefal](#) /

› [Tefal YT2020 Care For You First Automatic Garment Steamer User Manual](#)

## Tefal YT2020E0

# Tefal YT2020 Care For You First Automatic Garment Steamer User Manual

Model: YT2020E0

## INTRODUCTION

The Tefal Care For You First Automatic Garment Steamer is designed to simplify your garment care routine. This innovative appliance automatically removes wrinkles, refreshes fabrics, and sanitizes clothes using the natural power of steam. It offers a hands-free solution for daily garment maintenance, providing convenience and comfort.

## IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is placed on a stable, level surface.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and pets.
- Do not operate the appliance with a damaged cord or plug.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Use only distilled or demineralized water in the water tank to prevent mineral buildup.
- Do not open the water tank cap during operation.
- Steam is hot. Keep hands and face away from the steam outlet during operation.
- Do not use the appliance for purposes other than its intended use.

## PRODUCT OVERVIEW

Familiarize yourself with the components of your Tefal YT2020 Garment Steamer.



**Image:** The Tefal YT2020 Care For You First Automatic Garment Steamer, shown in its operational state with the fabric enclosure extended. A remote control is visible to the left, featuring power, mode selection, and start/stop buttons. The base unit displays a digital timer.

## Key Components:

- **Main Unit:** Houses the water tank, heating element, and control panel.
- **Fabric Enclosure:** Collapsible structure where garments are placed for steaming.
- **Water Tank:** Removable tank for filling with water. Capacity: 1.2 Liters.
- **Control Panel:** Located on the main unit, with a digital display.
- **Remote Control:** For convenient operation, featuring Power, Mode, and Start/Stop buttons.
- **Garment Hangers/Clips:** Internal fixtures for securing up to three garments.

## SETUP

- Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- Position:** Place the main unit on a firm, level surface. Ensure there is adequate space around the unit for ventilation and for the fabric enclosure to extend fully.
- Fill Water Tank:** Remove the water tank from the main unit. Fill it with distilled or demineralized water up to the maximum fill line. Reinsert the water tank securely into the main unit.
- Connect Power:** Plug the power cord into a grounded electrical outlet (240 Volts).
- Prepare Garments:** Open the fabric enclosure. Hang up to three garments inside using the provided hangers and clips. Ensure garments are not overlapping excessively to allow for proper steam circulation.

## OPERATING INSTRUCTIONS

---

The Tefal YT2020 offers multiple modes for comprehensive garment care.

### Using the Remote Control:

- Press the **Power** button to turn the unit on/off.
- Press the **Mode** button to cycle through available programs.
- Use the + and - buttons to adjust settings (if applicable for the selected mode).
- Press **Start/Stop** to begin or end a cycle.

### Available Programs:

#### 1. Automatic Wrinkle Removal:

This mode is designed to smooth out wrinkles from your clothes.

- **Quick De-wrinkle:** For daily wrinkles, a 10-minute cycle is usually sufficient.
- **Deep De-wrinkle:** For stubborn creases, select the 30-minute cycle.

*Procedure:* Place up to three garments inside. Select the desired wrinkle removal duration using the Mode button. Press Start/Stop.

#### 2. Quick Refresh Cycle:

This 20-minute cycle helps to reduce odors and refresh garments between washes, ideal for removing lingering smells.

*Procedure:* Place garments inside. Select the Refresh mode. Press Start/Stop.

#### 3. Sanitization Cycle:

The 40-minute sanitization cycle utilizes powerful steam to kill up to 99.99% of bacteria, viruses, and germs, and significantly reduces allergens without the need for detergents or chemicals.

*Procedure:* Place garments inside. Select the Sanitization mode. Press Start/Stop.

After the cycle completes, the appliance will automatically shut off. Carefully remove the garments, which may still be warm.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

- Empty Water Tank:** After each use, or at least weekly, empty any remaining water from the tank.
- Clean Water Tank:** Periodically rinse the water tank with clean water. Do not use harsh chemicals.
- Descaling:** If you notice reduced steam output or mineral buildup, descale the appliance according to the

manufacturer's instructions (refer to the full manual for detailed descaling procedures, if available). Using distilled water helps prevent this.

- **Exterior Cleaning:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners.
- **Storage:** When not in use, ensure the water tank is empty. The fabric enclosure can be collapsed for more compact storage.

## TROUBLESHOOTING

---

If you encounter issues with your garment steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty or low. Mineral buildup.	Refill the water tank. Perform descaling procedure.
Appliance does not turn on.	Not plugged in. Power outlet issue.	Ensure the power cord is securely plugged into a working outlet. Check circuit breaker.
Wrinkles not fully removed.	Garments overcrowded. Cycle too short. Stubborn wrinkles.	Reduce the number of garments. Select a longer cycle (e.g., 30 minutes). Ensure garments are properly hung.
Unpleasant odor during operation.	New appliance odor. Mineral buildup.	This is normal for first few uses. If persistent, descale the appliance.

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

---



**Image:** This image illustrates the dimensions of the Tefal YT2020 Care For You First Automatic Garment Steamer in various states. When fully extended, it measures 153 cm in height, 74 cm in width, and 31 cm in depth. When partially collapsed, the height is 77 cm. When fully collapsed for storage, the height is 35 cm.

- **Model Number:** YT2020E0
- **Brand:** Tefal
- **Color:** Dark Blue & Terracotta
- **Power:** 1500 Watts
- **Voltage:** 240 Volts
- **Water Tank Capacity:** 1.2 Liters
- **Product Dimensions (L x W x H):** 77.5 x 31.5 x 153 cm (extended)
- **Item Weight:** 27 Kilograms
- **Automatic Shut-off Function:** Yes
- **Country of Origin:** China
- **Material:** Refer to the product construction sheet (specific details not provided in input)

## WARRANTY AND SUPPORT

---

Tefal is committed to product durability and environmental protection. This product is designed to be repairable for 15 years.

- **Repairability:** Economical spare parts are available at our 6200 repair centers worldwide for quick product repair over many years.
- **Customer Support:** For further assistance, troubleshooting not covered in this manual, or warranty claims, please contact Tefal customer service. Refer to the official Tefal website or your purchase documentation for contact details specific to your region.



© 2024 Tefal. All rights reserved.