

[Manuals.plus](#) /

> [Tristar](#) /

> Tristar MX-4850 Hand Blender Instruction Manual

## Tristar MX-4850

# Tristar MX-4850 Hand Blender Instruction Manual

Model: MX-4850

## INTRODUCTION

---

Thank you for purchasing the Tristar MX-4850 Hand Blender. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before use and keep them for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids.
- Keep hands, hair, and clothing away from moving parts during operation.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The blades are sharp. Handle with care.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only attachments recommended or sold by the manufacturer.

## PRODUCT OVERVIEW

---

The Tristar MX-4850 Hand Blender consists of a motor unit and a detachable blending shaft with stainless steel blades.



\*\*\*  
**TRISTAR**



Image 1: Top view of the Tristar MX-4850 Hand Blender motor unit, showing the power and turbo buttons.



Image 2: The Tristar MX-4850 Hand Blender separated into its motor unit and detachable blending shaft, illustrating its modular design.

### Key Components:

- **Motor Unit:** Contains the 350W motor and control buttons.
- **Blending Shaft:** Detachable shaft with durable stainless steel blades.
- **Control Buttons:** Two speed settings for versatile blending.

## SETUP

---

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or disposal.
2. **Clean:** Before first use, clean the blending shaft with warm soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water.
3. **Assemble:** Attach the blending shaft to the motor unit. Align the shaft with the motor unit and twist until it locks securely into place. Ensure it is firmly attached before plugging in.
4. **Placement:** Place the appliance on a stable, flat, and dry surface.

## OPERATING INSTRUCTIONS

---

The Tristar MX-4850 Hand Blender offers two speed settings for various blending tasks.

1. **Prepare Ingredients:** Cut solid ingredients into small pieces (approximately 2-3 cm) for optimal blending. For best results, ensure there is sufficient liquid in your mixture.
2. **Immerse Blender:** Immerse the blending shaft into the ingredients in a suitable container (e.g., a deep pot or beaker). Ensure the blades are fully submerged to prevent splashing.
3. **Select Speed:**
  - Press the **Normal Speed** button for general blending tasks.
  - Press the **TURBO Speed** button for maximum power and faster results, ideal for tougher ingredients or achieving a finer consistency.
4. **Blend:** Move the blender gently up and down and in circles to ensure all ingredients are processed evenly. Do not operate continuously for more than 1 minute to prevent overheating. Allow the appliance to cool down for a few minutes before resuming.
5. **Finish:** Release the button to stop the blender. Wait for the blades to stop completely before removing the blending shaft from the ingredients.
6. **Unplug:** Always unplug the appliance from the power outlet after use.

*Recommended Uses: Beating, Crushing, Mixing, Blending, Whisking, Emulsifying, Juicing, Cutting, Creams, Protein Shakes, Grinding, Pureeing, Ice Crushing (with appropriate liquid).*

## CARE AND MAINTENANCE

---

Proper care ensures the longevity and optimal performance of your Tristar MX-4850 Hand Blender.

1. **Unplug:** Always unplug the appliance before cleaning.
2. **Detach Blending Shaft:** Twist and pull the blending shaft to detach it from the motor unit.
3. **Clean Blending Shaft:** Wash the blending shaft immediately after use with warm soapy water. Rinse thoroughly under running water. **Note:** The blending shaft is not dishwasher safe.
4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
5. **Dry:** Ensure all parts are completely dry before reassembling or storing.
6. **Storage:** Store the hand blender in a dry place, away from direct sunlight and out of reach of children. Its compact design allows for convenient storage.

**Caution: The blades are very sharp. Handle the blending shaft with extreme care during cleaning.**

## TROUBLESHOOTING

---

If you encounter issues with your hand blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in correctly. Power outlet is not working. Blending shaft not securely attached.	Ensure the plug is firmly inserted into a working power outlet. Test the outlet with another appliance. Reattach the blending shaft, ensuring it locks into place.

Problem	Possible Cause	Solution
Motor stops during operation.	Overheating due to continuous use. Ingredients are too thick or hard.	Unplug the blender and let it cool down for at least 10-15 minutes. Add more liquid to the mixture or cut ingredients into smaller pieces. Do not overload.
Ineffective blending.	Insufficient liquid. Ingredients are too large. Blades are dull or damaged.	Add more liquid to achieve desired consistency. Cut ingredients into smaller, more manageable pieces. Contact customer support if blades appear dull or damaged.
Excessive vibration or noise.	Blending shaft not properly attached. Foreign object caught in blades.	Ensure the blending shaft is securely locked onto the motor unit. Unplug the blender and carefully check for any obstructions around the blades.

If the problem persists after trying these solutions, please contact Tristar customer support.

## SPECIFICATIONS

- **Model:** MX-4850
- **Brand:** Tristar
- **Power:** 350W
- **Voltage:** 220V
- **Number of Speeds:** 2 (Normal, Turbo)
- **Blade Material:** Stainless Steel / Alloy Steel
- **Shaft Material:** Stainless Steel
- **Dimensions (DxWxH):** 6.5 x 6.5 x 35 cm
- **Weight:** 444 Grams
- **Color:** White
- **Power Source:** Corded Electric
- **Dishwasher Safe Parts:** No (for blending shaft)
- **Country of Origin:** China

## WARRANTY AND SUPPORT

The Tristar MX-4850 Hand Blender comes with a manufacturer's limited warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, spare parts, or warranty claims, please contact Tristar customer service. Contact information can typically be found on the Tristar official website or on the product packaging.

**EU Spare Parts Availability:** 1 Year

**Warranty Type:** Limited Warranty



