

Hoover H3TMQ285TAMCE84

Hoover H-WASH 300 PLUS H3TMQ285TAMCE84 Top Loader Washing Machine User Manual

Model: H3TMQ285TAMCE84

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Hoover H-WASH 300 PLUS H3TMQ285TAMCE84 Top Loader Washing Machine. Please read these instructions carefully before using the appliance and keep them for future reference.

The Hoover H-WASH 300 PLUS H3TMQ285TAMCE84 is an 8.5 kg capacity top-loader washing machine designed for efficient and thorough laundry care. It features a BPM Inverter Motor for reliable performance, a Power Care System for enhanced cleaning, an Aquastop hose for safety, and a Slow Motion Opening Mechanism for convenience.

2. SETUP AND INSTALLATION

2.1 Unpacking

Carefully remove all packaging materials. Ensure no components are left inside the drum. Retain packaging for potential future transport.

2.2 Placement

Position the washing machine on a firm, level surface. Ensure adequate space around the appliance for ventilation and maintenance. The unpacked dimensions are approximately 86 cm (H) x 41 cm (W) x 60 cm (D).



Image: Angled view of the Hoover H-WASH 300 PLUS H3TMQ285TAMCE84 Top Loader Washing Machine, showcasing its compact design.

2.3 Water Connection

Connect the Aquastop hose to a cold water supply. Ensure all connections are tight to prevent leaks. The Aquastop hose provides an additional layer of protection against water damage.

2.4 Drain Connection

Securely connect the drain hose to a suitable drain pipe or sink, ensuring it is properly positioned to prevent backflow.

2.5 Electrical Connection

Plug the appliance into a grounded electrical outlet. Verify that the power supply matches the requirements specified on the appliance's rating label.

3. OPERATING INSTRUCTIONS

3.1 Loading Laundry

Open the top lid using the Slow Motion Opening Mechanism. This feature ensures a gentle and controlled opening. Load laundry into the stainless steel drum, ensuring not to exceed the 8.5 kg capacity.

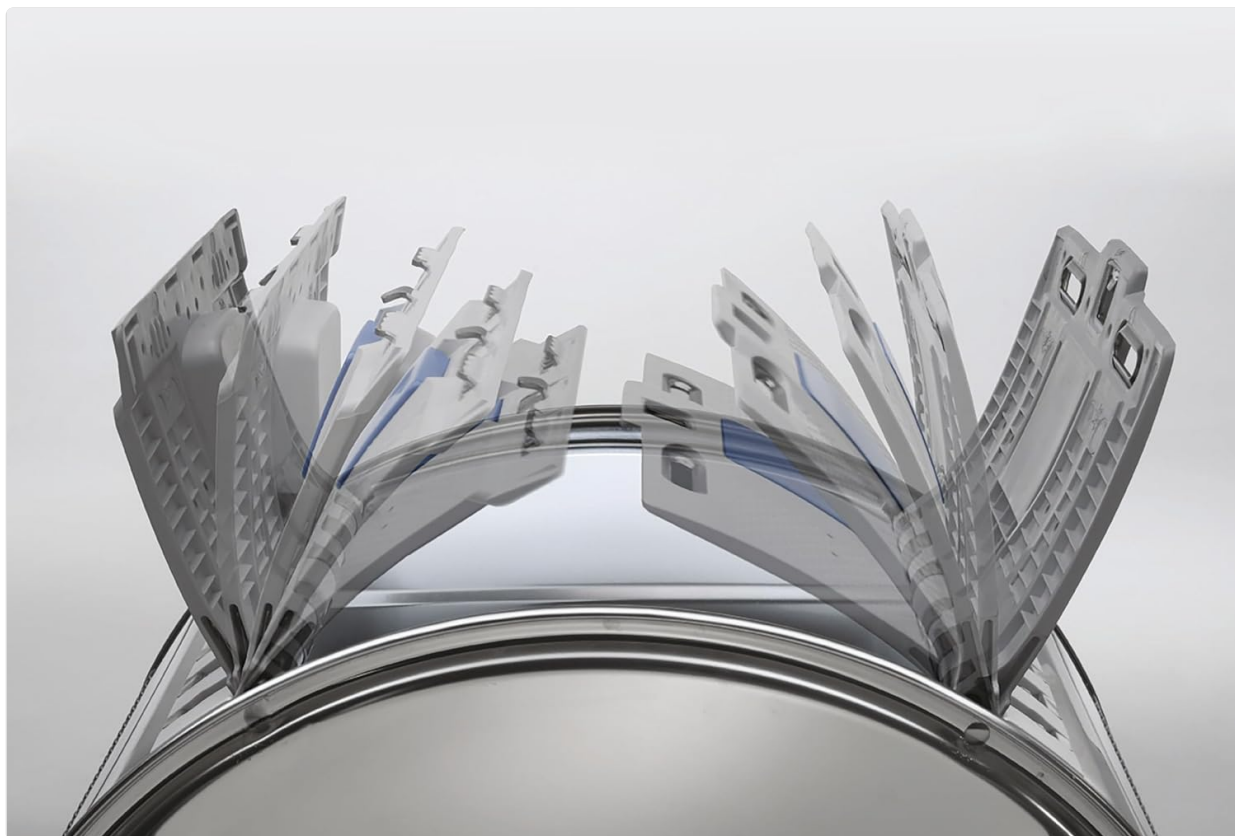 


Image: Illustration of the slow motion opening mechanism for the washing machine drum, highlighting its smooth operation.

3.2 Adding Detergent

Add the appropriate amount of detergent and fabric softener to their respective compartments. Refer to detergent packaging for dosage recommendations.

3.3 Selecting a Program

Use the control knob and touch digital display to select your desired washing program. The machine offers 15 programs, including:

- Cotton
- ECO 40-60
- Wool and Hand Wash
- Fresh Care Program
- Allergy Care Program
- Short Wash Programs (14, 30, 44 minutes)



Image: Detailed view of the washing machine's control panel, showing the digital display, program selection dial, and various function buttons.

3.4 Special Functions

- **Power Care System:** This system ensures an outstanding cleaning effect by optimizing water and detergent distribution.
- **Delay Start Time:** You can delay the start of a wash cycle by up to 24 hours.
- **Child Lock:** Activate the child lock to prevent accidental changes to settings during operation.
- **Automatic Quantity (kg mode):** The machine automatically optimizes the load quantity for efficient washing.

3.5 Starting the Wash Cycle

Press the Start button. The touch digital display will show the minute remaining runtime, allowing you to monitor the cycle progress.

4. MAINTENANCE

4.1 Cleaning the Detergent Dispenser

Regularly clean the detergent dispenser drawer to prevent residue buildup. Remove the drawer and rinse it under running water.

4.2 Cleaning the Drum

Periodically run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) to keep the stainless steel drum clean and free from odors.

4.3 Cleaning the Exterior

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Avoid abrasive cleaners.

4.4 Filter Cleaning

Consult the full product manual for instructions on how to access and clean the drain pump filter, which should be done periodically to ensure optimal performance.

5. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common solutions before contacting service.

- **Machine not starting:** Check if the power cord is securely plugged in and if the door is fully closed. Ensure a program has been selected and the start button pressed.
- **Water not filling:** Verify that the water supply tap is open and the Aquastop hose is not kinked or blocked.
- **Excessive vibration/noise:** Ensure the machine is level and all transit bolts (if applicable) have been removed during installation. Check for unbalanced loads.
- **Poor washing results:** Check detergent dosage, program selection, and load size. Ensure filters are clean.

For more detailed troubleshooting, please refer to the comprehensive manual or contact customer support.

6. SPECIFICATIONS

Feature	Specification
Model	H3TMQ285TAMCE84
Type	Top Loader Washing Machine
Capacity	8.5 kg
Motor Type	BPM Inverter Motor
Spin Rate	1200 rpm
Energy Efficiency Class	B
Energy Consumption per Cycle (Full Load)	0.55 kWh

Feature	Specification
Energy Consumption per 100 Cycles	56 kWh
Water Consumption per Cycle	47 litres
Standard Program Duration	3:43 hours
Noise Class (Spinning)	C
Noise Emission (Spinning)	77 dB(A) re 1pW
Spin Efficiency Class	B
Unpacked Dimensions (H x W x D)	86 x 41 x 60 cm
Net Weight	58 kg



ENERG



Hoover

 
H3TMQ285TAMCE84




56 kWh / **100** ↓



8,5 kg

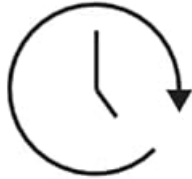


3:43

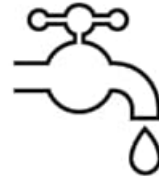 

47 L



 A **B** C D E F G

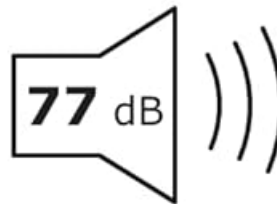

77 dB

A B **C** D

2019/2014

Image: EU Energy Label for the Hoover H3TMQ285TAMCE84, detailing energy consumption, water usage, capacity, and noise levels. For more information, visit eprel.ec.europa.eu/qr/1429450.

7. WARRANTY AND SUPPORT

Your Hoover H-WASH 300 PLUS H3TMQ285TAMCE84 washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions, including coverage duration and registration details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Hoover customer support. Contact information can typically be found on the Hoover official website or in the documentation provided with your purchase.