

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BoxWave](#) /
- › [BoxWave AllReader SD Card Reader Instruction Manual](#)

## BoxWave AllReader SD Card Reader

# BoxWave AllReader SD Card Reader Instruction Manual

Model: AllReader SD Card Reader

## 1. INTRODUCTION

---

The BoxWave AllReader SD Card Reader is a versatile and compact device designed for easy file transfer between various digital devices and SD or microSD cards. It features multiple interfaces to ensure broad compatibility with smartphones, tablets, laptops, and desktop PCs. This manual provides instructions for setting up, operating, and maintaining your AllReader SD Card Reader.

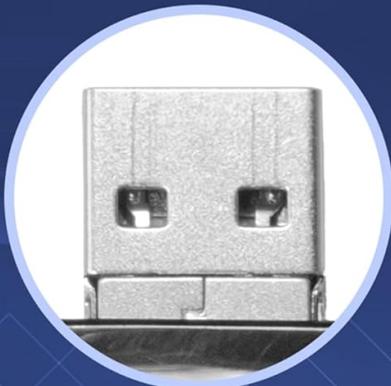


Image: The BoxWave AllReader SD Card Reader, showcasing its compact design and various connector types.

## 2. PRODUCT FEATURES

---

- **Four Interfaces:** Equipped with USB-C, USB-A, Micro-USB, and Apple/Lightning connectors for maximum device compatibility.
- **Easy File Transfer:** Facilitates quick and straightforward transfer of photos, videos, music, and other files between your memory cards and devices.
- **Plug and Play:** No drivers or complex software installation required. Simply connect and use.
- **Compact Design:** Small and portable, designed to fit easily in your pocket, bag, or purse.
- **Universal Card Compatibility:** Supports both standard SD cards and microSD cards.



USB-A



USB-C



Apple



Flip-out Micro USB

# Four Interfaces

For Maximum Compatibility

Image: Detailed view of the four distinct interfaces on the AllReader SD Card Reader.

## 3. SETUP GUIDE

Setting up your BoxWave AllReader SD Card Reader is a simple plug-and-play process.

1. **Insert Memory Card:** Gently insert your SD card or microSD card into the appropriate slot on the AllReader. Ensure the card is fully seated.
2. **Connect to Device:** Select the correct connector (USB-C, USB-A, Micro-USB, or Apple/Lightning) for your smartphone, tablet, laptop, or desktop PC. Plug the AllReader into your device's port.
3. **Access Files:** Your device should automatically detect the AllReader and the inserted memory card. You can then navigate to the card's contents through your device's file manager or photo application.



Compatible with  
MicroSD Cards



# Easy File Transfer

AllReader allows you to access and transfer files from an SD or MicroSD Card onto your smartphone, tablet or PC. No other adapters required!

Image: The AllReader connected to a tablet with an SD card, illustrating the ease of setup and file access.

## 4. OPERATING INSTRUCTIONS

Once connected, the AllReader allows for seamless data management.

1. **File Browsing:** On most devices, the inserted memory card will appear as an external storage device. Open your device's file manager (e.g., "Files" on iOS, "My Files" on Android, "File Explorer" on Windows, "Finder" on macOS) to browse the contents of the card.
2. **Transferring Files:** To transfer files, simply copy and paste or drag and drop files between the memory card and your device's internal storage or other connected storage.
3. **Safe Removal:** Before disconnecting the AllReader from your computer, always safely eject the device through your operating system to prevent data corruption. For mobile devices, simply unplugging is generally safe after file transfers are complete.



Image: The AllReader facilitating file transfers across various devices including smartphones, tablets, laptops, and desktop PCs.

## 5. MAINTENANCE

To ensure the longevity and optimal performance of your BoxWave AllReader SD Card Reader, follow these maintenance guidelines:

- **Keep Clean:** Use a soft, dry cloth to clean the exterior of the device. Avoid using liquid cleaners or solvents.
- **Protect Connectors:** Keep the connectors free from dust and debris. Avoid touching the metal contacts directly.
- **Store Properly:** When not in use, store the card reader in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Handle with Care:** Avoid dropping the device or subjecting it to strong impacts, which can damage internal components.

## 6. TROUBLESHOOTING

If you encounter issues with your AllReader SD Card Reader, consider the following troubleshooting steps:

- **Device Not Recognized:**

- Ensure the AllReader is firmly plugged into your device's port.
- Try connecting to a different port on your device or a different device altogether to rule out port issues.
- Restart your device and try again.

- **Memory Card Not Detected:**

- Ensure the SD or microSD card is correctly and fully inserted into the AllReader.
- Try using a different memory card to determine if the issue is with the card or the reader.
- Check the memory card for physical damage or a locked switch (for SD cards).

- **Slow Transfer Speeds:**

- Transfer speeds can vary based on the memory card's speed class and the device's USB port version.
- Ensure your device's USB port is functioning correctly.

If these steps do not resolve the issue, please contact BoxWave customer support.

## 7. SPECIFICATIONS

Feature	Detail
Product Name	BoxWave AllReader SD Card Reader
Model Number	B0CS4HCWLK
Interfaces	USB-C, USB-A, Micro-USB, Apple/Lightning
Card Compatibility	SD, microSD
Weight	6 ounces
Manufacturer	BoxWave
Design	Compact, portable

## 8. WARRANTY AND SUPPORT

BoxWave is committed to providing high-quality accessories and excellent customer service. If you have any questions, require assistance, or experience any issues with your AllReader SD Card Reader, please do not hesitate to contact our customer support team. We are dedicated to offering real answers and helpful advice to ensure your satisfaction.

For support, please refer to the contact information provided with your product packaging or visit the official BoxWave website.

