

PartyKindom 35NNJN050431UAGELM8D7L

PartyKindom Do Not Disturb Door Hanger Sign User Manual

Model: 35NNJN050431UAGELM8D7L | Brand: PartyKindom

1. INTRODUCTION

This manual provides comprehensive instructions for the proper use and maintenance of your PartyKindom Do Not Disturb Door Hanger Sign. Designed for clarity and durability, this sign is ideal for various environments including offices, homes, and classrooms, helping to communicate your need for privacy or focus effectively.

2. PRODUCT FEATURES

- **Clear Communication:** Features prominent 'PLEASE DO NOT DISTURB' text on one side and 'FREE' (indicating availability or room service) on the other, ensuring clear messaging.
- **Durable Material:** Constructed from high-quality acrylic, offering long-lasting use and resistance to wear.
- **Elegant Design:** Modern and decorative aesthetic that complements various interior styles, from rustic to contemporary.
- **Optimal Size:** Dimensions are designed to be easily noticeable without being obtrusive.
- **Versatile Application:** Suitable for use in offices, clinics, law firms, hotels, meditation spaces, massage rooms, spas, and private residences.

EXQUISITE WORKMANSHIP



PREFERRED MATERIAL

Made of high-strength and wear-resistant material, durable for use, not easy to change color, crack or break.



EASY TO READ

It is simple in design and practical in use, give you a pleasant using experience.

Image: Visual representation of the sign's attractive, practical, and durable qualities.

3. PACKAGE CONTENTS

The package includes the following item:

- 1 x PartyKindom Do Not Disturb Door Hanger Sign



Image: The PartyKindom Do Not Disturb Door Hanger Sign, displaying both the 'Do Not Disturb' and 'Free' sides.

4. SETUP AND INSTALLATION

The PartyKindom Do Not Disturb Door Hanger Sign is designed for simple and immediate use.

1. **Unpack:** Carefully remove the sign from its packaging.
2. **Identify Sides:** Observe the two distinct sides of the sign: one indicating 'PLEASE DO NOT DISTURB' and the other indicating 'FREE'.
3. **Hang:** Place the circular opening of the sign over the handle of the desired door. Ensure it hangs freely and is visible.



Image: The sign correctly installed on a door handle, showing the 'Do Not Disturb' side.



Image: A person demonstrating the simple act of placing the sign on a door handle.

5. OPERATION

To use the sign, simply flip it to display the appropriate message:

- **For Privacy/Focus:** Hang the sign with the 'PLEASE DO NOT DISTURB' side facing outwards. This indicates that you require uninterrupted time.
- **For Availability/Service:** Flip the sign to display the 'FREE' side. This indicates that the room is available, or that you are open to interaction/service.





Image: The sign in use on a door, clearly visible in a home or office environment.

6. MAINTENANCE

To ensure the longevity and appearance of your door hanger sign, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the sign gently with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these may scratch the acrylic surface or fade the text.
- **Storage:** If not in use, store the sign in a clean, dry place to prevent dust accumulation or accidental damage.
- **Handling:** While durable, avoid dropping the sign or subjecting it to excessive force to prevent cracks or breakage.

7. TROUBLESHOOTING

This product is simple in design and operation, minimizing potential issues. However, if you encounter any concerns:

- **Sign Not Visible:** Ensure the sign is hung at an appropriate height and angle on the door handle, free from obstructions.
- **Text Unclear:** If the text appears unclear, gently clean the surface as per the maintenance instructions.

8. SPECIFICATIONS

Brand	PartyKindom
Model Number	35NNJN050431UAGELM8D7L
Material	Acrylic
Product Dimensions	24 x 8 x 1 cm (9.4 x 3.1 x 0.4 inches)
Item Weight	105 Grams
Color	As shown (som visas 2)
ASIN	B0CS51GV13



Image: Detailed view of the sign with its key dimensions labeled.

9. WARRANTY AND SUPPORT

For information regarding warranty, returns, or customer support, please refer to the retailer's policy where the product was purchased or contact PartyKindom customer service directly through their official channels. Please retain your proof of purchase for any warranty claims.