

BESTOPE MIX MS-C233

BESTOPE MIX MS-C233 5-in-1 Hair Styling Tool User Manual

Model: MS-C233

INTRODUCTION

Thank you for choosing the BESTOPE MIX MS-C233 5-in-1 Hair Styling Tool. This versatile appliance is designed to help you achieve various hairstyles, including curls, waves, and straight hair, with ease. Please read this manual thoroughly before use to ensure safe and optimal operation. Keep this manual for future reference.

IMPORTANT SAFETY INFORMATION

WARNING: This appliance heats up. Always exercise caution during use to prevent burns.

- Always use the provided heat-resistant glove to protect your hands from hot surfaces.
- Keep the appliance away from water and other liquids. Do not use near bathtubs, showers, basins, or other vessels containing water.
- Do not use this appliance with wet hands.
- Keep away from flammable materials.
- Unplug the appliance immediately after each use and allow it to cool completely before storing.
- Do not leave the appliance unattended when plugged in.
- Keep out of reach of children.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

PACKAGE CONTENTS

Verify that all items are present in your package:

- BESTOPE MIX MS-C233 Main Handle
- 32mm Curling Barrel

- 25mm Curling Barrel
- 9-18mm Tapered Curling Barrel
- 25mm Wavy Barrel
- 25mm Hair Straightener Plate
- Heat-Resistant Glove
- 2 Hair Clips
- User Manual (this document)



Image: The BESTOPE MIX MS-C233 main handle, five interchangeable styling barrels (32mm, 25mm, 9-18mm, 25mm wavy, 25mm straightener), a heat-resistant glove, and two hair clips are shown. The product box is also visible.

PRODUCT OVERVIEW

The BESTOPE MIX MS-C233 features a main handle with controls and interchangeable ceramic-tourmaline barrels for various styling options.

Main Handle Features:

- **Power Switch:** ON/OFF control.
- **Temperature Control:** Adjustable settings for 150°C and 210°C.
- **Indicator Lights:** To show power and temperature status.
- **Swivel Cord:** 2.5m, 360° rotating power cord for flexible use.

Interchangeable Barrels:

- **32mm Curling Barrel:** For large, loose curls.
- **25mm Curling Barrel:** For medium curls.
- **9-18mm Tapered Curling Barrel:** For varied, natural-looking curls.
- **25mm Wavy Barrel:** For beach waves and textured styles.
- **25mm Hair Straightener Plate:** For straightening hair.

SETUP AND ATTACHMENT

1. **Ensure Power Off:** Make sure the main handle is unplugged and the power switch is in the "OFF" position.
2. **Select Barrel:** Choose the desired styling barrel (curling barrel, wavy barrel, or straightener plate).
3. **Attach Barrel:** Align the chosen barrel with the main handle's connection point. Push firmly until it clicks securely into place. Ensure it is fully seated and stable.
4. **Verify Attachment:** Gently tug on the barrel to confirm it is locked. Do not force it.
5. **Detaching Barrel:** To remove a barrel, ensure the appliance is unplugged and completely cool. Press the release button (if present, otherwise twist and pull) and gently pull the barrel away from the handle.

Always attach or detach barrels only when the appliance is cool and unplugged.

OPERATING INSTRUCTIONS

General Use:

1. **Prepare Hair:** Ensure hair is clean, dry, and detangled. Apply a heat protectant spray if desired.
2. **Plug In:** Plug the appliance into a suitable electrical outlet (110-240V).
3. **Power On:** Slide the power switch to the "ON" position.
4. **Select Temperature:** Choose the appropriate temperature setting:
 - **150°C:** Recommended for soft and thin hair.
 - **210°C:** Recommended for thick and coarse hair.

The appliance will heat up rapidly (approximately 30 seconds). The indicator light will show when the desired temperature is reached.

5. **Wear Glove:** Always wear the heat-resistant glove on the hand that will be touching the hair or barrel during styling.
6. **Styling:**
 - **For Curling:** Take a section of hair, wrap it around the chosen curling barrel, holding the ends with the gloved hand. Hold for a few seconds (adjust time based on hair type and desired curl intensity), then release.

- **For Straightening:** Use the straightener plate. Take a small section of hair, place it between the plates, and gently glide the straightener down the hair from root to tip.
- **For Wavy Hair:** Use the wavy barrel. Clamp a section of hair between the plates and hold for a few seconds, then release and move down the hair section.

7. **Cool Down:** After styling, slide the power switch to "OFF" and unplug the appliance. Allow it to cool completely on a heat-resistant surface before storing. The appliance features an automatic shut-off after 60 minutes for safety.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your styling tool.

- **Cleaning:** Ensure the appliance is unplugged and completely cool before cleaning. Wipe the barrels and handle with a soft, damp cloth. Do not use abrasive cleaners or immerse the appliance in water.
- **Storage:** Store the appliance and its attachments in a cool, dry place, away from moisture. The included storage bag can be used to keep all components together. Do not wrap the power cord tightly around the appliance, as this can damage the cord.
- **Cord Care:** Regularly inspect the power cord for any signs of damage. If damaged, do not use the appliance and contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; power switch off.	Ensure appliance is securely plugged into a working outlet. Check power switch is in "ON" position.
Appliance not heating up.	Temperature setting too low; faulty unit.	Ensure correct temperature is selected. If still not heating, contact customer support.
Barrel is loose or detaches.	Barrel not properly attached.	Ensure barrel is aligned and pushed firmly until it clicks into place.
Hair is not curling/straightening effectively.	Hair too wet; sections too large; incorrect temperature; not holding long enough.	Ensure hair is completely dry. Use smaller sections. Increase temperature if hair is thick. Hold hair on barrel/plates for a longer duration.

SPECIFICATIONS

- **Model:** MS-G233
- **Brand:** BESTOPE MIX
- **Manufacturer:** Dongguan MeStar Electric Co.,LTD
- **Power Source:** Corded Electric
- **Voltage:** 110-240V (Worldwide)
- **Max Temperature:** 210°C (410°F)
- **Min Temperature:** 150°C (302°F)
- **Heating Technology:** PTC

- **Barrel Material:** Ceramic Tourmaline
- **Auto Shut-off:** 60 minutes
- **Cord Length:** 2.5m (360° Swivel)
- **Product Dimensions:** 23.5 x 14 x 14 cm (main unit with packaging)
- **Item Weight:** 1.19 kg
- **UPC:** [6976564470594](#)

WARRANTY AND SUPPORT

The BESTOPE MIX MS-C233 comes with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your product packaging or contact your retailer.

For technical support, troubleshooting assistance, or inquiries regarding replacement parts, please contact BESTOPE MIX customer service through your purchase platform or the contact information provided on the product packaging.