

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Outsunny](#) /

› [Outsunny 2 Piece Folding Chaise Lounge Instruction Manual \(Model 84G-269V01BK\)](#)

Outsunny 84G-269V01BK

Outsunny 2 Piece Folding Chaise Lounge

INSTRUCTION MANUAL - MODEL: 84G-269V01BK

Product Overview

Thank you for choosing the Outsunny 2 Piece Folding Chaise Lounge. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your new outdoor lounge chairs. Please read these instructions thoroughly before use and retain them for future reference.



Image: Two Outsunny folding chaise lounges positioned next to a swimming pool, demonstrating typical outdoor use.

Key Features

- **Two-Piece Set:** Includes two individual chaise lounges for versatile outdoor relaxation.
- **Breathable Mesh Surface:** Designed for comfort and airflow, especially in warm weather.
- **Adjustable Backrest:** Features 5 reclining angles to suit various activities like reading, sunbathing, or napping.
- **Integrated Face Hole:** Allows for comfortable face-down lounging, ideal for reading or tanning your back.

- **Convenient Side Pocket:** Provides storage for small items such as phones, books, or sunscreen.
- **Foldable Design:** Tri-fold mechanism for compact storage and easy transport with built-in carrying handles.
- **Durable Construction:** Made with strong steel frames and a water-safe powder-coated finish for outdoor durability.
- **Comfortable Headrest:** Includes plush pillows for head support.

Setup Instructions

Your Outsunny chaise lounge arrives pre-assembled and requires no complex setup. Simply unfold the chair for immediate use.

1. Place the folded chaise lounge on a flat, stable surface.
2. Gently pull the sections apart to extend the chair to its full length.
3. Ensure all legs are fully extended and locked into position for stability.
4. Adjust the backrest to your desired angle (refer to 'Operation' section).



Image: Visual guide illustrating the chaise lounge in its folded and fully extended positions, including key dimensions for setup.

Operation

The chaise lounge is designed for ease of use and comfort.

Adjusting the Backrest

The backrest offers 5 different reclining positions:

1. To adjust, slightly lift the backrest.
2. Select one of the five available notches on the support bar.
3. Gently lower the backrest until it securely rests in the chosen notch.



FOLDABLE DESIGN

Easy to carry and transport



Image: Illustration demonstrating the five adjustable reclining positions of the chaise lounge backrest.

Using the Face Hole

For comfortable face-down lounging, the chaise lounge includes a dedicated face hole with a removable pillow. Remove the pillow to expose the face hole when desired.

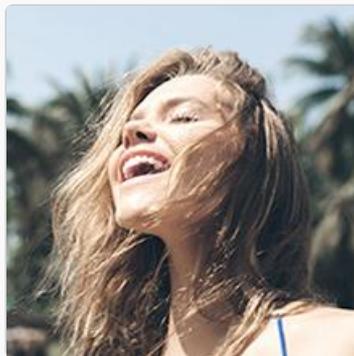


Image: Detailed view of the integrated face hole, designed for comfortable face-down use.

Utilizing the Side Pocket

A side pocket is attached to the frame for convenient storage of personal items. Place small objects like your phone, sunglasses, or a book in the pocket for easy access.



Image: Close-up of the practical side pocket, ideal for storing small personal items.

Maintenance

Proper care will extend the life of your chaise lounge.

- **Cleaning:** Wipe clean with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Ensure the mesh fabric and frame are completely dry before folding and storing to prevent mildew and rust.
- **Inspection:** Periodically check all bolts and connections to ensure they are secure. Tighten if necessary.

Storage and Transport

The tri-fold design allows for convenient storage and transport.

1. Ensure the backrest is in its lowest, flat position.
2. Fold the chair inward at its designated hinge points until it forms a compact unit.
3. Secure any locking mechanisms if present.
4. Use the integrated carrying handles for easy portability.
5. Store in a dry, protected area when not in use, especially during inclement weather or off-season.



Image: The chaise lounge in its folded state, demonstrating its compact size for storage and transport in a car trunk.

Troubleshooting

- **Chair feels wobbly:** Ensure all legs are fully extended and locked. Check that the chair is placed on a level surface.
- **Backrest not staying in position:** Verify that the support bar is correctly engaged in one of the five notches.
- **Difficulty folding/unfolding:** Ensure no obstructions are present in the hinge areas. Apply gentle, even pressure. Do not force.

Specifications

Attribute	Detail
Model Number	84G-269V01BK
Material	Steel frame, Mesh fabric

Color	Black
Overall Dimensions (L x W x H)	74.5" x 26.75" x 14.25"
Seat Height	14.25"
Item Weight (each)	16 Pounds
Maximum Weight Capacity	264 Pounds
Reclining Positions	5
Assembly Required	No
Care Instructions	Wipe Clean

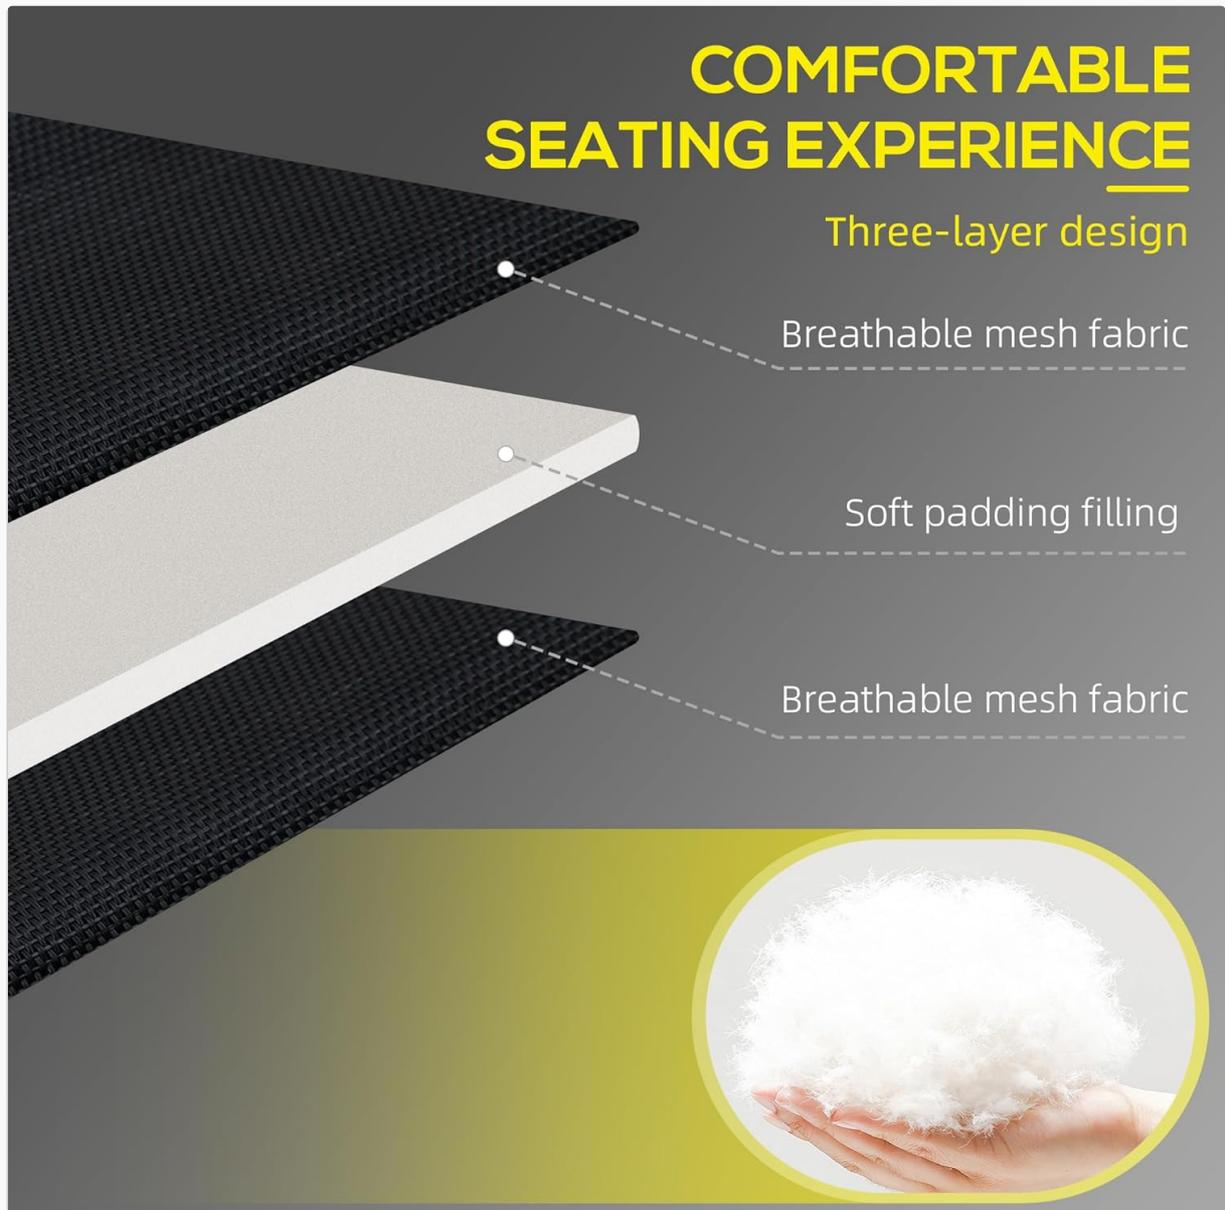


Image: Comprehensive dimension diagram of the Outsunny chaise lounge.

Warranty and Support

This Outsunny product comes with a **1-year warranty against manufacturer defects**. Please retain your

proof of purchase for warranty claims.

For any questions, concerns, or support needs regarding your chaise lounge, please contact Outsunny customer service. Contact information can typically be found on the product packaging or the official Outsunny website.

© 2024 Outsunny. All rights reserved.