

GREENER C5

GREENER Electric Pressure Washer 4000 PSI

Model: C5 | Brand: GREENER

[Overview](#) [Setup](#) [Safety Information](#) [Package Contents](#) [Product](#)
[Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. SAFETY INFORMATION

Please read and understand all safety warnings and instructions before operating this pressure washer. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- **Eye Protection:** Always wear appropriate eye protection (safety glasses or goggles) when operating the pressure washer.
- **Electrical Safety:** Ensure the power cord and plug are in good condition. Do not operate the unit with a damaged cord or plug. Connect to a grounded outlet. Do not use extension cords unless absolutely necessary and ensure they are rated for outdoor use and the appliance's power requirements.
- **Water Pressure Hazard:** The high-pressure stream can cause serious injury. Never direct the spray at people, pets, or electrical devices. Keep hands and feet clear of the nozzle.
- **Water Connection:** Connect the pressure washer to a cold water supply only. Ensure the water inlet filter is clean and properly installed.
- **Stability:** Operate the pressure washer on a stable, level surface to prevent tipping.
- **Children and Bystanders:** Keep children and bystanders away from the operating area.
- **Total Stop System (TSS):** The unit features a TSS which automatically shuts off the pump when the trigger is released, saving energy and extending pump life.

2. PACKAGE CONTENTS

Verify that all items are present and in good condition upon unpacking.

- GREENER Electric Pressure Washer Unit
- High-Pressure Spray Gun

- 23ft High-Pressure Outlet Hose
- 16ft Power Cord with GFCI protection
- Adjustable Nozzle (integrated or multiple quick-connect nozzles)
- Soap Cannon/Detergent Tank
- Water Inlet Connector
- Nozzle Cleaning Pin



Image: Pressure washer unit and included accessories.

3. PRODUCT OVERVIEW

The GREENER Electric Pressure Washer Model C5 is designed for efficient cleaning of various outdoor surfaces. It features a powerful motor and user-friendly design.

Key Features:

- **High Performance:** Delivers up to 4000 PSI water pressure and 2.6 GPM water flow for effective cleaning.
- **Extended Reach:** Equipped with a 23ft high-pressure hose and a 16ft power cord for a wide working radius.

- **Total Stop System (TSS):** Automatically shuts off the pump when the trigger is released, conserving energy and extending pump life.
- **Adjustable Nozzle:** Features a rotating nozzle for seamless transition of water flow angle from 0° (focused jet) to 180° (wide fan spray), eliminating the need for frequent nozzle changes.
- **Soap Cannon:** Integrated soap cannon for applying detergent, enhancing cleaning effectiveness.
- **All-in-One Storage:** Convenient storage options for all accessories, including power cord hook, spray gun holder, and hose hanger.
- **Durable Construction:** Features an upgraded copper core motor and quality metal outlet for reliable performance.
- **Waterproof Protection:** IPX5 rated for water resistance.




Image: Overview of key features including motor, pump, and hose length.

ALL-IN-ONE Nozzle

Note: The water pressure will decrease as the injection angle increases.



360° rotate

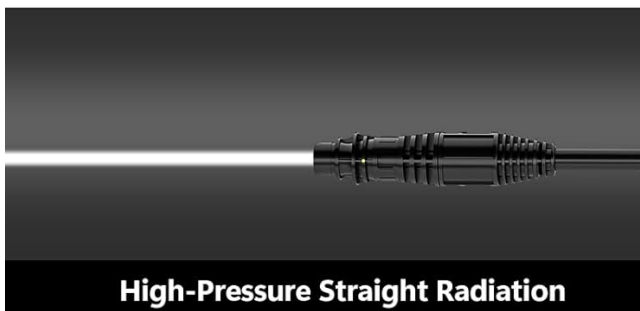

High-Pressure Straight Radiation



0-60° Diffuse Jet



60-180° Free Jet



Foam Kettle Spray

Image: All-in-one adjustable nozzle demonstrating various spray patterns.

4. SETUP INSTRUCTIONS

4.1 Assembly

- Attach High-Pressure Hose:** Connect one end of the 23ft high-pressure hose to the outlet on the pressure washer unit and the other end to the spray gun. Ensure connections are secure.
- Connect Spray Gun:** Attach the spray wand with the adjustable nozzle to the spray gun.
- Connect Water Supply:** The pressure washer supports two water intake methods: direct faucet connection or self-priming from a bucket.
 - Faucet Connection:* Connect a standard garden hose (not included) to the water inlet connector on the pressure washer. Ensure the water inlet filter is clean and properly seated. Connect the other end of the garden hose to a cold water faucet.
 - Self-Priming (Bucket):* Place the water inlet hose (not included) with a filter into a bucket of clean water. Ensure the filter is fully submerged.
- Connect Power:** Plug the 16ft power cord into a grounded 110V electrical outlet. Ensure the GFCI (Ground

Fault Circuit Interrupter) is functioning correctly by pressing the 'RESET' button.

SOAP MODE

with foam cannon



Image: Two ways to connect the water supply.

4.2 Initial Start-up

1. Turn on the water supply completely.
2. Squeeze the trigger on the spray gun to purge air from the system until a steady stream of water emerges.
3. Turn the pressure washer ON using the power switch.

Video: This video demonstrates the assembly process, connecting the water supply, and attaching the spray gun and foam cannon. It also shows the initial setup steps before operation.

5. OPERATING INSTRUCTIONS

5.1 Using the Adjustable Nozzle

The integrated adjustable nozzle allows you to change the spray pattern by rotating the nozzle head. This

eliminates the need to switch between multiple quick-connect nozzles.

- **0° (Pencil Jet):** For concentrated, high-impact cleaning on tough stains or small areas. Use with caution as it can damage surfaces.
- **0-60° (Diffuse Jet):** A wider, more gentle spray for general cleaning.
- **60-180° (Free Jet):** A very wide, low-pressure spray for rinsing or delicate surfaces.

Note: The water pressure decreases as the injection angle increases.



Image: Adjustable nozzle demonstrating various spray patterns.

5.2 Using the Soap Cannon

1. Fill the soap cannon reservoir with an appropriate pressure washer detergent.
2. Attach the soap cannon to the spray gun.
3. Adjust the top knob on the soap cannon to control the foam size and concentration.
4. Spray the detergent onto the desired surface. Allow it to soak for a few minutes (refer to detergent instructions) before rinsing.

ALL-IN-ONE STORAGE



Power Cord Hook



Spray Gun Holder



Big Wheels



Hose Hanger



Image: Using the pressure washer in soap mode with the foam cannon.

5.3 Cleaning Applications

The GREENER pressure washer is suitable for various cleaning tasks:

- **Car Washing:** Use a wide spray pattern and soap cannon for effective and safe car cleaning.
- **Patio and Driveway Cleaning:** Use a narrower, more powerful spray for concrete and paved surfaces.
- **House Siding and Fences:** Adjust spray to a wider pattern to avoid damage to delicate surfaces.
- **Outdoor Furniture:** Use a gentle spray to clean outdoor furniture.

Powerful Pressure Washer with Mutil-Function



4000PSI



2.6GPM



23FT Hose



16FT Power
Cord



Driveway



Car




The Siding



Furniture



Cracks

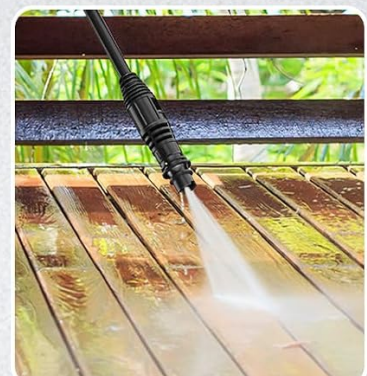

Deck

Image: Various cleaning applications for the pressure washer.

6. MAINTENANCE

6.1 After Each Use

- **Shut Down:** Turn off the power switch, then turn off the water supply.
- **Relieve Pressure:** Squeeze the spray gun trigger to release any remaining pressure in the system.
- **Disconnect:** Unplug the power cord and disconnect the water supply and high-pressure hose.
- **Rinse Detergent Tank:** If using the soap cannon, rinse it thoroughly with clean water to prevent clogging.
- **Clean Nozzle:** Use the provided nozzle cleaning pin to clear any blockages in the nozzle.

6.2 Storage

Store the pressure washer and its accessories in a dry, frost-free area. Utilize the all-in-one storage design for organized and convenient storage.

2 WAYS TO TAKE WATER



Image: All-in-one storage design for accessories.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Unit does not start	No power supply; GFCI tripped; Power switch off	Check power connection; Reset GFCI; Turn power switch ON
Low water pressure	Insufficient water supply; Clogged water inlet filter; Clogged nozzle; Air in pump	Ensure full water supply; Clean filter; Clear nozzle with pin; Purge air by squeezing trigger without power for 2 minutes
Water leakage	Loose connections; Damaged O-rings	Tighten all connections; Inspect and replace O-rings if damaged

Problem	Possible Cause	Solution
Motor runs but no water flow	Water supply off; Inlet filter clogged; Air in pump	Turn on water supply; Clean filter; Purge air from pump

8. SPECIFICATIONS

Technical specifications for the GREENER Electric Pressure Washer Model C5.

Feature	Detail
Model Number	C5
Maximum Pressure	4000 PSI (advertised), 3500 PSI (measured)
Maximum Flow Rate	2.6 GPM (advertised), 2.4 GPM (measured)
Power Source	Corded Electric
Hose Length	23 Feet (7 Meters)
Power Cord Length	16 Feet
Product Dimensions (L x W x H)	31.98 x 31.98 x 39.98 cm
Item Weight	6.32 kg
Color	Blue
Manufacturer	GREENER
Certification	CSA

9. WARRANTY & SUPPORT

GREENER is committed to providing quality products and customer satisfaction.

- **Extended Warranty:** Enjoy 12+ months of extended warranty.
- **Money Back Guarantee:** A 30-day money-back guarantee is offered.
- **Customer Support:** 24/7 customer support is available for any questions or assistance.
- **VIP Service:** Benefit from VIP service including free replacement for eligible issues.

For any inquiries or support, please contact us at: greener-serviceteam@outlook.com

Activate Your Privilege Service

GREENER pressure Washer

12+ MONTHS
FREE EXTENDED WARRANTY

30 DAYS
MONEY BACK GUARANTEE

24/7
CUSTOMER SUPPORT

VIP SERVICE
WITH FREE REPLACEMENT

Greener life with us

10 TRUSTED BRAND
SOLD IN 10
COUNTRIES

LEADER IN
OUTDOOR
POWER TOOLS

PATENTED
PRODUCTS

OVER 20,000
FIVE-STAR
REVIEWS

Image: Warranty and support details.