

onerbl 1

onerbl 24V AC/DC Adapter User Manual

MODEL: 1

Introduction

This manual provides essential instructions for the safe and effective use of your onerbl 24V AC/DC Adapter. This power supply is designed to be compatible with Yoton Y7, Y9, Y-7, and Y-9 1080P WiFi Bluetooth Smart Portable Movie Video Home Projectors, providing a stable 24.0V, 2.5A, 60.0W power output. Please read this manual thoroughly before use and retain it for future reference.

Safety Instructions

- **Indoor Use Only:** This adapter is designed for indoor use. Do not expose it to rain, moisture, or extreme temperatures.
- **Proper Ventilation:** Ensure adequate ventilation around the adapter. Do not cover it or place it in an enclosed space that could restrict airflow.
- **Avoid Liquids:** Keep the adapter away from water, spills, and other liquids. Do not operate with wet hands.
- **Correct Voltage:** Connect the adapter only to power outlets providing the specified voltage (AC 100-240V, 50/60Hz).
- **Cable Care:** Do not place heavy objects on the power cord, pinch it, or bend it excessively. Inspect the cord regularly for damage.
- **Disconnect When Not in Use:** Unplug the adapter from the power outlet when not in use for extended periods or during electrical storms.
- **No Disassembly:** Do not attempt to open or repair the adapter. Refer all servicing to qualified personnel.
- **Child Safety:** Keep the adapter and its cables out of reach of children.

Setup

1. **Inspect the Adapter:** Before connecting, visually inspect the adapter and cables for any signs of damage. Do not use if damaged.
2. **Connect to Device:** Insert the DC output connector of the adapter firmly into the power input port of your Yoton Y7/Y9 projector.

3. **Connect to Power Outlet:** Plug the AC input cable into a standard wall outlet (AC 100-240V, 50/60Hz).
4. **Verify Connection:** Ensure all connections are secure. The projector should now receive power.



Image: The onerbl 24V AC/DC adapter connected to a device and plugged into a wall outlet, demonstrating a typical setup.

Operating Instructions

Once the adapter is correctly connected to your Yoton projector and a power outlet, it will supply continuous power. The adapter is designed for constant operation within its specified limits. Some adapters may feature an LED indicator light to confirm power delivery.

- **Power Indicator:** If present, a small LED light on the adapter will illuminate when power is being supplied.
- **Automatic Voltage Adjustment:** The adapter automatically adjusts to input voltages between 100-240V AC, making it suitable for worldwide use.

Maintenance

- **Cleaning:** Disconnect the adapter from the power outlet and the device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cables to prevent damage.
- **Regular Inspection:** Periodically check the adapter casing and cables for any signs of wear, cuts, or damage. Replace the adapter if any damage is observed.

Troubleshooting

Problem	Possible Cause	Solution
Device not powering on	Adapter not plugged in; loose connection; faulty outlet; damaged adapter.	Ensure adapter is fully plugged into both the device and a working wall outlet. Check the outlet with another device. Inspect adapter and cables for damage.
Adapter feels hot	Normal operation; poor ventilation; overloaded.	A slight warmth is normal. Ensure adequate airflow around the adapter. If it's excessively hot, disconnect immediately and check for blockages or device issues.
Intermittent power	Loose connection; damaged cable.	Check all connections for tightness. Inspect the cable for kinks or breaks. Replace if cable is damaged.

Specifications

Feature	Detail
Input Voltage	AC 100-240V, 50/60Hz (Worldwide AC Input)
Output Voltage	DC 24.0V
Output Current	2.5A (2500mA)
Output Power	60.0W
Compatibility	Yoton Y7, Y9, Y-7, Y-9 1080P WiFi Bluetooth Smart Portable Movie Video Home Projectors
Protection Features	Over Voltage Protection, Over Heat Protection, Short-Circuit Protection, Over-Current Protection
Cable Length (Total)	Approximately 127.8 inches (3.25 meters)
Brand	onerbl
Model Number	1

Cable Length: 127.8 inch



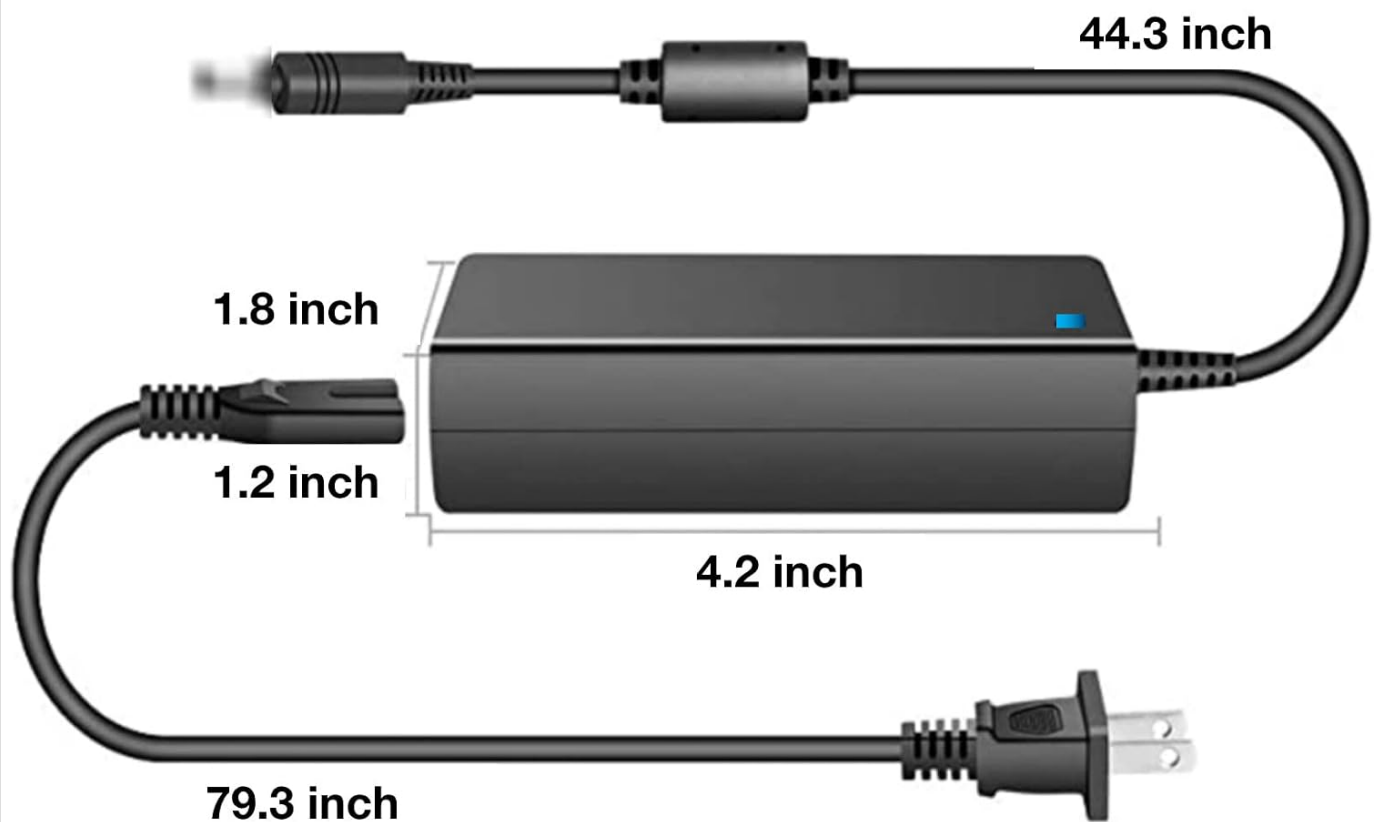


Image: Detailed dimensions of the adapter unit and its connected cables, including the DC output cable and the AC input cable.



Image: A coiled view of the AC input power cord, featuring a two-prong plug for wall outlets and a C7 connector for the adapter.

QUALITY CONTROL

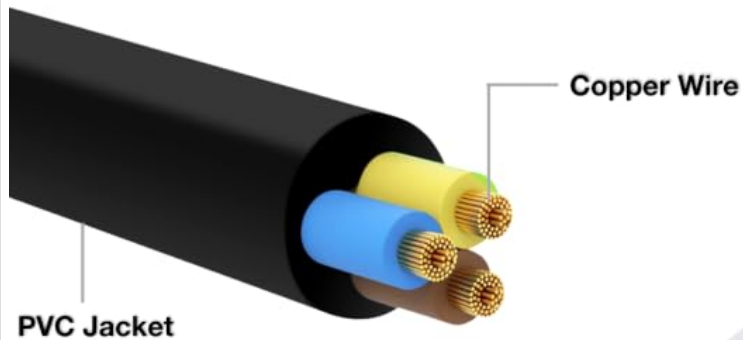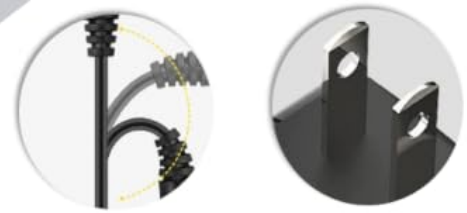

DURABLE DESIGN

Image: An illustration detailing the durable design of the power cable, highlighting the copper wire conductors and the protective PVC jacket.

EXTENDED CORD DESIGN

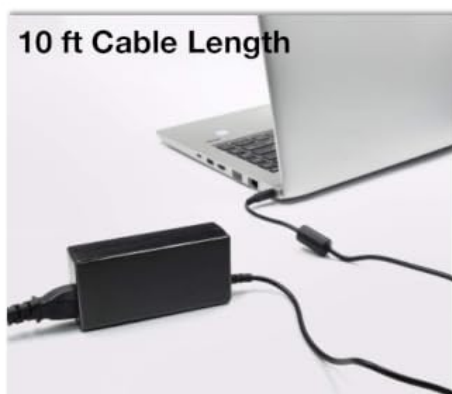


Image: Visual examples illustrating the convenience of extended cord designs, showing different cable lengths in typical usage scenarios.

SMART CHIP



Guard Your Electricity Safety



short-circuit
protection



over-voltage
protection



over-current
protection



Multiple Protection

Image: A graphic representation of the adapter's smart chip, highlighting its multiple protection features including short-circuit, over-voltage, and over-current protection.

Wide Range of Applications

ONERBL
ONERBL



Image: A circular diagram illustrating the wide range of applications for this power adapter, compatible with various electronic devices beyond projectors.

Warranty and Support

This onerbl power adapter comes with a standard return policy allowing for refunds or replacements within 30 days of purchase. For technical support, warranty claims, or further assistance, please contact your retailer or the manufacturer directly. Please have your model number (1) and purchase information ready when contacting support.

Manufacturer: Shenzhen Waweis Technology Co., Ltd

© 2023 onerbl. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question