

[Manuals.plus](#) /

› [BABY JOY](#) /

› BABY JOY 6-in-1 Baby Walker Instruction Manual (Model J-138R)

BABY JOY J-138R

BABY JOY 6-in-1 Baby Walker Instruction Manual (Model J-138R)

Versatile Activity Center for Babies Aged 6-14 Months

1. INTRODUCTION

Thank you for choosing the BABY JOY 6-in-1 Baby Walker. This product is designed to support your child's development from sitting to walking, offering multiple modes for play and learning. Please read this manual thoroughly before assembly and use to ensure safe operation and proper maintenance.

This versatile baby activity walker features a 6-in-1 design, which includes baby walker mode, baby rocker mode, baby bouncer mode, walk-behind toddler push walker mode, food tray mode, and puzzle mode, greatly meeting the needs of your little one at different stages. It is suitable for baby boys and girls aged 6-14 months.



Figure 1: The BABY JOY 6-in-1 Baby Walker demonstrating its six versatile modes.

2. SAFETY INFORMATION

WARNING: Always supervise your child while using the walker. Never leave your child unattended.

- This baby walker is ASTM & CPSIA certified, ensuring it meets safety standards.
- Features 6 anti-slip pads (auxiliary brakes) to prevent falls down stairs or rolling down slopes.
- A safety distance is reserved between the front of the walker and the wall to prevent finger pinching.
- Universal front wheels provide flexible and smooth steering.
- Speed-reduction rear wheels ensure controlled movement.
- The smooth and rounded body is free of sharp edges and burrs.
- The 95° ergonomic high backrest provides optimal spine support.



Figure 2: All-around safety protection features of the walker.



Figure 3: Ample safety distance to prevent finger pinching.

3. ASSEMBLY AND SETUP

The BABY JOY 6-in-1 Baby Walker is designed for easy assembly without requiring special tools. A detailed assembly video is available on the product detail page for visual guidance.

1. Unpack all components and verify against the included parts list.
2. Assemble the main frame by connecting the base and upper sections. Ensure all locking mechanisms click into place securely.

3. Attach the seat cushion to the walker frame.
4. Install the activity tray onto the front of the walker.
5. Insert 3 AA batteries (not included) into the activity tray for music and lights.
6. Ensure all wheels are properly attached and can rotate freely.

4. OPERATING MODES AND FEATURES

This walker offers six distinct modes to adapt to your child's developmental stage:

- **Baby Jumper Mode:** Allows the baby to bounce in place, strengthening leg muscles.
- **Baby Rocker Mode:** Converts into a gentle rocker for soothing motion.
- **Hand Push Mode:** For toddlers learning to walk, the walker can be used as a push-behind aid.
- **Baby Walker Mode:** Traditional walker mode for mobility and exploration.
- **Baby Eating Mode:** The activity tray can be removed to create a food tray for meal times.
- **Puzzle Mode (Early Education):** The detachable activity tray can be used independently for floor play.

5. HEIGHT ADJUSTMENT

The walker features 3 adjustable seat height levels to accommodate your baby's growth and ensure a comfortable fit. Adjust the seat to the appropriate position based on your baby's height, ensuring their feet can comfortably touch the floor.

1. Locate the height adjustment mechanism on the walker frame.
2. Press the adjustment buttons or levers to unlock the frame.
3. Raise or lower the seat to one of the three available positions.
4. Ensure the mechanism locks securely into place at the desired height before placing your child in the walker.



Figure 4: 3-level height adjustment for growing babies.

6. INTERACTIVE ACTIVITY CENTER

The detachable activity tray provides engaging entertainment for your child. It includes:

- Rotary balls
- Lights
- Steering wheel and horn
- Instrument panel
- Keys and knobs

Note: The activity center requires 3 AA batteries (not included) to operate the music and lights. To use as a food tray, simply remove the music box/activity panel.



Figure 5: Detachable music tray for play and eating.

7. FOLDING AND STORAGE

The BABY JOY walker features a convenient foldable design for easy storage and portability.

1. Ensure your child is removed from the walker before folding.
2. Locate the folding mechanisms (usually buttons or levers on the side or bottom frame).
3. Follow the instructions to collapse the walker into a compact size.
4. Once folded, it can be stored under a sofa, bed, or in a car trunk, saving space.



Figure 6: Foldable design for space-saving storage.

8. MAINTENANCE AND CLEANING

- The comfortable and breathable seat cushion is removable and machine washable for convenient cleaning. Refer to the care label on the cushion for specific washing instructions.
- Wipe down the plastic and metal parts of the walker with a damp cloth and mild soap. Avoid abrasive cleaners.
- Regularly check all screws, bolts, and locking mechanisms to ensure they are tight and secure.
- Inspect wheels for debris and clean as needed to ensure smooth operation.

9. TROUBLESHOOTING

If you encounter any issues with your BABY JOY 6-in-1 Baby Walker, please refer to the following common solutions:

Problem	Possible Cause	Solution
Walker does not move smoothly.	Wheels are dirty or obstructed.	Clean wheels and remove any debris. Ensure wheels are properly installed.
Activity tray lights/music not working.	Batteries are dead or incorrectly installed.	Replace with new 3 AA batteries. Check battery orientation.
Height adjustment mechanism is stuck.	Mechanism may be misaligned or obstructed.	Ensure no parts are blocking the mechanism. Apply gentle, even pressure. Do not force.
Walker feels unstable.	Assembly not fully secured.	Recheck all connections and locking mechanisms to ensure they are fully engaged.

If the problem persists, please contact BABY JOY customer support for further assistance.

10. SPECIFICATIONS

- Brand:** BABY JOY
- Model Number:** J-138R
- UPC:** 798470136717
- Age Range:** 6-14 months
- Maximum Weight Recommendation:** 26.5 pounds
- Item Dimensions (L x W x H):** 28" x 24" x 19.5"
- Item Weight:** 10 pounds
- Material Type:** PP + TPR + Metal
- Number of Wheels:** 4
- Included Components:** 1 x Baby Walker, 1 x User Guide

View More Product Details



Detachable Foot Pad



Removable &
Machine-washable
Seat Cushion



Ergonomic Back Angle



Robust Cross-shaped
Frame

Figure 7: Product dimensions and specifications.

11. WARRANTY AND SUPPORT

BABY JOY products are manufactured to high-quality standards. For warranty information, product support, or to purchase replacement parts, please refer to the contact information provided with your purchase or visit the official BABY JOY website.

Please retain your proof of purchase for any warranty claims.

© 2026 BABY JOY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question