

[Manuals.plus](#) /

› [Sourcefy](#) /

› Sourcefy K21 Engine for Nissan Forklift Long Block (Models 10102-FU400, 91H20-06360) Instruction Manual

Sourcefy 10102-FU400, 91H20-06360

Sourcefy K21 Engine for Nissan Forklift Long Block Instruction Manual

Models: 10102-FU400, 91H20-06360

1. PRODUCT OVERVIEW

This manual provides essential information for the proper installation, operation, and maintenance of your Sourcefy K21 Engine Long Block. This engine is designed for Nissan Forklift applications.

The K21 engine long block is a core component. It is important to note that engines may or may not include accessories. You will often need to transfer your existing components such as timing parts, timing covers, oil pan, manifold, pumps, alternator, and starter from your previous engine to this long block.



Figure 1: A detailed view of the Sourcefy K21 long block engine, featuring its cast iron block and aluminum cylinder head.

2. INSTALLATION AND SETUP

Proper installation is crucial for the performance and longevity of your K21 engine. It is highly recommended that installation be performed by a qualified and experienced technician.

2.1 Pre-Installation Checks

- Inspect the new engine for any shipping damage.
- Ensure all necessary existing components (timing parts, oil pan, manifolds, etc.) are clean and in good working condition for transfer.
- Verify compatibility of the new long block with your specific forklift model and existing accessories.

2.2 Installation Procedure

1. Carefully remove the old engine from the forklift, following manufacturer guidelines.
2. Transfer all required external components from the old engine to the new K21 long block. This includes, but is not limited to, the cylinder head, timing cover, oil pan, intake and exhaust manifolds, fuel system components, ignition system, and all sensors.
3. Install the K21 long block into the forklift chassis, ensuring all mounting points are correctly aligned and secured.
4. Connect all electrical, fuel, cooling, and exhaust systems.
5. Fill the engine with appropriate fluids (engine oil, coolant) to the recommended levels.
6. Perform initial checks for leaks and proper connections before starting.

2.3 Safety Precautions

- Always wear appropriate personal protective equipment (PPE) during installation.
- Ensure the forklift is stable and secured before beginning any work.

- Disconnect the battery before working on electrical components.
- Refer to the forklift's service manual for specific safety procedures.



Figure 2: Side view of the K21 engine block, showing mounting points and various ports.

3. OPERATION GUIDELINES

Once installed, proper operation practices will help ensure the longevity and efficiency of your K21 engine.

- **Initial Start-up:** After installation, perform a careful initial start-up. Monitor oil pressure, coolant temperature, and listen for any unusual noises.
- **Warm-up:** Allow the engine to reach operating temperature before placing it under heavy load.
- **Fluid Levels:** Regularly check engine oil, coolant, and other fluid levels before each shift or operation.
- **Fuel Quality:** Use only the recommended fuel type and ensure it is clean and free of contaminants.
- **Avoid Overloading:** Operate the forklift within its specified load capacity to prevent undue stress on the engine.
- **Monitor Gauges:** Pay attention to all dashboard gauges and warning lights during operation. Address any warnings promptly.

4. MAINTENANCE SCHEDULE

Regular maintenance is essential for the optimal performance and extended lifespan of your K21 engine. Adhere to the forklift manufacturer's recommended service intervals.

4.1 Routine Checks (Daily/Weekly)

- Check engine oil level and condition.
- Inspect coolant level and condition.
- Check for any visible leaks (oil, coolant, fuel).
- Inspect drive belts for tension and wear.
- Clean air filter housing (replace filter as needed).

4.2 Periodic Maintenance (Monthly/Quarterly/Annually)

- **Engine Oil and Filter Change:** Replace engine oil and oil filter according to the forklift manufacturer's schedule, typically every 200-300 operating hours or as recommended.
- **Fuel Filter Replacement:** Replace fuel filter to ensure clean fuel delivery.
- **Air Filter Replacement:** Replace air filter element as per schedule or when dirty.
- **Spark Plug Inspection/Replacement:** Inspect and replace spark plugs as needed to maintain efficient combustion.
- **Coolant System Flush:** Periodically flush and refill the cooling system with fresh coolant.
- **Valve Clearance Adjustment:** Check and adjust valve clearances if specified by the engine manufacturer.
- **General Inspection:** Inspect all hoses, clamps, wiring, and mounting hardware for wear or damage.

5. TROUBLESHOOTING COMMON ISSUES

This section provides general guidance for common engine issues. For complex problems, consult a certified technician.

Symptom	Possible Cause	Action
Engine Fails to Start	Low fuel, dead battery, faulty starter, ignition system issue.	Check fuel level, battery charge, starter connections. Consult technician if issues persist.
Engine Overheating	Low coolant, faulty thermostat, clogged radiator, failing water pump.	Check coolant level, inspect radiator for obstructions. Stop engine immediately if overheating.
Unusual Engine Noises	Loose belts, worn bearings, valve train issues, exhaust leaks.	Identify source of noise. Do not operate if noise is severe. Seek professional diagnosis.
Excessive Smoke from Exhaust	Incorrect fuel mixture, oil burning, coolant leak into combustion chamber.	Note smoke color (blue, white, black). Check fluid levels. Professional inspection recommended.

6. TECHNICAL SPECIFICATIONS

Below are the key specifications for the Sourcefy K21 Engine Long Block.

Specification	Detail
Manufacturer	Sourcefy
Item Model Number(s)	10102-FU400, 91H20-06360
Product Dimensions	48 x 48 x 40 inches
Color	Metal
Included Components	K21 Engine Long Block
ASIN	B0CS6KRZBB
Date First Available	January 12, 2024

7. WARRANTY INFORMATION

The Sourcefy K21 Engine Long Block comes with a **6 Months Unlimited Warranty**.

This warranty covers defects in materials and workmanship under normal use and service. Please retain your proof of purchase for warranty claims. For specific terms, conditions, and claim procedures, please contact Sourcefy customer support.

8. CUSTOMER SUPPORT

For technical assistance, warranty claims, or any questions regarding your Sourcefy K21 Engine, please contact Sourcefy customer support.

You can often find contact information on the official Sourcefy website or through the retailer where the product was purchased. Please have your model number (10102-FU400 or 91H20-06360) and proof of purchase ready when contacting support.

For more information about Sourcefy products, you may visit the [Sourcefy Store on Amazon](#).