

Manuals.plus /

› SIEMENS /

› SIEMENS 8 kg Fully Automatic Front Load Condenser Tumble Clothes Dryer WP31G200IN User Manual

SIEMENS WP31G200IN

SIEMENS 8 kg Fully Automatic Front Load Condenser Tumble Clothes Dryer WP31G200IN User Manual

Model: WP31G200IN

1. INTRODUCTION

Thank you for choosing the SIEMENS 8 kg Fully Automatic Front Load Condenser Tumble Clothes Dryer, model WP31G200IN. This appliance is designed to provide efficient and gentle drying for your laundry. Please read this manual carefully to ensure safe and optimal use of your new dryer. Keep these instructions for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes, and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, articles backed with rubber, and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Remove all objects from pockets such as lighters and matches.
- The appliance must not be installed behind a lockable door, a sliding door, or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- Ensure proper ventilation to avoid the backflow of gases from appliances burning other fuels, including open fires.
- The appliance is for domestic use only.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your dryer. It is recommended to have the appliance installed by a qualified technician.

3.1 Unpacking

- Carefully remove the dryer from its packaging.
- Inspect the appliance for any transport damage. Do not connect a damaged appliance.
- Remove all packaging materials, including the protective film and transport bolts.

3.2 Location

- Place the dryer on a firm, level surface.
- Ensure adequate ventilation around the appliance. Do not block ventilation openings.
- Avoid installing the dryer in areas prone to freezing temperatures.
- Maintain a minimum clearance of 1 cm between the dryer and walls or other appliances.

3.3 Electrical Connection

- Connect the dryer to a properly installed earthed socket.
- The mains voltage must match the voltage specified on the appliance's rating plate (240 Volts).
- Do not use extension cords or multi-plug adapters.

3.4 Condensate Drain (Optional)

This condenser dryer collects water in a condensate container. For continuous drainage, you can connect the included fill hose to an external drain. Refer to the detailed installation instructions in the separate installation guide for this procedure.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and drying programs for optimal results.



Figure 1: Control panel of the SIEMENS WP31G200IN dryer, showing the program selector dial and Touch LED Display.

4.1 Before First Use

- Wipe the drum with a damp cloth to remove any dust or residue from manufacturing.
- Run a short drying cycle with a damp cloth to clean the drum and remove any odors.

4.2 Loading Laundry

- Sort laundry according to fabric type and desired dryness level.
- Do not overload the dryer. The maximum capacity is 8 kg.
- Ensure all items are thoroughly spun in a washing machine to remove excess water.



Figure 2: The SIEMENS WP31G200IN dryer with its front-load door open, revealing the stainless steel drum.

4.3 Selecting a Program

Turn the program selector dial to choose the appropriate drying program. The dryer features Duo Tronic Sensors and Auto Dry Technology to automatically detect laundry moisture and adjust drying time.

Available programs include:

- **Cupboard Dry:** For items that can be put away directly.
- **Iron Dry:** For items that require ironing after drying.
- **Super40:** A quick drying program for small loads.
- Other specialized programs for various fabric types.

4.4 Starting and Ending a Cycle

- Press the Start/Pause button on the Touch LED Display to begin the selected program.
- The display will show the remaining drying time.
- At the end of the cycle, an acoustic signal may sound. Remove laundry promptly to reduce creasing.

- The Anti Crease function helps prevent creasing if laundry is not removed immediately.

5. MAINTENANCE AND CARE

Regular maintenance ensures efficient operation and extends the life of your dryer.

5.1 Cleaning the Lint Filter

- Clean the lint filter after every drying cycle.
- Open the dryer door and pull out the filter.
- Remove any lint by hand or with a soft brush.
- Rinse the filter under running water if necessary, and ensure it is completely dry before reinserting.

5.2 Emptying the Condensate Container

- Empty the condensate container after every drying cycle.
- Pull out the container and pour out the collected water.
- Reinsert the container firmly.

5.3 Cleaning the Heat Exchanger/Condenser

For condenser dryers, the heat exchanger should be cleaned periodically (e.g., every few months or as indicated by the appliance). Refer to the detailed instructions in your full user manual for the specific procedure for model WP31G200IN.

5.4 Cleaning the Appliance Exterior

- Wipe the exterior with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting customer service, try the following solutions for common issues:

Problem	Possible Cause	Solution
Dryer does not start.	Power cord not plugged in; door not closed properly; program not selected; Start button not pressed.	Check power connection; ensure door is fully closed; select a program and press Start.
Laundry not drying properly.	Lint filter clogged; condensate container full; incorrect program selected; overloaded dryer.	Clean lint filter; empty condensate container; select appropriate program; reduce load size.
Excessive noise during operation.	Foreign objects in the drum; dryer not level.	Check drum for loose items; ensure dryer is on a level surface.
Water leaking from the dryer.	Condensate container not inserted correctly; drain hose (if connected) is loose or blocked.	Reinsert condensate container; check drain hose connection and for blockages.

If the problem persists after attempting these solutions, please contact SIEMENS customer service.

7. SPECIFICATIONS

Feature	Detail
Brand	SIEMENS
Model Number	WP31G200IN
Type	Fully Automatic Front Load Condenser Tumble Clothes Dryer
Capacity	8 Kilograms
Color	White
Dimensions (D x W x H)	61.3D x 59.8W x 84.2H Centimeters
Weight	41.8 Kilograms (41800 Grams)
Voltage	240 Volts
Drum Material	Stainless Steel
Special Features	Duo Tronic Sensors, Auto Dry Technology, 4 Drying Programs, Super40, Iron Dry, Cupboard Dry, Touch LED Display, Anti Crease, Hygiene Plus
Included Components	Fill Hose

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This SIEMENS dryer comes with a **2 Years Comprehensive Warranty**. Please retain your purchase receipt as proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal domestic use. It does not cover damage caused by improper installation, misuse, neglect, or unauthorized repairs.

8.2 Customer Support

For technical assistance, service requests, or warranty claims, please contact SIEMENS customer service. You can find contact details on the official SIEMENS website or in the documentation provided with your appliance.

Manufacturer: BSH Household Appliances Manufacturing Pvt. Ltd., Arena House, 2nd Floor Main Building, Plot No.103, Road No.12, MIDC, Andheri East, Mumbai 400093, SIEMENS

