

- Manuals.plus /
- > ASHATA /
 - > ASHATA 5.0 MP3 Player User Manual

ASHATA ASHATAy0kzud15io-22

ASHATA 5.0 MP3 Player User Manual

Model: ASHATAy0kzud15io-22

INTRODUCTION

Thank you for purchasing the ASHATA 5.0 MP3 Player. This portable HiFi music player is designed for an enhanced audio experience, featuring FM radio, voice recording, alarm clock, and e-book capabilities. Please read this manual carefully to ensure proper use and maintenance of your device.

SETUP

Initial Power On

To begin using your ASHATA 5.0 MP3 Player, simply take the product out of its packaging and press and hold the power button to turn it on.

Memory Card Installation (Optional)

The device supports memory cards up to 128GB (not included). Locate the memory card slot, typically on the side of the device, and gently insert the memory card until it clicks into place. Ensure the card is inserted in the correct orientation.

Charging the Device

Connect the provided USB cable to the player's charging port and the other end to a USB power adapter or a computer's USB port. A full charge typically takes 1 to 2 hours. The battery indicator on the screen will show charging status.

OPERATING INSTRUCTIONS

Basic Navigation

The ASHATA 5.0 MP3 Player features a 1.77-inch LCD screen and intuitive button controls. Use the directional buttons (up, down, left, right) to navigate through menus and the center button to select options. The 'M' button typically serves as a menu or back button, and 'VOL' controls volume.






Front view of the ASHATA 5.0 MP3 Player, showing the 1.77-inch LCD screen displaying "22:43 2022-08-18" and the central navigation buttons including 'M', play/pause, skip forward/backward, and 'VOL'.

Music Playback

The player supports APE, MP3, FLAC, WMA, WAV, and AAC LC formats. Navigate to the 'Music' menu, select your desired song or album, and press the center button to play. Use the skip buttons to change tracks and the volume button to adjust audio levels.

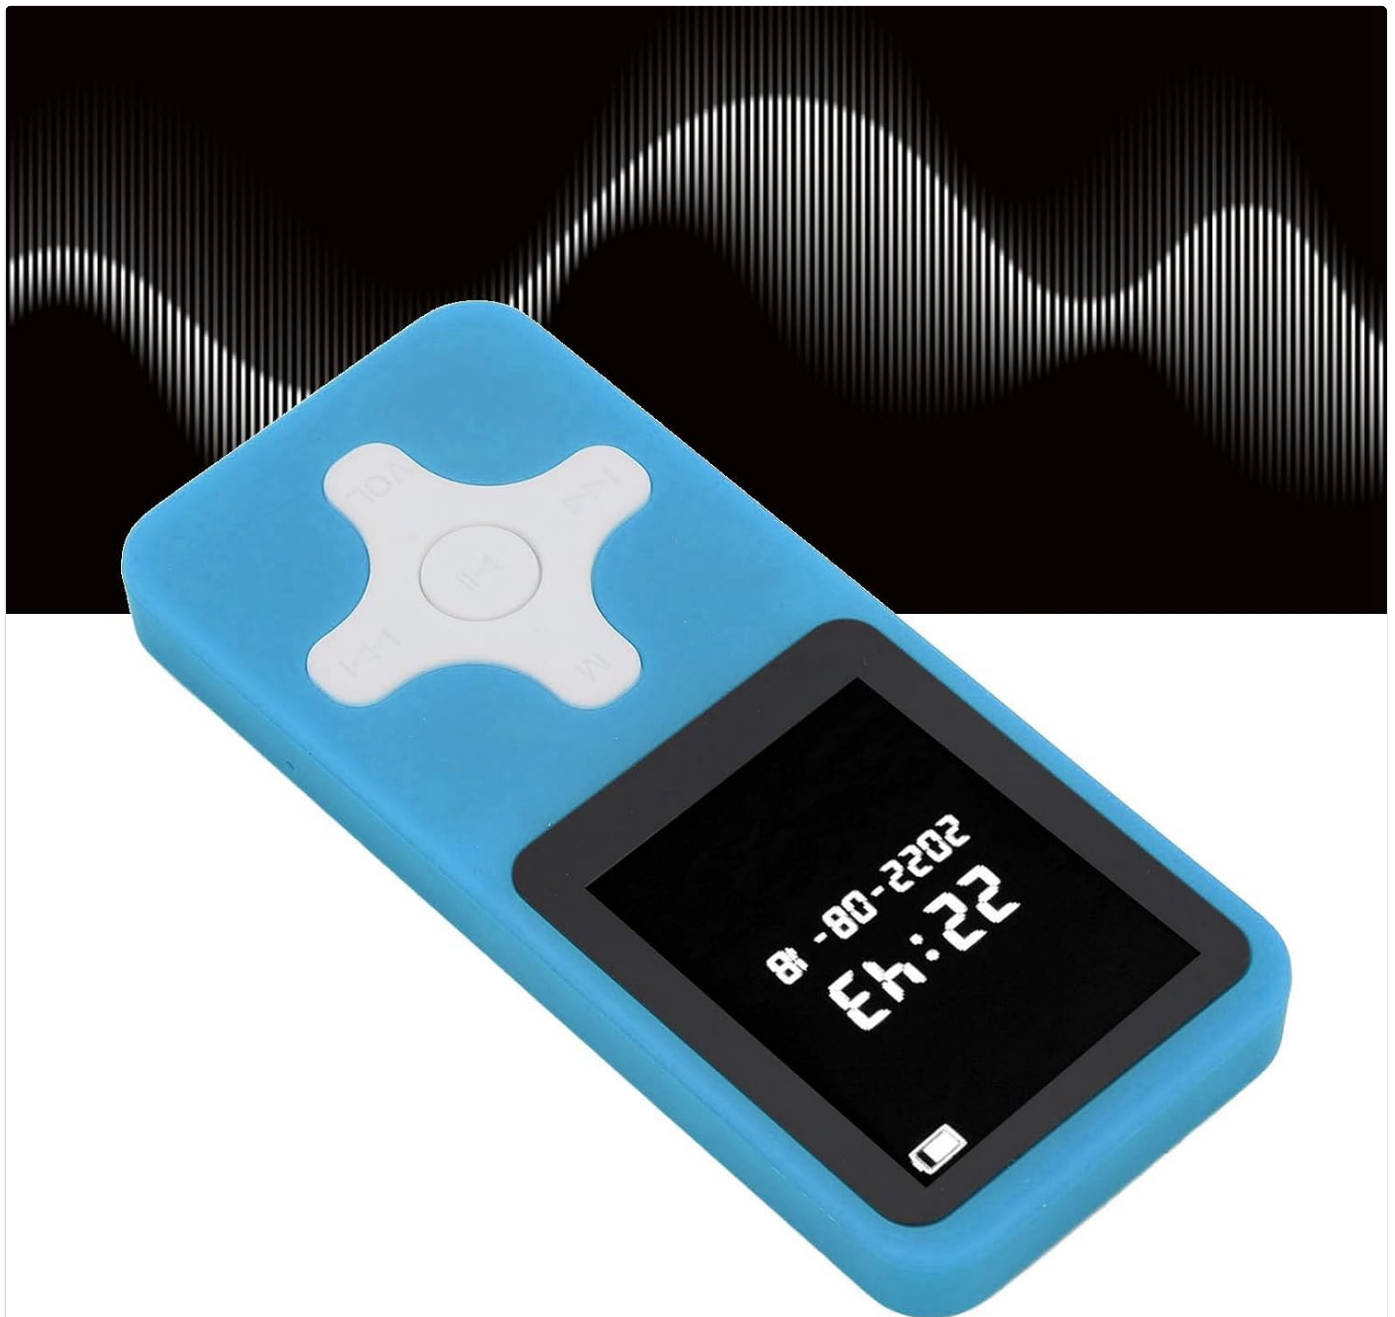

The ASHATA 5.0 MP3 Player displayed horizontally, with colorful musical notes in the background, illustrating its primary function as a music player.

FM Radio

To use the FM radio, ensure wired earphones (not included) are plugged into the device, as they act as an antenna. Navigate to the 'FM Radio' menu. You can then perform an automatic station search or manually tune to frequencies between 87.5 MHz and 108 MHz.



*Built in Recording Function
HIFI grade sound, clear
reproduction of vocals*

*Built in FM Radio
Listen to your favorite radio
stations
And plug in wired earphone
(not included) as an antenna
to search for more stations*

The ASHATA 5.0 MP3 Player shown alongside text highlighting its built-in recording function for HIFI grade sound and its FM radio capability, which requires wired earphones as an antenna.

Voice Recording

The device features a built-in recording function, supporting MP3 and WAV formats. Access the 'Recorder' menu to start, pause, and save recordings. The HIFI sound ensures clear reproduction of vocals.

Electronic Book (E-Book)

The player supports TXT format e-books. Transfer your TXT files to the device's memory or inserted memory card. Navigate to the 'E-Book' menu to browse and read your electronic books. Advanced features include recently read books, bookmarks, and auto browsing.

Image and Video Playback

View images in BMP and JPG formats through the 'Image Viewer'. For video playback, the device supports 128 x 160 AVI

format. Note that videos may need to be converted on a PC using a conversion tool before playback.



Support music player (APE, MP3, FLAC, WMA, WAV and AAC LC formats)

Support FM radio, sound recording, alarm clock, electronic book (TXT format), picture viewing (JPG, JPEG, BMP), video playback (128 x 160 AVI format)

Built in 5.0 Chip

Provides more stable connection and better compatibility

Easily connect your wireless headphone or speaker

Provides lossless sound quality

Support up to 128GB Memory Card (not included) expansion

The ASHATA 5.0 MP3 Player with an overlay of its multi-functional capabilities, including support for various music formats, FM radio, sound recording, alarm clock, e-books (TXT), image browsing (JPG, JPEG, BMP), and video playback (128x160 AVI format).

Alarm Clock

Set alarms through the 'Alarm Clock' menu. You can configure time, repeat settings, and alarm sound.

Bluetooth Connectivity

The player features a built-in Bluetooth 5.0 chip for stable connection and better compatibility. Navigate to the 'Bluetooth' settings to pair with your wireless headphones or speakers for lossless sound quality.


MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid using liquid cleaners or abrasive materials.

- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Avoid Impact:** Protect the device from drops and impacts, which can damage internal components or the screen.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery; System crash.	Charge the device for at least 10 minutes. If unresponsive, locate the 'RESET' pinhole (usually on the back or side) and gently press it with a thin object (like a paperclip) to reset the device.
Cannot hear sound.	Volume too low; Earphones not connected properly; Corrupt audio file.	Increase volume. Ensure earphones are fully plugged in. Try playing a different audio file.
FM Radio not working.	Earphones not connected; Weak signal.	Ensure wired earphones are plugged in as they act as an antenna. Try moving to an area with better signal reception.
Memory card not detected.	Card not inserted correctly; Incompatible card; Corrupt card.	Re-insert the memory card. Ensure it is formatted correctly (e.g., FAT32). Try a different memory card if available.

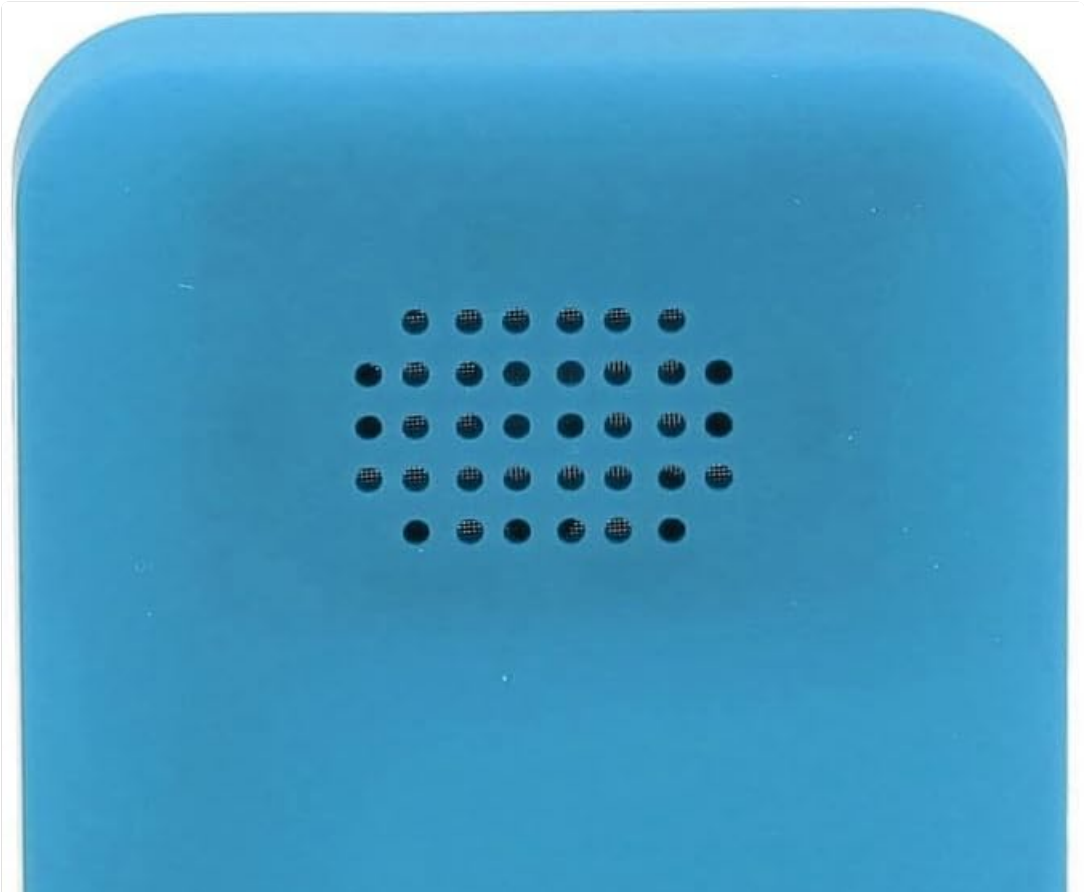



Back view of the ASHATA 5.0 MP3 Player, indicating the location of the 'RESET' pinhole, which can be used to restart the device in case of unresponsiveness.

SPECIFICATIONS

Material: ABS

Dimensions: Approx. 90.5 x 39.5 x 10mm / 3.6 x 1.6 x 0.4in (Product Dimensions: 5.12 x 2.76 x 1.57 inches)

Weight: 3 ounces

Battery: Built-in 250mAh Lithium Ion Battery

Screen: 1.77 Inch LCD

Bluetooth: V 5.0

Memory Card Support: Maximum 128GB (Not Included)

FM Receiving Frequency: 87.5 MHz - 108 MHz

Electronic Book Format: Supports TXT Format

Language Support: Supports 9 Languages

Recording Format: MP3, WAV

Music Playback Formats: APE, MP3, FLAC, WMA, WAV, AAC LC

Image Viewer Support: BMP, JPG Format Browsing

Video Format Support: MP4 Format (needs to be converted on PC), 128 x 160 AVI format

Speaker: Built-in

Manufacturer: ASHATA

Model Name: ASHATAy0kzud15io-22

Color: Blue

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official ASHATA website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact ASHATA customer service through their official channels.

© 2024 ASHATA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CS6T8YHD>

More documents and user manuals: <https://manuals.plus/>