

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Formovie](#) /
- › [Formovie Xming Page One Smart Projector \(Model XMM2101\) User Manual](#)

Formovie XMM2101

Formovie Xming Page One Smart Projector (Model XMM2101) User Manual

Comprehensive guide for setup, operation, and maintenance.

1. INTRODUCTION

Welcome to the user manual for your Formovie Xming Page One Smart Projector, Model XMM2101. This projector is designed to deliver a high-quality entertainment experience with its Full HD 1080P resolution, Google TV OS, certified Netflix integration, HDR10 support, and immersive Dolby Audio powered by Boston Acoustics. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance.



Image 1.1: The Xming Page One Smart Projector with its remote control.

2. WHAT'S IN THE BOX

Upon unboxing your Xming Page One Smart Projector, please verify that all the following items are included:

- Xming Page One Smart Projector
- Remote Control
- Adaptor
- Power Cord
- User Manual (this document)
- Warranty Card

Your browser does not support the video tag.

Video 2.1: A brief overview of the Xming Page One Smart Projector and its included accessories.

3. PRODUCT OVERVIEW

3.1 Key Features

- **Display Technology:** LCD
- **Native Resolution:** 1920 x 1080 Pixels (Full HD) with 3840 x 2160 (4K) display resolution support.
- **Brightness:** 500 CVIA lumens
- **Contrast Ratio:** 2000:1
- **Screen Size:** Adjustable from 40 to 120 inches.
- **Operating System:** Google TV OS with certified Netflix integration.
- **Audio:** Dolby Audio powered by Boston Acoustics, with built-in speakers.
- **Special Features:** Auto Focus, Automatic Keystone Correction, Automatic Obstacle Avoidance, Portable design.
- **Connectivity:** Bluetooth 5, Ethernet, HDMI, USB 3.0, Wi-Fi, 3.5mm Audio.



Image 3.1: Key display specifications of the Xming Page One Projector.

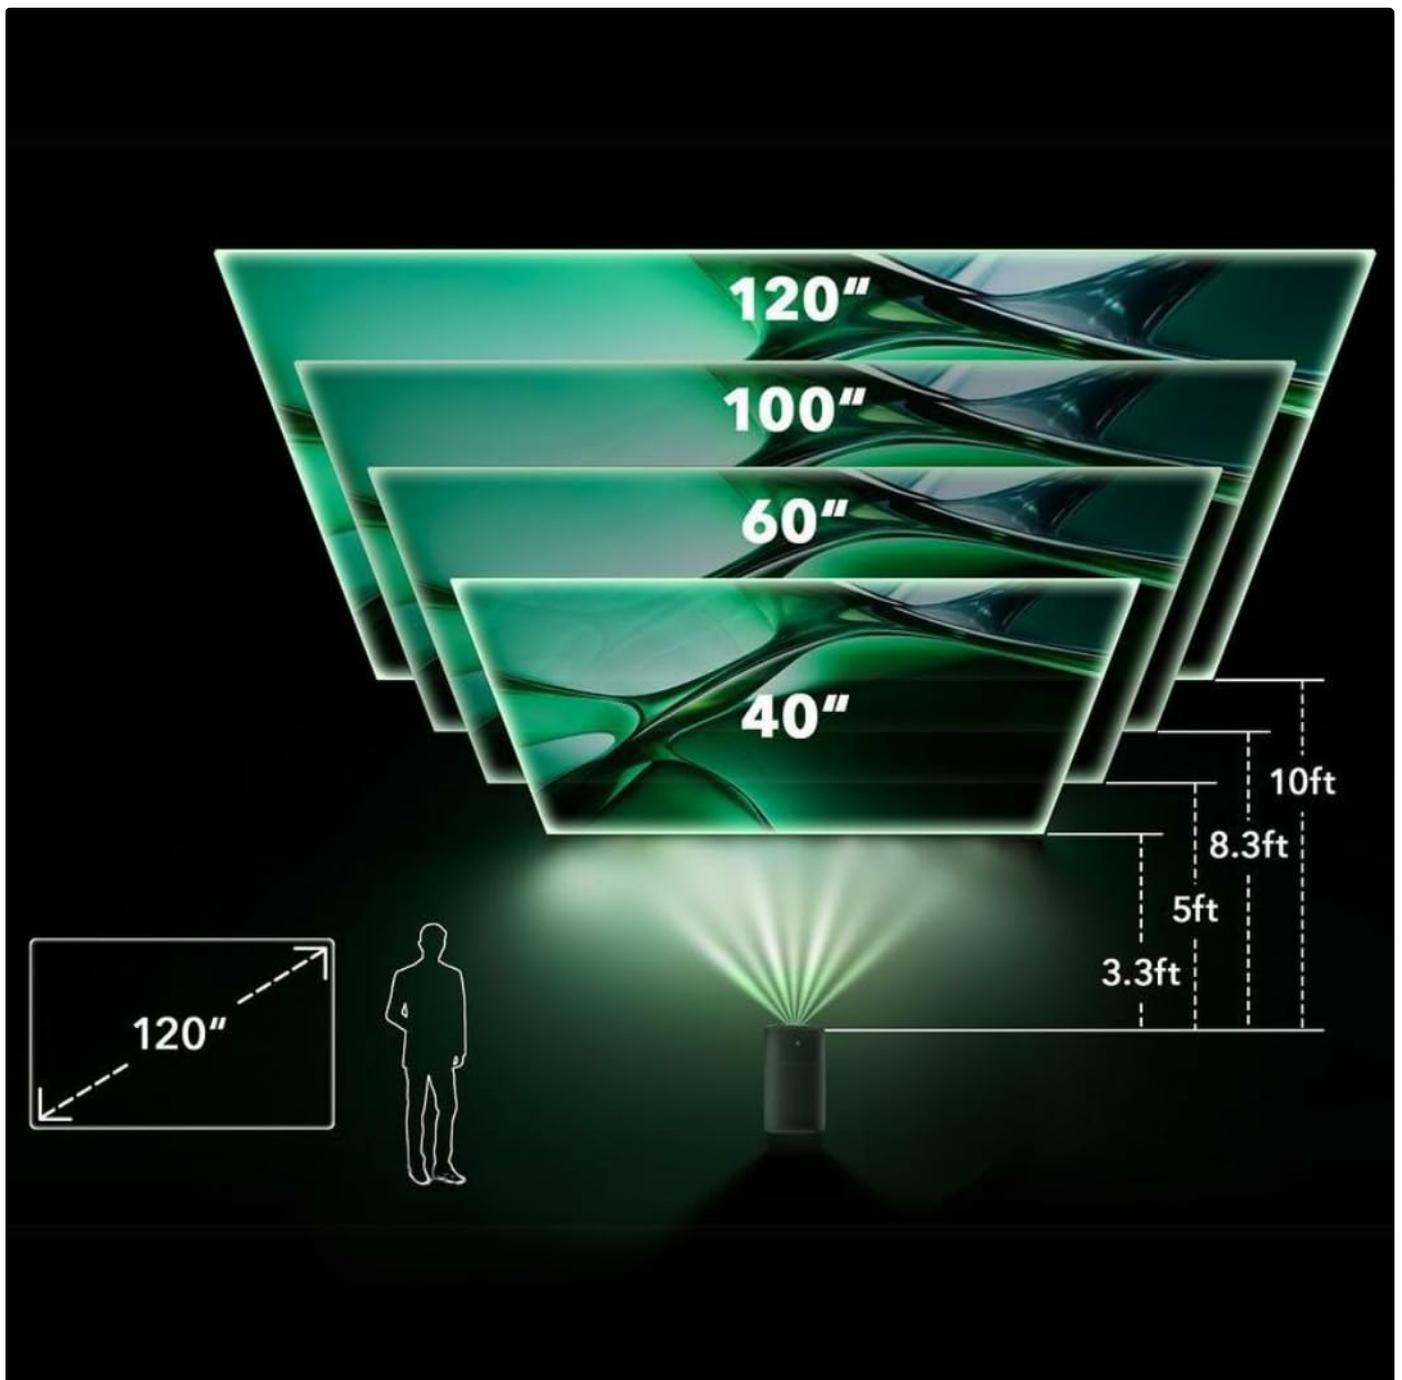


Image 3.2: The projector features Dolby Audio for enhanced sound quality.



Image 3.3: Internal components of the projector, highlighting the optical engine and cooling system.

3.2 Ports and Connections

The Xming Page One Projector offers various ports for connecting external devices:

- **HDMI:** For connecting Blu-ray players, gaming consoles, laptops, and other HDMI-enabled devices.
- **USB 3.0:** For connecting USB storage devices.
- **3.5mm Audio:** For connecting external headphones or speakers.
- **Ethernet:** For wired network connection.
- **Power Input:** For connecting the power adapter.

4. SETUP

4.1 Placement

Place the projector on a stable, flat surface. Ensure there is adequate ventilation around the device. For optimal viewing, position the projector directly in front of your projection surface (wall or screen). The projection distance will determine the screen size. Refer to the diagram below for approximate distances.

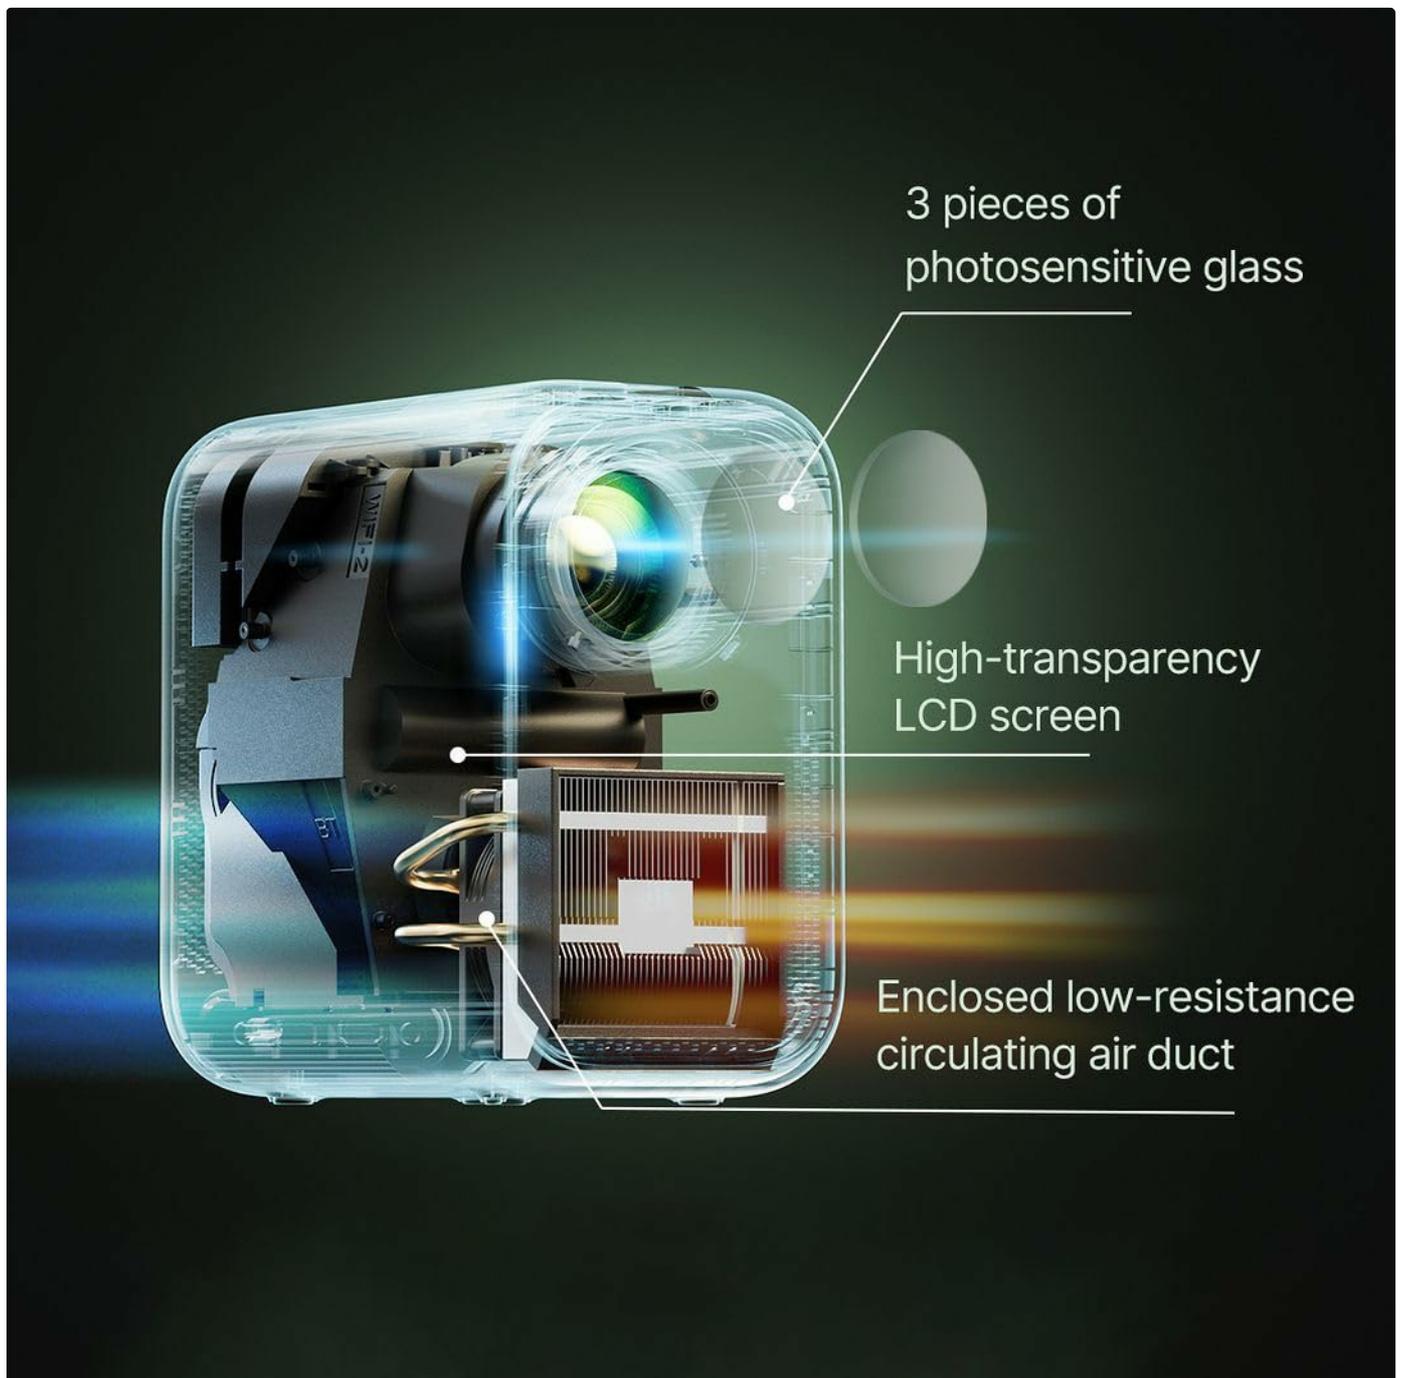


Image 4.1: Recommended projection distances for various screen sizes.

4.2 Power Connection

1. Connect the power cord to the adaptor.
2. Plug the adaptor into the power input port on the projector.
3. Plug the other end of the power cord into a wall outlet.

4.3 Initial Setup Wizard

Upon first power-on, the projector will guide you through an initial setup process for Google TV. Follow the on-screen instructions to:

- Pair the remote control.
- Connect to a Wi-Fi network.
- Log in with your Google account.
- Install essential apps, including Netflix.

The projector features automatic focus and keystone correction to ensure a clear and properly shaped image. It also includes automatic obstacle avoidance.

Your browser does not support the video tag.

Video 4.1: This video demonstrates the automatic keystone correction, auto focus, and obstacle avoidance features of the projector.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on, press the power button on the remote control or the projector.
- To power off, press and hold the power button on the remote control until the power options appear, then select "Power Off" or "Sleep". A short press usually puts the device into sleep mode.

5.2 Navigating Google TV

Use the directional pad and select button on the remote control to navigate the Google TV interface. The home screen provides access to your installed apps, recommended content, and settings.

5.3 Using Google Assistant

The remote control includes a dedicated button for Google Assistant. Press this button and speak your commands to search for content, control playback, or access information.

Your browser does not support the video tag.

Video 5.1: Demonstration of using Google Assistant for voice commands and content search.

5.4 Connecting External Devices

- **HDMI:** Connect your device to the HDMI port. The projector should automatically detect the input. If not, select the HDMI input from the source menu.
- **USB:** Insert a USB drive into the USB 3.0 port to access media files.
- **Bluetooth:** Pair Bluetooth headphones or speakers via the projector's settings menu.
- **Wi-Fi/Ethernet:** Ensure a stable internet connection for streaming services and updates.

5.5 Adjusting Settings

Access the settings menu from the Google TV home screen to customize picture, sound, network, and other device preferences.

6. MAINTENANCE

- **Lens Cleaning:** Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Avoid abrasive materials or harsh chemicals.
- **Body Cleaning:** Wipe the projector's exterior with a soft, dry cloth. Do not use liquid cleaners directly on the device.
- **Ventilation:** Ensure the projector's ventilation openings are clear of obstructions to prevent overheating.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No Power	Power cord not connected; power outlet issue.	Check power connections; try a different outlet.
No Image	Incorrect input source; device not connected.	Select correct input source; ensure HDMI/USB device is properly connected and powered on.
Blurry Image	Out of focus; incorrect keystone.	The projector has auto-focus and auto-keystone. If issues persist, check for obstructions or manually adjust if available in settings.
No Sound	Volume too low; external audio device not connected.	Increase volume; check external audio connections; ensure internal speakers are not muted.
Remote Not Responding	Low battery; remote not paired.	Replace remote batteries; re-pair the remote control (refer to initial setup).

8. SPECIFICATIONS

Feature	Detail
Brand	Formovie
Model	XMM2101
Display Technology	LCD
Native Resolution	1920 x 1080 Pixels (Full HD)
Display Resolution Support	3840 x 2160 (4K)
Image Brightness	500 CVIA Lumens
Image Contrast Ratio	2000:1
Aspect Ratio	16:9
Refresh Rate	60 Hz
Audio	Dolby Audio, Built-In Speaker
Special Features	Auto Focus, Built-In Speaker, Portable
Hardware Interface	3.5mm Audio, Bluetooth 5, HDMI, USB 3.0
Connectivity Technology	Bluetooth, Ethernet, HDMI, USB, Wi-Fi
Compatible Devices	Smartphones, Tablets, Laptops, Gaming Consoles, Streaming Devices, Blu-ray Players, Cable/Satellite Boxes
Product Dimensions	13.41 x 11.51 x 17.5 cm
Item Weight	2 kg
Voltage	100 Volts (AC)
Wattage	100 Watts

Feature	Detail
Noise Level	30 Decibels

9. WARRANTY AND SUPPORT

Your Formovie Xming Page One Smart Projector comes with a standard brand warranty. Please refer to the included Warranty Card for specific terms and conditions.

For technical support or service inquiries, please contact the authorized importer/packer:

Aytexcel Private Limited

12 Highland, Pali Hill, Bandra, Mumbai 400050

Email: hello@aytexcel.com

Contact: +91.9820022205

