

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Farberware](#) /

› [Farberware 0.9 Cu. Ft. Countertop Microwave Oven User Manual](#)

Farberware 0.9 Cu. Ft. White

Farberware 0.9 Cu. Ft. Countertop Microwave Oven User Manual

Model: 0.9 Cu. Ft. White

INTRODUCTION

Thank you for purchasing the Farberware 0.9 Cu. Ft. Countertop Microwave Oven. This manual provides important information for the proper installation, operation, and maintenance of your microwave oven. Please read it thoroughly before use and keep it for future reference.

This compact 900-watt white microwave oven is designed for convenience, featuring 6 one-touch cooking programs, 10 power levels, and a child safety lock. Its 0.9 cubic foot capacity makes it suitable for various kitchen sizes.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not heat liquids or other foods in closed containers since they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use this appliance for other than its intended use.
- Always ensure the turntable and roller ring are correctly positioned before operation.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
- To reduce the risk of fire in the oven cavity:
 - Do not overcook food.
 - Remove wire twist-ties from paper or plastic bags before placing bags in oven.
 - If materials inside the oven should ignite, keep oven door closed, turn oven off, and disconnect the power cord.

SETUP AND INSTALLATION

Unpacking

- Remove all packaging materials from inside the oven cavity.
- Inspect the oven for any damage, such as dents or a misaligned door. Do not operate if damaged.
- Ensure all components are present: microwave oven, glass turntable, and roller ring.

Placement

- Place the microwave oven on a flat, stable surface capable of supporting its weight (approximately 26.6 lbs).
- Ensure adequate ventilation. Maintain a minimum of 3 inches (7.5 cm) clearance from the rear and sides, and 12 inches (30 cm) above the oven.
- Keep the oven away from heat sources and strong magnetic fields.
- This model is designed for countertop use and fits standard 30-inch wide cabinets.

Get the Perfect Fit.

fits standard 30"
wide cabinets



Image: Farberware 0.9 Cu. Ft. Microwave Oven showing its dimensions (18.62" W x 10.7" H x 13.56" D) and indicating it fits standard 30-inch wide cabinets.

Electrical Requirements

- The oven requires a standard 120V, 60Hz AC outlet with a minimum 15A circuit.
- Do not use an extension cord. If the power cord is too short, have a qualified electrician install an outlet near the appliance.

OPERATING INSTRUCTIONS



Image: Close-up of the Farberware microwave control panel, highlighting features like defrost options, six auto-cook presets, intuitive control panel, one-touch start, and child safety lock.

Control Panel Overview

The control panel features a digital display, function buttons, number pad, and start/stop buttons.

- **Time Cook:** Manually set cooking time.
- **Time Defrost / Weight Defrost:** Options for defrosting food.

- **Power:** Adjust power levels (1-10).
- **Clock:** Set the current time.
- **Kitchen Timer:** Use as a standalone timer.
- **One-Touch Cook Programs:** Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, Dinner Plate.
- **Express Cook (1-6):** Start cooking immediately for 1 to 6 minutes at 100% power.
- **+30 Sec:** Add 30 seconds to cooking time or start quick cook.
- **STOP/CANCEL:** Stop cooking or clear settings.
- **START:** Begin cooking.
- **Memory:** Save and recall custom cooking settings.

Setting the Clock

1. Press the **CLOCK** button once.
2. Use the number pad to enter the current time (e.g., 12:30 for 12:30 PM).
3. Press the **CLOCK** button again to confirm.

Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door securely.
3. **Manual Cooking:**
 - Press **TIME COOK**.
 - Enter desired cooking time using the number pad.
 - Press **POWER**, then enter a power level (1-10) using the number pad (10 is 100% power).
 - Press **START**.
4. **Express Cooking:**
 - Press any number from **1** to **6** for instant cooking at 100% power for that many minutes.
 - Alternatively, press **+30 SEC** to start cooking for 30 seconds at 100% power. Press repeatedly to add 30-second increments.
5. **One-Touch Cook Programs:**
 - Press the desired program button (e.g., **POPCORN**, **POTATO**). The oven will automatically set the appropriate cooking time and power level.
 - Press **START**.

Defrosting

The microwave offers two defrost options: Time Defrost and Weight Defrost.

- **Time Defrost:**
 1. Press **TIME DEFROST**.
 2. Enter the desired defrosting time using the number pad.
 3. Press **START**.
- **Weight Defrost:**
 1. Press **WEIGHT DEFROST**.
 2. Enter the food weight in ounces using the number pad.
 3. Press **START**.

Child Safety Lock

To prevent unsupervised operation, especially by children, activate the child safety lock.

- **To Activate:** Press and hold the **STOP/CANCEL** button for 3 seconds. A lock indicator will appear on the display.
- **To Deactivate:** Press and hold the **STOP/CANCEL** button for 3 seconds again. The lock indicator will disappear.


MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

- **Exterior:** Wipe the exterior with a damp cloth and mild soap. Dry thoroughly.
- **Interior:** For spills and splatters, wipe the interior with a damp cloth immediately. For stubborn stains, place a bowl of water with lemon slices inside and microwave for 2-3 minutes. The steam will loosen food particles, making them easier to wipe away.
- **Turntable and Roller Ring:** These can be removed and washed in warm, soapy water or in the dishwasher. Ensure they are completely dry before returning them to the oven.
- **Door Seals:** Keep the door seals clean to ensure proper closure and efficient operation.
- Do not use abrasive cleaners, steel wool, or harsh chemicals on any part of the microwave.

Easy, Clean, Convenient.

easy-to-clean interior is perfect for the home and office

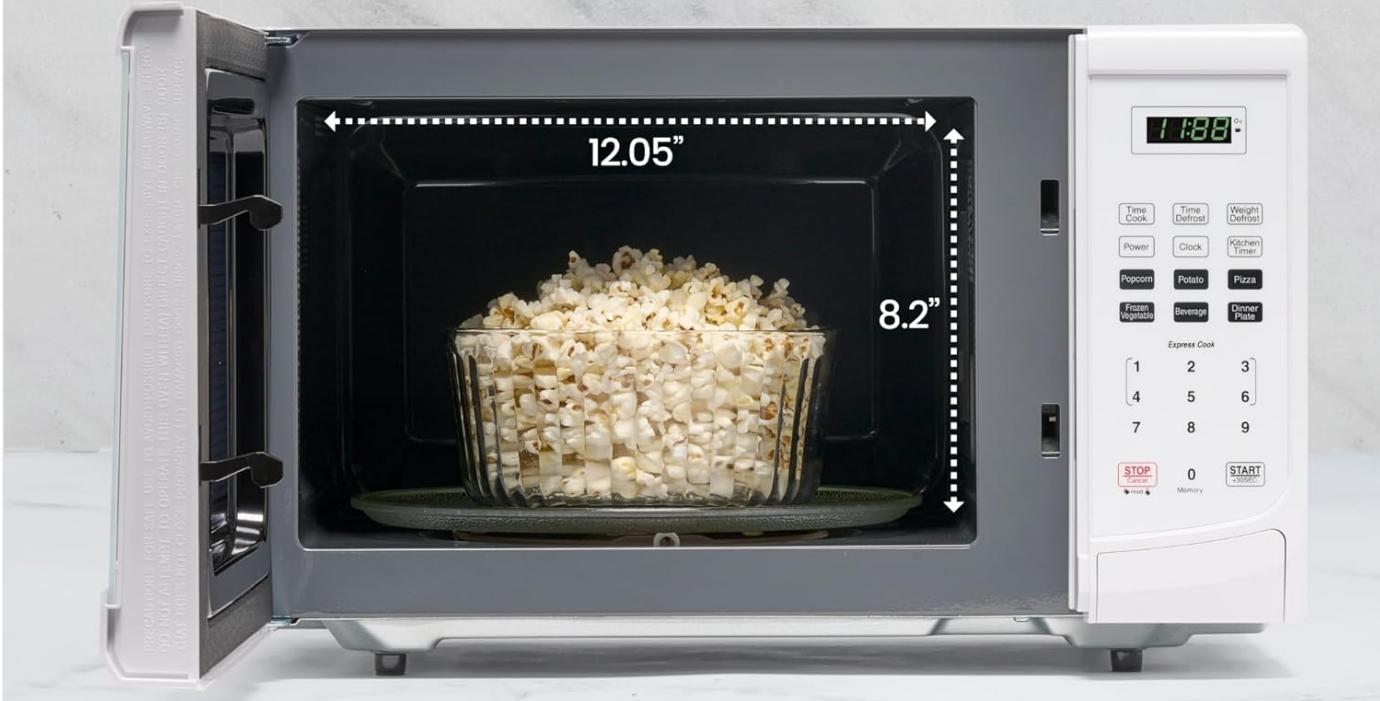

FARBERWARE

Image: The interior of the Farberware microwave oven, showing a bowl of popcorn on the turntable and interior dimensions (12.05" W x 8.2" H), illustrating its easy-to-clean design.

TROUBLESHOOTING GUIDE

If you encounter issues with your microwave oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven will not start	Door not closed properly. Plug not inserted firmly into outlet. Fuse blown or circuit breaker tripped. Child safety lock is active.	Close the door securely. Unplug and re-plug the unit. Replace fuse or reset circuit breaker. Deactivate child safety lock (hold STOP/CANCEL for 3 seconds).

Problem	Possible Cause	Solution
Food not heating	Incorrect cooking time or power level set. Door not closed properly.	Adjust cooking time and power level. Ensure door is securely closed.
Turntable not rotating	Turntable or roller ring not positioned correctly. Food too large or heavy, obstructing rotation.	Re-position turntable and roller ring. Use a smaller dish or ensure food does not obstruct rotation.
Sparking or arcing inside oven	Metal or foil in the oven. Food residue on oven walls.	Remove all metal objects. Use only microwave-safe dishes. Clean the oven interior thoroughly.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model	0.9 Cu. Ft. White
Capacity	0.9 Cubic Feet
Output Power	900 Watts
Power Levels	10
Voltage	120V ~ 60Hz
Product Dimensions (W x D x H)	19.1" x 15.4" x 11.5"
Item Weight	26.6 pounds
Color	White
Special Features	Child Safety Lock, 6 One-Touch Cook Programs, Memory Function, LED Display
Installation Type	Countertop
Manufacturer	Nostalgia Inc

Simple. Powerful.



0.9 cu.ft



10 power
levels



900 W



Image: Farberware 0.9 Cu. Ft. Microwave Oven highlighting its key specifications: 0.9 cubic feet capacity, 10 power levels, and 900 watts of power.

WARRANTY INFORMATION

Specific warranty details are typically provided with your product packaging or on the manufacturer's official website. Please refer to the documentation included with your purchase for comprehensive warranty coverage and terms. Generally, Farberware products come with a limited warranty covering defects in material and workmanship under normal household use. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries, please contact Farberware customer service.


- **Manufacturer:** Nostalgia Inc
- Refer to your product packaging or the official Farberware website for the most current contact information, including

phone numbers and email support.

When contacting support, please have your product model number (0.9 Cu. Ft. White) and purchase date available.

© 2024 Farberware. All rights reserved.

Related Documents - 0.9 Cu. Ft. White

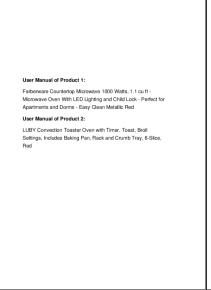	<p>Farberware FMO11AHTBKO Microwave Oven User Manual & Safety Guide</p> <p>Comprehensive user manual for the Farberware FMO11AHTBKO countertop microwave oven. Includes safety instructions, operating procedures, maintenance tips, and warranty information for this 1000-watt appliance.</p>
	<p>Farberware 0.7 Cu. Ft. Microwave Oven FMG07BLK Instruction Manual</p> <p>Comprehensive instruction manual for the Farberware 0.7 Cu. Ft. Microwave Oven (Model FMG07BLK). Covers safety precautions, operation, features, cleaning, maintenance, and warranty information.</p>
	<p>Farberware FMO11WEIWH Microwave Oven Instruction Manual</p> <p>Comprehensive instruction manual for the Farberware FMO11WEIWH microwave oven. Includes safety precautions, specifications, operating instructions, cleaning tips, maintenance, and warranty information.</p>
	<p>Farberware FMR17BLK Microwave Oven Instruction Manual</p> <p>This instruction manual provides essential safety precautions, operating instructions, maintenance tips, and warranty information for the Farberware FMR17BLK microwave oven.</p>
	<p>Farberware Professional 5-Liter Complete Portable Countertop Dishwasher Use and Care Manual</p> <p>This manual provides important safety information, operating instructions, and troubleshooting tips for the Farberware Professional 5-Liter Complete Portable Countertop Dishwasher. Learn how to load, operate, and maintain your dishwasher for optimal performance.</p>

FARBERWARE®

[**Farberware FCD06ASWWHC Countertop Dishwasher Instruction Manual**](#)

Your guide to the Farberware FCD06ASWWHC Professional 6-Piece Countertop Dishwasher. This manual provides essential safety, installation, operation, and maintenance instructions for optimal performance and care of your appliance.