

Highyes A10

Highyes Electric Spin Scrubber User Manual

Model: A10

Brand: Highyes

1. INTRODUCTION

Thank you for choosing the Highyes Electric Spin Scrubber. This cordless power cleaning tool is designed to simplify your cleaning tasks across various surfaces, including tiles, bathtubs, showers, and kitchen sinks. Its powerful motor and versatile brush heads provide an efficient and ergonomic cleaning experience, reducing physical strain.

Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

2. PRODUCT OVERVIEW

2.1 Included Components

- Electric Spin Scrubber Main Body
- Telescopic Handle
- 7 Replacement Brushes (Big Flat Brush, Corner Brush, Small Flat Brush, Sponge Brush, Cloth Brush, Wool-like Brush, Scouring Pad)
- Brush Head Holder
- Charging Cable
- Adhesive Hook
- User Manual



Figure 2.1: All components included in the package.


2.2 Key Features

- **Cordless and Portable:** Battery-operated and rechargeable design for maximum maneuverability.
- **Advanced Cleaning Technology:** Motorized, spinning, and rotating brushes save time and energy.
- **Ergonomic Design:** Features a long handheld grip that is extendable, reducing the need for bending and reaching.
- **Durable and Robust:** Built for demanding cleaning tasks, suitable for both daily cleanups and intense scrubbing.
- **Versatile Use:** Effective on tiles, windows, bathtubs, toilets, kitchen sinks, and doors.
- **IPX7 Waterproof Rating:** The brush head is designed to be waterproof for safe use in wet environments. *Note: Do not immerse the scrubber head and handle parts in water.*
- **Long Battery Life:** Equipped with a 2500mAh battery, providing up to 90 minutes of working time on a 3-hour charge.
- **Two Speed Options:** Offers 350 RPM for daily cleaning and 420 RPM for deep cleaning.
- **7 Different Brush Heads:** Specialized brushes for various cleaning needs and surfaces.



Figure 2.2: The Electric Spin Scrubber with its interchangeable brush heads and extendable handle.

Long Battery Working Time

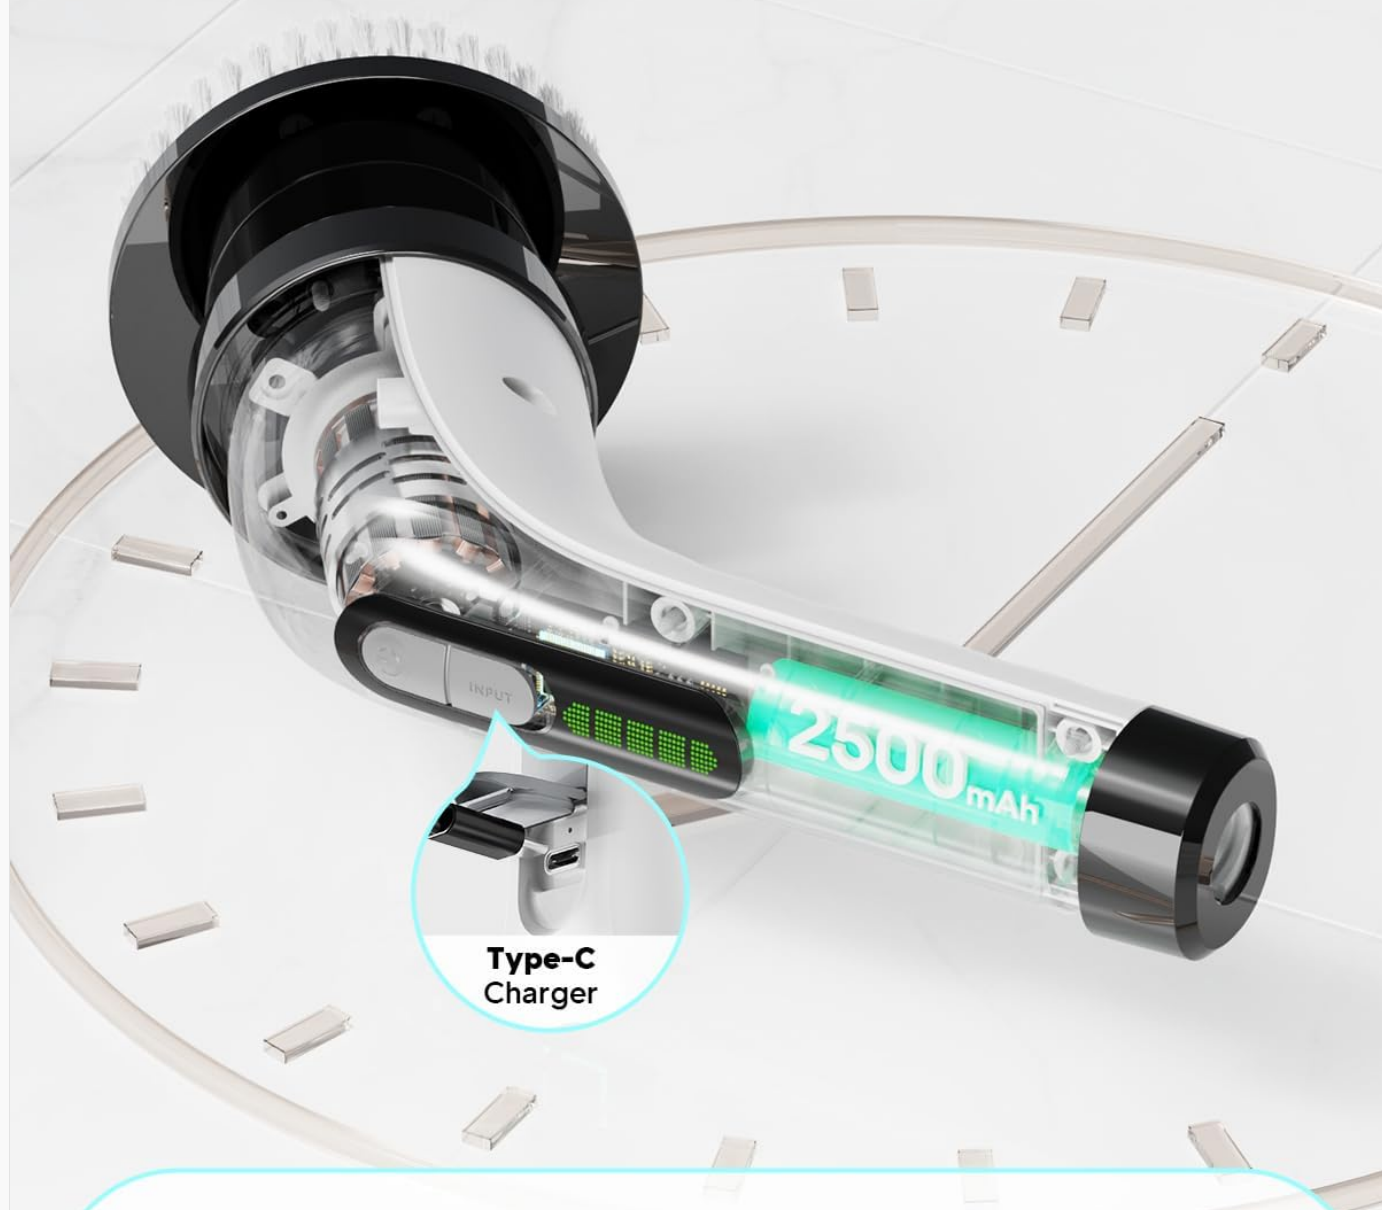

2500 mAh
Battery capacity

90 mins
Working time

3-hour
Charging time

Figure 2.3: Battery specifications and working time.

Customizable Length

for Versatile Cleaning



Figure 2.4: Adjustable handle lengths for versatile cleaning.

Two Speed Options

Low speed for general cleaning
High speed for heavy duty



350RPM
Dally Cleaning



420RPM
Deep Cleaning



Figure 2.5: Two speed options for different cleaning intensities.

7 Different Brush Heads



Big Flat Brush

Corner Brush

Small Flat Brush



Sponge Brush

Cloth Brush

Wool-like Brush

Big Flat Brush

Figure 2.6: Overview of the 7 different brush heads.

IPX7

Waterproof



Warning: Don't immerse the scrubber head and handle parts in water!

Figure 2.7: IPX7 Waterproof rating for the brush head.

3. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the main body (handle and motor unit) in water. Only the brush head is designed to be waterproof.
- Keep the appliance away from children and pets.
- Use only the provided charging cable for recharging.
- Do not operate the scrubber if it is damaged or malfunctioning.

- Ensure the brush head is securely attached before operation.
- Avoid using abrasive cleaners or harsh chemicals that may damage the scrubber or surfaces.
- Store the scrubber in a dry place when not in use.

4. SETUP

4.1 Initial Charging

1. Before first use, fully charge the Electric Spin Scrubber.
2. Connect the charging cable to the charging port on the scrubber's handle.
3. Plug the other end of the charging cable into a suitable USB power adapter (not included) or a USB port.
4. The indicator lights on the handle will show the charging status. A full charge typically takes about 3 hours.

4.2 Assembly

1. **Attaching the Handle:** Align the telescopic handle with the main body of the scrubber and twist clockwise until it locks securely. You can adjust the length of the telescopic handle by twisting the locking mechanism, extending it to your desired length (12, 43, or 54 inches), and then twisting to lock it in place.
2. **Attaching Brush Heads:** Select the appropriate brush head for your cleaning task. Align the brush head with the rotating base of the scrubber and press firmly until it clicks into place. To remove, pull the brush head off.

Detachable & Adjustable Handle



Figure 4.1: Detachable and adjustable handle assembly.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Speed Control

- To turn on the scrubber, press the power button on the handle. It will start at the default speed.
- To switch between the two speeds (350 RPM and 420 RPM), press the speed control button.

- To turn off the scrubber, press the power button again.

5.2 Using Different Brush Heads

- **Big Flat Brush:** Ideal for large flat surfaces like floors, tile walls, and pools.
- **Small Flat Brush:** Suitable for smaller flat areas such as cabinets, sinks, and cooktops.
- **Corner Brush:** Designed for cleaning grout lines, corners, and tight crevices.
- **Sponge Brush:** Gentle cleaning for delicate surfaces.
- **Cloth Brush:** For polishing and light cleaning.
- **Wool-like Brush:** For polishing and gentle scrubbing.
- **Scouring Pad:** For tougher stains and grime on durable surfaces.



Figure 5.1: Large brush in action on a floor.



Figure 5.2: Small flat brush cleaning a window sill.



Figure 5.3: Corner brush cleaning a car wheel.



Figure 5.4: Usage examples for cloth, scouring, sponge, and wool-like brushes.

6. MAINTENANCE

6.1 Cleaning the Scrubber

- After each use, remove the brush head and rinse it thoroughly under running water.
- Wipe the main body and handle with a damp cloth. Do not submerge the main body in water.
- Ensure all parts are dry before storing.

6.2 Charging and Storage

- Recharge the scrubber when the battery indicator shows low power.
- Store the scrubber in a cool, dry place, away from direct sunlight and extreme temperatures.
- Use the provided adhesive hook to hang the scrubber for convenient storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Scrubber does not turn on.	Battery is depleted.	Charge the scrubber fully.
Weak scrubbing power.	Low battery.	Recharge the scrubber.
Brush head not spinning correctly.	Brush head not securely attached.	Ensure the brush head is firmly clicked into place.
Unusual noise during operation.	Debris caught in the brush or motor.	Turn off the scrubber, remove the brush head, and check for any obstructions.

8. SPECIFICATIONS

Feature	Detail
Brand	Highyes
Model Number	A10
Color	Black&white
Product Dimensions	16"L x 4"W x 12"H (compact)
Material	Stainless Steel (handle)
Special Features	Cordless, Extendable, Long Handle
Battery Type	1 Lithium Ion battery (included)
Battery Capacity	2500mAh
Working Time	Up to 90 minutes
Charging Time	Approx. 3 hours
Rotation Speed	350 RPM (Daily), 420 RPM (Deep)
Waterproof Rating	IPX7 (brush head only)
Item Weight	2 Pounds

9. WARRANTY AND SUPPORT

Highyes products are manufactured to high-quality standards. For any warranty claims, technical support, or product inquiries, please refer to the contact information provided with your purchase or visit the official Highyes store on Amazon. For additional support, you may also refer to the digital user guide available at [Highyes User Guide \(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question