

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Beyblade](#) /

› [Beyblade X Xtreme Battle Set Instruction Manual](#)

Beyblade F9588

Beyblade X Xtreme Battle Set Instruction Manual

Model: F9588

INTRODUCTION

Welcome to the world of Beyblade X! This instruction manual provides essential information for setting up, operating, and maintaining your Beyblade X Xtreme Battle Set. This set includes the Xtreme Beystadium, two Beyblade X right-spin tops (Dagger Dran 4-60R Attack Type and Tusk Mammoth 3-60T Balance Type), and two launchers. Prepare for intense battles and master the X-Celerator Gear System for ultimate performance.

SAFETY INFORMATION

WARNING: Small parts may be generated. Not for children under 3 years.

Always use the Beyblade X Beystadium on a flat, stable surface. Do not lean over the stadium when tops are in play. Tops may bounce up and hit the eye or face. Adult supervision is recommended.

WHAT'S IN THE BOX

Your Beyblade X Xtreme Battle Set includes the following components:

- 1 x Xtreme Battle Set Beystadium
- 2 x Beyblade X Tops (Dagger Dran 4-60R Attack Type and Tusk Mammoth 3-60T Balance Type)
- 2 x Beyblade X Launchers with ripcords



Figure 1: All components included in the Beyblade X Xtreme Battle Set.

SETUP

1. Assembling the Beystadium

The Xtreme Beystadium comes mostly pre-assembled. Ensure the clear plastic cover is securely attached to the base. The Beystadium features an X-Celerator Rail, a green track around the perimeter, which is integral to gameplay.



Figure 2: The Xtreme Beystadium with its X-Celerator Rail.

2. Assembling Beyblade X Tops

Each Beyblade X top consists of three easy-to-assemble pieces: the blade, the ratchet, and the bit.

1. Take the blade (the top, decorative part).
2. Attach the ratchet (the middle, gear-like part) to the blade with a quick twist until it clicks.
3. Attach the bit (the bottom, spinning tip) to the assembled blade and ratchet, twisting until it clicks securely.

The tops included are Dagger Dran 4-60R (Attack Type) and Tusk Mammoth 3-60T (Balance Type). These parts are interchangeable with other Beyblade X tops (sold separately) to customize your battle strategy.



Figure 3: Beyblade X top components before assembly.

3. Preparing the Launchers

The set includes two launchers with ripcords. Insert the ripcord into the launcher until it clicks into place. Attach your assembled Beyblade X top to the launcher by aligning the grooves and twisting until it locks.

OPERATING INSTRUCTIONS

1. Launching Your Beyblade

Hold the launcher firmly with one hand and the ripcord with the other. Aim your Beyblade X top into the Beystadium. Pull the ripcord swiftly and forcefully to launch your top into battle.

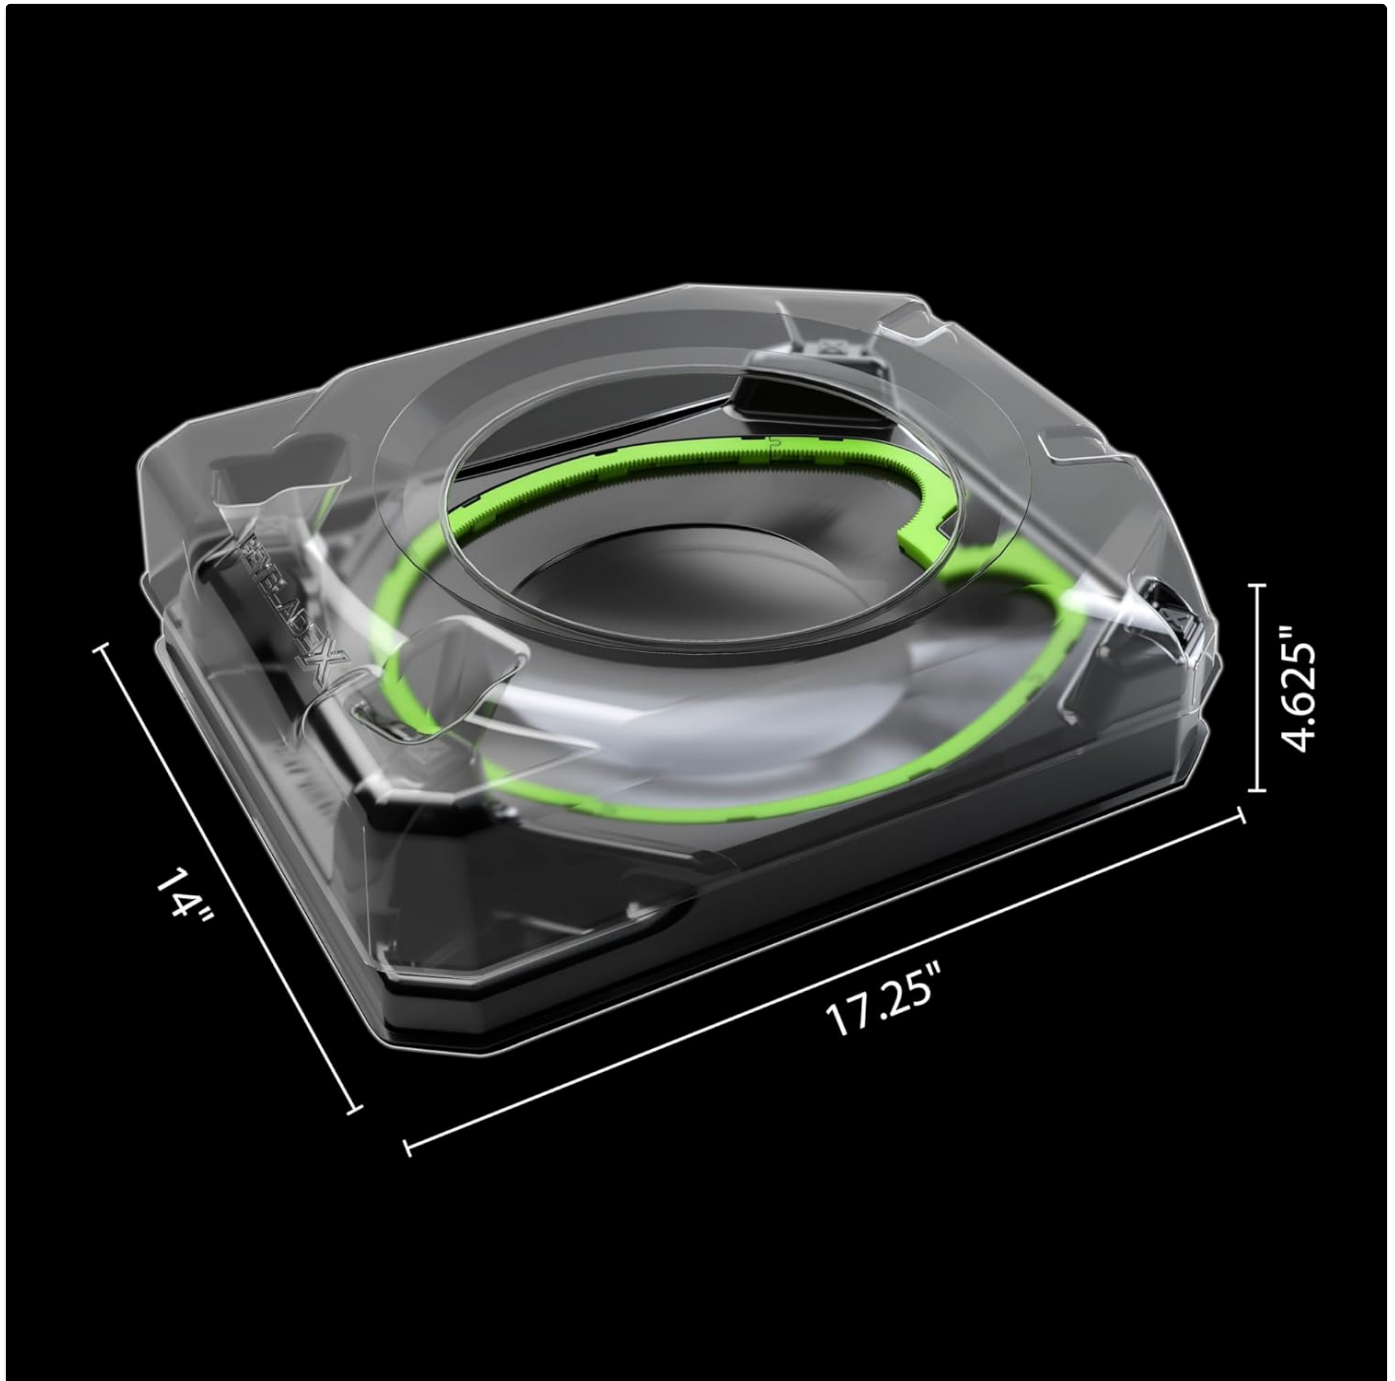


Figure 4: Proper launching technique into the Beystadium.

2. The X-Celerator Rail System

The Beyblade X Xtreme Battle Set features the innovative X-Celerator Gear System. When the gear on your top's bit engages with the X-Celerator Rail in the stadium, it can super-accelerate, performing an "Xtreme Dash." This propels the top around the arena at high speeds, leading to powerful collisions.



Figure 5: Beyblade X top engaging the X-Celerator Rail for an Xtreme Dash.

3. Scoring Points

Points are scored in a Beyblade X battle based on how your opponent's top is defeated. The first player to reach 4 points wins the battle.

- **1 Point:** Opponent's top stops spinning.
- **2 Points:** Opponent's top is knocked out of the stadium.
- **2 Points:** Opponent's top bursts (disassembles) during battle.
- **3 Points:** Opponent's top is knocked into the Xtreme Finish pocket.



Figure 6: Beyblade X scoring system.

MAINTENANCE

To ensure the longevity of your Beyblade X Xtreme Battle Set, follow these simple maintenance guidelines:

- **Cleaning:** Wipe down the Beystadium and tops with a dry or slightly damp cloth after use. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store all components in a cool, dry place away from direct sunlight and extreme temperatures. Keep tops disassembled or loosely assembled to prevent stress on parts during storage.
- **Inspection:** Periodically inspect tops and launchers for any signs of wear or damage. Replace any broken or worn parts to maintain optimal performance and safety.

TROUBLESHOOTING

If you encounter any issues with your Beyblade X Xtreme Battle Set, refer to the following common troubleshooting tips:

- **Top not spinning properly:**
 - Ensure the top is fully assembled with all three parts (blade, ratchet, bit) securely clicked into place.

- Check that the top is correctly attached to the launcher before pulling the ripcord.
- Pull the ripcord with sufficient force and a smooth motion.

- **Top not engaging X-Celerator Rail:**

- Confirm that the top is a Beyblade X series top, as the X-Celerator system is unique to this series.
- Ensure the stadium surface is clean and free of debris that might obstruct the rail.
- Practice launching to ensure the top enters the stadium with enough speed and angle to engage the rail.

- **Launcher issues:**

- Verify the ripcord is fully inserted into the launcher.
- Check for any obstructions or damage to the launcher mechanism.

If problems persist, please contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	17.75 x 17.75 x 14.5 inches
Item Weight	2.59 pounds
Model Number	F9588
Manufacturer Recommended Age	8 years and up
Release Date	June 1, 2024
Manufacturer	Hasbro

DIGITAL INTEGRATION: BEYBLADE X APP

Enhance your Beyblade X experience by connecting with the official Beyblade X app. Scan the code on your Beyblade X toy top to unlock it in the app and engage in virtual battles with other Bladers worldwide. The app provides an additional layer of competitive play and community interaction.



Figure 7: Connect your Beyblade X tops to the official app.

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the manufacturer's official

website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Manufacturer: [Hasbro](#)

