

[Manuals.plus](#) /

› [VINABTY](#) /

› VINABTY Replacement Remote Control EUR7711060 for Panasonic CD HIFI Audio System User Manual

VINABTY EUR7711060

VINABTY Replacement Remote Control EUR7711060

For Panasonic CD HIFI Audio Systems (Models: SAPM28, SC-PM28, SA-PM28)

INTRODUCTION

This manual provides instructions for the VINABTY EUR7711060 replacement remote control. This remote is designed to function as a direct replacement for the original remote control of compatible Panasonic CD HIFI Audio Systems. No programming or setup is required; simply install batteries to begin operation.

1. SETUP

1.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 1: Open battery compartment showing battery orientation.

1.2 Compatibility

This remote control is compatible with the following Panasonic CD HIFI Audio System models:

- EUR7711060
- SAPM28
- SC-PM28
- SA-PM28

No additional programming or pairing is required for these models. The remote is ready for use once batteries are installed.

2. OPERATING INSTRUCTIONS

The VINABTY EUR7711060 remote control provides full functionality for your compatible Panasonic CD HIFI Audio System. Below is an overview of the remote's layout and common button functions.





Figure 2: Front view of the remote control with button layout.

2.1 Button Functions

Button	Function
POWER (Red Button)	Turns the audio system on or off.
DISC	Selects the CD function.
PROGRAM	Used for programming CD tracks.
PLAY MODE	Changes the playback mode (e.g., normal, random, repeat).
REPEAT	Repeats the current track or entire disc.
DEL	Deletes programmed tracks.
Numeric Buttons (0-9, ≥10)	Direct selection of tracks or radio presets.
CD / II	Play/Pause for CD playback.
CLEAR	Clears entries or selections.
TAPE	Selects the Tape function.
TUNER / BAND	Selects the Tuner function and changes radio bands (FM/AM).
AUX	Selects the Auxiliary input.
VOL - / VOL +	Decreases or increases the volume level.
<< (V/REW) / >> (/ ^ FF)	Rewind / Fast Forward.
 << (ALBUM) / >> (TITLE)	Skips to previous/next track or album.
INTRO	Plays the introduction of each track.
MARKER	Marks specific points during playback.
SEARCH	Initiates search function.

Button	Function
ENTER	Confirms selections.
SOUND	Accesses sound settings.
MUTING	Mutes or unmutes the audio output.
SHIFT	Activates secondary functions of certain buttons.
RE-MASTER	Activates audio re-mastering feature.
S.SOUND EQ	Activates sound equalizer settings.
AUTO OFF	Sets the automatic power off timer.
SLEEP	Sets the sleep timer.
CLOCK / TIMER	Accesses clock and timer settings.
DISPLAY	Changes display information or brightness.
PLAY / REC	Initiates playback or recording (if supported by the audio system).
DIMMER	Adjusts the display dimmer.

3. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or solvents.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it becomes unresponsive. Always replace both batteries simultaneously with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place away from direct sunlight.

4. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common solutions:

- **Remote not responding:**
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the audio system's infrared receiver.
 - Verify that the remote is pointed directly at the audio system.
- **Limited operating range:**
 - Replace the batteries. Low battery power can reduce the effective range.
 - Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the infrared signal.
- **Specific buttons not working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
 - Ensure the audio system is in the correct mode for the button's function (e.g., CD mode for CD controls).

5. SPECIFICATIONS

Feature	Detail
Model Number	EUR7711060
Brand	VINABTY
Compatible Models	Panasonic EUR7711060, SAPM28, SC-PM28, SA-PM28
Connectivity Technology	Infrared (IR)
Maximum Range	Approximately 10 meters (33 feet)
Material	ABS
Color	White/Grey (as pictured)
Battery Type	2 x AAA (not included)
Number of Buttons	Multiple (refer to Figure 2 for layout)

6. WARRANTY AND SUPPORT

For any questions or issues regarding your VINABTY remote control, please contact the seller directly. They are committed to providing a satisfactory response within 24 hours.

Please refer to your purchase documentation for specific warranty details, if applicable.