

CHEFREE AF300

CHEFREE AF300 Air Fryer User Manual

Model: AF300 | Brand: CHEFREE

INTRODUCTION

Thank you for choosing the CHEFREE AF300 Air Fryer. This 2-liter, 4-in-1 multi-cooker is designed for efficient, oil-free cooking, offering a healthier alternative to traditional frying. Its compact design and user-friendly digital touch screen make it a convenient addition to any kitchen. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure you get the most out of your appliance.



Image: Front view of the CHEFREE AF300 Air Fryer, showcasing its sleek dark green design and intuitive digital control panel.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the basket is properly inserted before operating.
- The appliance is equipped with heat-resistant ergonomic handles and automatic shut-off protection when the basket is removed.

PRODUCT COMPONENTS

The CHEFREE AF300 Air Fryer consists of the following main components:

- Main Unit with Digital Touch Screen Display
- Removable Frying Basket
- Non-stick Crisper Plate (inside the basket)
- Power Cord



ÉCRAN TACTILE LED

Facile à utiliser et à nettoyer, vous permettant de régler le temps et la température au toucher

Image: Detailed view of the digital touch screen, highlighting its user-friendly interface for setting time and temperature.

Panier Carré Cuisiner Plus

Plus d'espace, plus de nourriture, plus de saveur !



VS



Panier rond
2L TRADITIONNEL

Panier carré
2L CHEFREE

Image: Comparison illustrating the larger usable cooking area of the CHEFREE AF300's square basket compared to a traditional round 2L basket.

BEFORE FIRST USE

Before using your CHEFREE AF300 Air Fryer for the first time, please follow these steps:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the frying basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the main unit with a damp cloth. Do not immerse the main unit in water.
4. Ensure all parts are completely dry before use.

SETUP

Setting up your air fryer is quick and easy:

1. Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
2. Insert the crisper plate into the frying basket.
3. Slide the assembled frying basket back into the main unit until it clicks into place.
4. Plug the power cord into a grounded wall outlet. The digital display will illuminate.



CONCEPTION COMPACTE

Sa conception compacte le rend facile à ranger, à transporter et parfait pour les voyages

Image: The compact design of the CHEFREE AF300 Air Fryer, demonstrating its small footprint suitable for various kitchen spaces.

OPERATING INSTRUCTIONS

The CHEFREE AF300 offers a versatile 4-in-1 cooking experience. Follow these steps for general operation:

Basic Operation:

1. **Power On:** Press the power button () on the digital display.
2. **Preheat (Optional):** For best results, preheat the air fryer for 3-5 minutes at the desired cooking temperature.

3. **Load Food:** Carefully place your food into the frying basket. Do not overfill the basket to ensure even cooking.
4. **Set Temperature and Time:** Use the temperature (+ / -) and time (+ / -) controls on the digital display to adjust settings according to your recipe. The display shows temperature and time separately for easy monitoring.
5. **Start Cooking:** Press the start/pause button (▶) to begin cooking.
6. **Shake/Flip Food:** For even cooking, especially with smaller items, shake or flip the food halfway through the cooking process. The air fryer will pause automatically when the basket is removed.
7. **Cooking Complete:** The air fryer will beep when the cooking cycle is complete. Carefully remove the basket and transfer food to a serving dish.

4-in-1 Multifunction Modes:

The CHEFREE AF300 offers four primary cooking functions:

- **Air Fry:** Ideal for crispy foods like fries, chicken wings, and nuggets. Uses hot air circulation to achieve a fried texture with minimal to no oil.
- **Roast:** Perfect for roasting meats, vegetables, or even small whole chickens.
- **Bake:** Suitable for baking cakes, muffins, or other desserts.
- **Reheat:** Convenient for warming up leftovers while maintaining their texture.



AIR FRY

205°C / 15MIN



ROAST

180°C / 15MIN



BAKE

155°C / 20MIN



REHEAT

175°C / 5MIN



MULTIFONCTION 4 EN 1

Avec une seule friteuse sans huile, vous pouvez profiter d'une grande variété de fonctions

Image: Visual representation of the 4-in-1 multifunctionality, demonstrating the versatility for air frying, roasting, baking, and reheating various dishes.



90% D'HUILE EN MOINS

Profitez d'une variété de cuisines pour une expérience alimentaire plus saine

Image: The air fryer's ability to cook with up to 90% less oil, promoting healthier eating habits.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your CHEFREE AF300 Air Fryer.

Daily Cleaning:

1. Unplug the air fryer and allow it to cool completely before cleaning.
2. Remove the frying basket and crisper plate.
3. Wash the basket and crisper plate with hot water, dish soap, and a non-abrasive sponge. These parts are also **dishwasher safe**.
4. Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers.
5. Clean the interior of the main unit with a damp cloth, removing any food residue.



LAVABLE AU LAVE-VAISSELLE

Grâce au matériau antiadhésif, les accessoires de l'AF300 peuvent être lavés au lave-vaisselle

Image: The removable basket and crisper plate are dishwasher safe, simplifying the cleaning process.

Storage:

Store the air fryer in a cool, dry place when not in use. Ensure it is clean and dry before storage.

TROUBLESHOOTING

If you encounter any issues with your CHEFREE AF300 Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; basket not properly inserted.	Ensure the power cord is securely plugged into a working outlet. Check if the basket is fully pushed in until it clicks.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped.	Do not overfill the basket. Shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and crisper plate thoroughly after each use. For fatty foods, you can add a little water to the bottom of the outer pan to prevent smoke.
Food is not crispy.	Too much moisture; not enough oil (for certain foods); temperature too low.	Pat food dry before air frying. Lightly coat some foods with oil for crispiness. Increase temperature or cooking time slightly.

If the problem persists, please contact CHEFREE customer support.

SPECIFICATIONS

Technical specifications for the CHEFREE AF300 Air Fryer:

Feature	Detail
Model Number	AF300
Brand	CHEFREE
Capacity	2 Liters
Power	900 Watts
Voltage	220 Volts
Dimensions (L x W x H)	25.6 x 21.1 x 26.7 cm (10.08 x 8.31 x 10.51 inches)
Weight	2.3 Kilograms (5.07 lbs)
Material	Aluminum, Plastic (Polypropylene - PP)
Color	Dark Green
Special Features	Compact Design, Automatic Shut-off, Temperature Control, 4-in-1 Multifunction, LED Touch Screen, Dishwasher Safe Basket, Low Noise ($\leq 55\text{dB}$)



FAIBLE BRUIT DE 55 dB

Ne craignez pas que la cuisine perturbe votre repos et votre vie

Image: Illustration of the air fryer's low noise operation, rated at 55dB, ensuring a quiet cooking experience.


WARRANTY AND SUPPORT

Your CHEFREE AF300 Air Fryer comes with a **2-year warranty**. CHEFREE provides a dedicated 24-hour after-sales service team to assist you with any issues or questions.

For customer support, please refer to the contact information provided with your product packaging or visit the official CHEFREE website.

Additionally, explore a wide range of free recipes available online through the CHEFREE application to enhance your cooking experience.

Recettes en Ligne

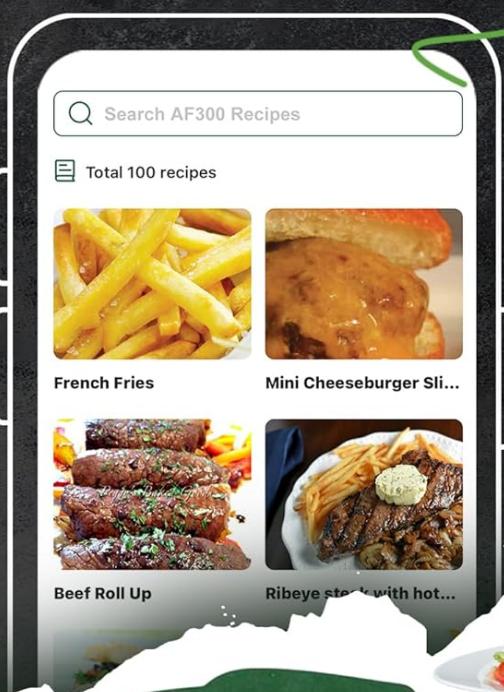

L'application Chefree propose 100 recettes gratuites en ligne, ce qui simplifie la cuisine et vous permet de préparer des repas de qualité


Image: The CHEFREE app offers a collection of 100 free online recipes, providing culinary inspiration and guidance.

© 2024 CHEFREE. All rights reserved.

Related Documents

 <p>USER MANUAL AIR FRYER Model AFW20</p> <p><small>PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.</small></p>	<p>Cheffree Air Fryer AFW20 User Manual</p> <p>Comprehensive user manual for the Cheffree AFW20 dual-basket air fryer, covering safety precautions, operation, cooking functions, and cleaning.</p>
 <p>USER MANUAL AIR FRYER Model AFW20</p> <p><small>PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.</small></p>	<p>Cheffree AFW20 User Manual: Your Guide to Dual Basket Air Frying</p> <p>Explore the Cheffree AFW20 User Manual for detailed instructions on using your dual basket air fryer. Learn about cooking programs, safety, cleaning, and maintenance for optimal results.</p>

Documents - CHEFREE – AF300

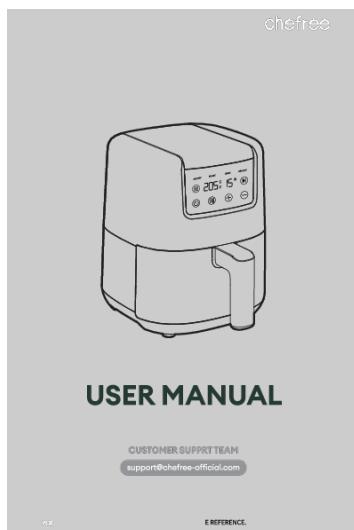

[\[pdf\]](#)

CHEFREE Friteuse à Air AF300 Cheffree FR V1 12 1 v 1729675994 cdn shopify s files 0898 1322 1722 |||

DE WICHTIGE SICHERHEITSHINWEISE Beachten Sie die grundlegenden

Sicherheitsvorkehrung ... t aufgeführt ist, wenden Sie sich an den Kundendienst. 21

AF300 Design Date: 2023-09-15 210*140mm / 64P / 200G 80G 4C V1.12 ...

lang:de score:33 filesize: 11.75 M page_count: 65 document date: 2023-09-15



[\[pdf\]](#)

CHEFFREE AF300 Air Fryer 2L Compact Design 4 in 1 Multicooker cheffree official V1 12 v 1706003254

cdn shopify s files 0612 6485 5180 |||

DE WICHTIGE SICHERHEITSHINWEISE Beachten Sie die grundlegenden Sicherheitsvorkehrung ... t aufgefhrt ist, wenden Sie sich an den Kundendienst. 21

AF300 Design Date: 2023-09-15 210*140mm / 64P / 200G 80G 4C V1.12 ...

lang:de score:32 filesize: 5.97 M page_count: 65 document date: 2024-01-23