

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Prechen](#) /

› [Prechen 10.1 inch Portable Touchscreen Monitor HD-101 User Manual](#)

Prechen HD-101

Prechen 10.1 inch Portable Touchscreen Monitor HD-101 User Manual

Model: HD-101 | Brand: Prechen

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Prechen 10.1 inch Portable Touchscreen Monitor, Model HD-101. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.

PRODUCT FEATURES

- **Portable Touchscreen:** This 10.1-inch monitor is compact and lightweight, designed for portability. The touchscreen functionality allows for intuitive navigation and interaction, enhancing productivity on the go.
- **High-Resolution IPS Display:** Features a 1920x1200 resolution with a 16:10 aspect ratio, delivering clear and vibrant visuals. IPS technology provides wide viewing angles and accurate color reproduction, suitable for various applications.
- **Versatile Connectivity:** Equipped with HDMI and USB-C ports, offering flexible connection options. It can be easily connected to Windows PCs, laptops, and gaming consoles like Xbox. Note: USB-C is for touch functionality and power.
- **Integrated Speakers:** Built-in speakers provide clear and dynamic audio, eliminating the need for external speakers during media consumption, gaming, or virtual meetings.
- **VESA Mount Compatible:** The monitor supports VESA mounting standards, allowing for attachment to compatible stands or arms for customized workspace setups and comfortable viewing angles.

SETUP

Package Contents

Verify that all items are present in the package:

- Prechen 10.1 inch Portable Touchscreen Monitor
- HDMI Cable
- USB-C to USB-C Cable
- USB-A to USB-C Cable (for power/touch)
- Power Adapter

- User Manual (this document)

Connecting the Monitor

1. **Power Connection:** Connect the provided power adapter to the DC Power Port on the monitor and plug it into a power outlet. Alternatively, if your device supports power delivery, connect a USB-C to USB-C cable to the USB-C (Power & Touch) port for both power and signal.
2. **Video Connection:**
 - **HDMI:** Connect one end of the HDMI cable to the HDMI port on the monitor and the other end to the HDMI output of your computer or device.
 - **USB-C (DisplayPort Alternate Mode):** If your device supports DisplayPort Alternate Mode over USB-C, connect a USB-C to USB-C cable to the USB-C (Power & Touch) port on the monitor and your device. This single cable can provide video, power, and touch functionality.
3. **Touch Functionality:** For touch functionality, ensure the USB-C (Power & Touch) port is connected to your device. If using HDMI for video, you will also need to connect a USB-A to USB-C cable from your device's USB-A port to the monitor's USB-C (Power & Touch) port.
4. **Audio Output:** If you wish to use external headphones or speakers, connect them to the 3.5mm Audio Port on the monitor.



Image: Overview of the monitor's ports including DC Power, USB-C (Power & Touch), 3.5mm Audio, HDMI, and control buttons.

OPERATING INSTRUCTIONS

Powering On/Off

- To power on the monitor, press the **ON/OFF** button.
- To power off, press and hold the **ON/OFF** button for a few seconds until the screen turns off.

Using the On-Screen Display (OSD) Menu

The OSD menu allows you to adjust various display settings.

1. Press the **Menu/OK** button to open the OSD menu.
2. Use the **Volume/Down** and **Brightness/Up** buttons to navigate through menu options.
3. Press **Menu/OK** to select an option or confirm a setting.
4. Press the **Signal Switch/Return** button to go back to the previous menu or exit the OSD.

Adjusting Display Modes

The monitor supports multiple display modes when connected to a computer:

- **Duplicate Mode:** Displays the same content on both your primary screen and the portable monitor.
- **Extend Mode:** Extends your desktop across both screens, providing more workspace.
- **Second Screen Mode:** Uses only the portable monitor as the display.

These modes are typically configured through your operating system's display settings (e.g., Windows Display Settings, macOS System Preferences).



Image: Visual representation of Duplicate, Second Screen, and Extend display modes.

Using Touchscreen Functionality

The monitor supports 10-point touchscreen technology. Ensure the USB-C (Power & Touch) port is correctly connected to your device for touch input to function.

10-POINT TOUCHSCREEN TECHNOLOGY

Productivity at the tip of your fingers



Touch



Enlarge



Narrow



Mobile



Whirligig



Two fingers



Image: Examples of 10-point touchscreen gestures for interaction.

MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth slightly dampened with water or a non-abrasive screen cleaner. Do not spray cleaner directly onto the screen.
- **Cleaning the Casing:** Wipe the monitor casing with a soft, dry cloth. Avoid using strong detergents or solvents.
- **Storage:** When not in use, store the monitor in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping or subjecting the monitor to strong impacts. Do not place heavy objects on top of the monitor.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No display/Black screen	No power Incorrect video input Cable not connected properly	Ensure power adapter is connected and outlet is active. Check if the correct input source (HDMI/USB-C) is selected in the OSD menu. Verify all video cables are securely connected.
Touchscreen not responding	USB-C cable not connected for touch Driver issue (Windows)	Ensure the USB-C (Power & Touch) port is connected to your device. If using HDMI for video, a separate USB-A to USB-C cable is required for touch. For Windows, ensure the touch driver is installed and updated.
No audio from speakers	Volume too low Incorrect audio output selected	Increase volume using the monitor's buttons or your device's settings. Ensure the monitor is selected as the audio output device on your computer.
Image quality issues (blurry, distorted)	Incorrect resolution Faulty cable	Set your device's display resolution to 1920x1200. Try a different HDMI or USB-C cable.

SPECIFICATIONS

Feature	Detail
Brand	Prechen
Model Number	HD-101
Screen Size	10.1 inches
Resolution	1920 x 1200 (UXGA Wide)
Aspect Ratio	16:10
Panel Type	IPS
Refresh Rate	60 Hz
Response Time	1 ms
Connectivity	1x HDMI, 1x USB-C (Power & Touch), 1x 3.5mm Audio Jack, 1x DC Power Port
Dimensions (L x W x H)	21.8 x 15.8 x 1.4 cm
Weight	990 grams
Manufacturer	Shenzhen Kenowa Electronics Co., LTD

1920*1200 Resolution 16:10

Breathtaking viewing quality & FHD 1200P

**1200P
FULL HD**



Other

Image: The monitor showcasing its 1920x1200 Full HD resolution.

Share the **Panoramic View**



Image: The monitor's IPS panel offering wide viewing angles and rich colors.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact Prechen customer service through their official website. Please have your model number (HD-101) and purchase details ready when contacting support.

